

# **Elmer Models Manual**

Peter Råback, Mika Malinen, Juha Ruokolainen,  
Antti Pursula, Thomas Zwinger, Eds.

CSC – IT Center for Science

April 3, 2013

# Elmer Models Manual

## About this document

The Elmer Models Manual is part of the documentation of Elmer finite element software. Elmer Models Manual is a selection of independent chapters describing different modules a.k.a. solvers of the ElmerSolver.

The modular structure of the manual reflects the modular architecture of the software where new models may be written without any changes in the main program. Each solver has a separate section for theory and keywords, and often also some additional information is given, for example on the limitations of the model. The Elmer Models Manual is best used as a reference manual rather than a concise introduction to the matter.

The present manual corresponds to Elmer software version 6.2. Latest documentations and program versions of Elmer are available (or links are provided) at <http://www.csc.fi/elmer>.

## Copyright information

The original copyright of this document belongs to CSC – IT Center for Science, Finland, 1995–2009. This document is licensed under the Creative Commons Attribution-No Derivative Works 3.0 License. To view a copy of this license, visit <http://creativecommons.org/licenses/by-nd/3.0/>.

Elmer program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version. Elmer software is distributed in the hope that it will be useful, but without any warranty. See the GNU General Public License for more details.

Elmer includes a number of libraries licensed also under free licensing schemes compatible with the GPL license. For their details see the copyright notices in the source files.

All information and specifications given in this document have been carefully prepared by the best efforts of CSC, and are believed to be true and accurate as of time writing. CSC assumes no responsibility or liability on any errors or inaccuracies in Elmer software or documentation. CSC reserves the right to modify Elmer software and documentation without notice.

# Contents

<b>Table of Contents</b>	<b>3</b>
<b>1 Heat Equation</b>	<b>10</b>
1.1 Introduction . . . . .	10
1.2 Theory . . . . .	10
1.3 Keywords . . . . .	12
<b>2 Navier-Stokes Equation</b>	<b>19</b>
2.1 Introduction . . . . .	19
2.2 Theory . . . . .	19
2.3 Keywords . . . . .	23
Bibliography . . . . .	28
<b>3 Advection-Diffusion Equation</b>	<b>29</b>
3.1 Introduction . . . . .	29
3.2 Theory . . . . .	29
3.3 Keywords . . . . .	31
<b>4 Advection-Reaction Equation</b>	<b>35</b>
4.1 Introduction . . . . .	35
4.2 Theory . . . . .	35
4.3 Keywords . . . . .	36
Bibliography . . . . .	38
<b>5 Linear Elasticity Solver</b>	<b>39</b>
5.1 Introduction . . . . .	39
5.2 Theory . . . . .	39
5.3 Keywords . . . . .	42
<b>6 Finite Elasticity</b>	<b>46</b>
6.1 Introduction . . . . .	46
6.2 Field equations . . . . .	46
6.3 Boundary conditions and linearization . . . . .	47
6.4 Stress and strain computation . . . . .	48
6.5 Keywords . . . . .	48
<b>7 Mesh Adaptation Solver</b>	<b>50</b>
7.1 Introduction . . . . .	50
7.2 Theory . . . . .	50
7.3 Keywords . . . . .	51
7.4 Examples . . . . .	52

<b>8</b>	<b>Elastic Linear Plate Solver</b>	<b>53</b>
8.1	Introduction . . . . .	53
8.2	Finite element implementation . . . . .	55
8.3	Elastic parameters for perforated plates . . . . .	55
8.4	Keywords . . . . .	56
	Bibliography . . . . .	57
<b>9</b>	<b>Helmholtz Solver</b>	<b>59</b>
9.1	Introduction . . . . .	59
9.2	Theory . . . . .	59
9.3	Keywords . . . . .	60
<b>10</b>	<b>The linearized Navier–Stokes equations in the frequency domain</b>	<b>63</b>
10.1	Introduction . . . . .	63
10.2	Mathematical model . . . . .	63
10.3	The use of block preconditioning . . . . .	66
10.4	Utilities . . . . .	67
10.5	Keywords . . . . .	68
	Bibliography . . . . .	71
<b>11</b>	<b>Large-amplitude wave motion in air</b>	<b>72</b>
11.1	Introduction . . . . .	72
11.2	Mathematical model . . . . .	72
11.3	Keywords . . . . .	73
<b>12</b>	<b>Electrostatics</b>	<b>75</b>
12.1	Introduction . . . . .	75
12.2	Theory . . . . .	75
12.3	Notes on output control . . . . .	77
12.4	Keywords . . . . .	77
<b>13</b>	<b>Static Current Conduction</b>	<b>79</b>
13.1	Introduction . . . . .	79
13.2	Theory . . . . .	79
13.3	Note on output control . . . . .	80
13.4	Keywords . . . . .	80
<b>14</b>	<b>Computation of Magnetic Fields with Whitney Elements</b>	<b>82</b>
14.1	Introduction . . . . .	82
14.2	Theory . . . . .	82
14.3	Keywords . . . . .	84
<b>15</b>	<b>Computation of Magnetic Fields in 2D</b>	<b>89</b>
15.1	Introduction . . . . .	89
15.2	Theory . . . . .	89
15.3	Keywords . . . . .	89
<b>16</b>	<b>Magnetostatics</b>	<b>92</b>
16.1	Introduction . . . . .	92
16.2	Theory . . . . .	92
16.3	Keywords . . . . .	93
<b>17</b>	<b>Magnetic Induction Equation</b>	<b>96</b>
17.1	Introduction . . . . .	96
17.2	Theory . . . . .	96
17.3	Keywords . . . . .	97

<b>18 Electrokinetics</b>	<b>100</b>
18.1 Introduction . . . . .	100
18.2 Theory . . . . .	100
18.3 Limitations . . . . .	102
18.4 Keywords . . . . .	102
Bibliography . . . . .	103
<b>19 Reduced Dimensional Electrostatics</b>	<b>104</b>
19.1 Introduction . . . . .	104
19.2 Theory . . . . .	104
19.3 Implementation issues . . . . .	106
19.4 Keywords . . . . .	106
<b>20 Poisson-Boltzmann Equation</b>	<b>108</b>
20.1 Introduction . . . . .	108
20.2 Theory . . . . .	108
20.3 Notes on output control . . . . .	110
20.4 Keywords . . . . .	110
Bibliography . . . . .	111
<b>21 Reynolds Equation for Thin Film Flow</b>	<b>112</b>
21.1 Introduction . . . . .	112
21.2 Theory . . . . .	112
21.3 Keywords . . . . .	115
Bibliography . . . . .	117
<b>22 Richards equation for variably saturated porous flow</b>	<b>118</b>
22.1 Introduction . . . . .	118
22.2 Theory . . . . .	118
22.3 Implementation issues . . . . .	119
22.4 Keywords . . . . .	119
<b>23 BEM Solver for Poisson Equation</b>	<b>122</b>
23.1 Introduction . . . . .	122
23.2 Theory . . . . .	122
23.3 Keywords . . . . .	123
<b>24 BEM Solver for Helmholtz Equation</b>	<b>125</b>
24.1 Introduction . . . . .	125
24.2 Theory . . . . .	125
24.3 Keywords . . . . .	126
<b>25 Kinematic Free Surface Equation with Limiters</b>	<b>128</b>
25.1 Introduction . . . . .	128
25.2 Theory . . . . .	128
25.3 Constraints . . . . .	129
25.4 Keywords . . . . .	130
<b>26 Free Surface with Constant Flux</b>	<b>132</b>
26.1 Introduction . . . . .	132
26.2 Theory . . . . .	132
26.3 Applicable cases and limitations . . . . .	133
26.4 Keywords . . . . .	133

<b>27 Transient Phase Change Solver</b>	<b>135</b>
27.1 Introduction . . . . .	135
27.2 Theory . . . . .	135
27.3 Applicable cases and limitations . . . . .	136
27.4 Keywords . . . . .	136
<b>28 Steady State Phase Change Solver</b>	<b>139</b>
28.1 Introduction . . . . .	139
28.2 Theory . . . . .	139
28.3 Applicable cases and limitations . . . . .	140
28.4 Keywords . . . . .	141
<b>29 Particle Dynamics</b>	<b>143</b>
29.1 Introduction . . . . .	143
29.2 Theory . . . . .	144
29.3 Keywords . . . . .	146
<b>30 Semi-Lagrangian advection using particle tracking</b>	<b>151</b>
30.1 Introduction . . . . .	151
30.2 Theory . . . . .	151
30.3 Keywords . . . . .	152
<b>31 Data to field solver</b>	<b>154</b>
31.1 Introduction . . . . .	154
31.2 Theory . . . . .	154
31.3 Keywords . . . . .	155
<b>32 Level-Set Method</b>	<b>157</b>
32.1 Introduction . . . . .	157
32.2 Theory . . . . .	157
32.3 Keywords . . . . .	159
<b>33 Density Functional Theory</b>	<b>163</b>
33.1 Introduction . . . . .	163
33.2 Theory . . . . .	163
33.3 Keywords . . . . .	164
Bibliography . . . . .	166
<b>34 System Reduction for Displacement Solvers</b>	<b>167</b>
34.1 Introduction . . . . .	167
34.2 Theory . . . . .	167
34.3 Applicable cases and limitations . . . . .	168
34.4 Keywords . . . . .	168
34.5 Examples . . . . .	169
<b>35 Artificial Compressibility for FSI</b>	<b>171</b>
35.1 Introduction . . . . .	171
35.2 Theory . . . . .	171
35.3 Keywords . . . . .	174
Bibliography . . . . .	175

<b>36 Rotational form of the incompressible Navier–Stokes equations</b>	<b>177</b>
36.1 Introduction . . . . .	177
36.2 Field equations . . . . .	177
36.3 Boundary conditions . . . . .	178
36.4 Linearization . . . . .	178
36.5 Discretization aspects . . . . .	179
36.6 Utilizing splitting strategies by preconditioning . . . . .	179
36.7 Restrictions . . . . .	180
36.8 Keywords . . . . .	180
<b>37 Nonphysical Mesh Adaptation Solver</b>	<b>183</b>
37.1 Introduction . . . . .	183
37.2 Theory . . . . .	183
37.3 Keywords . . . . .	183
<b>38 Rigid Mesh Transformation</b>	<b>185</b>
38.1 Introduction . . . . .	185
38.2 Theory . . . . .	185
38.3 Keywords . . . . .	186
<b>39 Linear Constraints</b>	<b>187</b>
39.1 Introduction . . . . .	187
39.2 Theory . . . . .	187
39.3 Limitations . . . . .	187
39.4 Keywords . . . . .	188
Bibliography . . . . .	188
<b>40 Outlet Boundary Condition for Arterial Flow Simulations</b>	<b>189</b>
40.1 Introduction . . . . .	189
40.2 Theory . . . . .	189
40.3 Keywords . . . . .	190
Bibliography . . . . .	192
<b>41 Streamline Computation</b>	<b>193</b>
41.1 Introduction . . . . .	193
41.2 Theory . . . . .	193
41.3 Limitations . . . . .	194
41.4 Keywords . . . . .	194
41.5 Example . . . . .	195
<b>42 Flux Computation</b>	<b>196</b>
42.1 Introduction . . . . .	196
42.2 Theory . . . . .	196
42.3 Implementation issues . . . . .	196
42.4 Keywords . . . . .	197
42.5 Example . . . . .	198
<b>43 Vorticity Computation</b>	<b>199</b>
43.1 Introduction . . . . .	199
43.2 Theory . . . . .	199
43.3 Keywords . . . . .	199
43.4 Example . . . . .	200

<b>44 Divergence Computation</b>	<b>201</b>
44.1 Introduction . . . . .	201
44.2 Theory . . . . .	201
44.3 Keywords . . . . .	201
<b>45 Scalar Potential Resulting to a Given Flux</b>	<b>203</b>
45.1 Introduction . . . . .	203
45.2 Theory . . . . .	203
45.3 Keywords . . . . .	203
<b>46 Fluidic Force</b>	<b>205</b>
46.1 Introduction . . . . .	205
46.2 Theory . . . . .	205
46.3 Additional output . . . . .	206
46.4 Keywords . . . . .	206
<b>47 Electrostatic force</b>	<b>207</b>
47.1 Introduction . . . . .	207
47.2 Theory . . . . .	207
47.3 Keywords . . . . .	207
Bibliography . . . . .	208
<b>48 Saving scalar values to file</b>	<b>209</b>
48.1 Introduction . . . . .	209
48.2 Theory . . . . .	209
48.3 Implementation issues . . . . .	210
48.4 Keywords . . . . .	210
48.5 Examples . . . . .	212
<b>49 Saving lines to file</b>	<b>214</b>
49.1 Introduction . . . . .	214
49.2 Theory . . . . .	214
49.3 Keywords . . . . .	214
49.4 Examples . . . . .	215
<b>50 Saving material parameters and boundary conditions</b>	<b>217</b>
50.1 Introduction . . . . .	217
50.2 Keywords . . . . .	217
<b>51 Result output in different formats</b>	<b>219</b>
51.1 Introduction . . . . .	219
51.2 Keywords . . . . .	219
51.3 Example . . . . .	220
<b>52 Parallel I/O using HDF5 library</b>	<b>222</b>
52.1 Introduction . . . . .	222
52.2 Keywords . . . . .	222
52.3 Example . . . . .	223
<b>53 Saving data on uniform cartesian grid</b>	<b>224</b>
53.1 Introduction . . . . .	224
53.2 Keywords . . . . .	224
53.3 Example . . . . .	225



<b>54 Isosurface extraction for reduced output</b>	<b>227</b>
54.1 Introduction . . . . .	227
54.2 Keywords . . . . .	227
54.3 Example . . . . .	228
<b>55 Reload Existing Simulation Results</b>	<b>229</b>
55.1 Introduction . . . . .	229
55.2 Keywords . . . . .	229
<b>56 Runtime Control of the Input Data</b>	<b>231</b>
56.1 Introduction . . . . .	231
56.2 Limitations . . . . .	231
56.3 Keywords . . . . .	231
<b>57 Reading NetCDF data into FE mesh</b>	<b>232</b>
57.1 Introduction . . . . .	232
57.2 Theory . . . . .	232
57.3 Keywords . . . . .	233
<b>58 Filtering Time-Series Data</b>	<b>235</b>
58.1 Introduction . . . . .	235
58.2 Theory . . . . .	235
58.3 Keywords . . . . .	236
<b>59 Projection to plane</b>	<b>238</b>
59.1 Introduction . . . . .	238
59.2 Theory . . . . .	238
59.3 Keywords . . . . .	239
<b>60 Structured projection to plane</b>	<b>240</b>
60.1 Introduction . . . . .	240
60.2 Theory . . . . .	240
60.3 Keywords . . . . .	240
<b>61 Structured mesh mapper</b>	<b>242</b>
61.1 Introduction . . . . .	242
61.2 Theory . . . . .	242
61.3 Keywords . . . . .	242
<b>62 Internal cost function optimization</b>	<b>244</b>
62.1 Introduction . . . . .	244
62.2 Theory . . . . .	244
62.3 Keywords . . . . .	244
<b>Index</b>	<b>247</b>

# Model 1

## Heat Equation

**Module name:** HeatSolve

**Module subroutines:** HeatSolver

**Module authors:** Juha Ruokolainen, Peter Råback, Matthias Zenker

**Document authors:** Juha Ruokolainen, Ville Savolainen, Peter Råback

**Document edited:** July 29th 2002

### 1.1 Introduction

Heat equation results from the requirement of energy conservation. In addition the Fourier's law is used to model the heat conduction. The linearity of the equation may be ruined by temperature dependent thermal conductivity, or by heat radiation.

### 1.2 Theory

#### 1.2.1 Governing Equations

The incompressible heat equation is expressed as

$$\rho c_p \left( \frac{\partial T}{\partial t} + (\vec{u} \cdot \nabla) T \right) - \nabla \cdot (k \nabla T) = \bar{\bar{\tau}} : \bar{\bar{\varepsilon}} + \rho h, \quad (1.1)$$

where  $\rho$  is the density,  $c_p$  the heat capacity at constant pressure,  $T$  the temperature,  $\vec{u}$  the convection velocity,  $k$  the heat conductivity and  $h$  is source of heat. The term  $\bar{\bar{\tau}} : \bar{\bar{\varepsilon}}$  is the frictional viscous heating, which is negligible in most cases. For Newtonian fluids, the viscous part of the stress tensor is

$$\bar{\bar{\tau}} = 2\mu\bar{\bar{\varepsilon}}, \quad (1.2)$$

where  $\bar{\bar{\varepsilon}}$  the linearized strain rate tensor.

Eq.1.1 applies also for solids, setting  $\vec{u} = 0$ . For solids, conduction may be anisotropic and the conductivity a tensor.

For compressible fluids, the heat equation is written as

$$\rho c_v \left( \frac{\partial T}{\partial t} + \vec{u} \cdot \nabla T \right) - \nabla \cdot (k \nabla T) = -p \nabla \cdot \vec{u} + \bar{\bar{\tau}} : \bar{\bar{\varepsilon}} + \rho h, \quad (1.3)$$

where  $c_v$  is the heat capacity at constant volume. The density needs to be calculated from the equation of state, e.g., perfect gas law. More information is given in the chapter describing the Navier-Stokes equation.

The Elmer heat equation module is capable of simulation heat transfer by conduction, convection, and diffuse gray radiation. Also a phase change model is included. Couplings to other modules include, convection by fluid flow, frictional heating (modules providing flow fields), and resistive heating (modules providing magnetic and/or electric fields).

### 1.2.2 Arbitrary Lagrangian-Eulerian (ALE) coordinates

For problems involving a deforming mesh the transient heat equation must be solved using Arbitrary Lagrangian-Eulerian (ALE) frame of reference. Assume that the mesh velocity is  $\vec{c}$ . Then the convective term yields

$$\rho c_p ((\vec{u} - \vec{c}) \cdot \nabla) T \quad (1.4)$$

### 1.2.3 Phase Change Model

Elmer has an internal fixed grid phase change model. Modelling phase change is done by modifying the definition of heat capacity according to whether a point in space is in solid or liquid phase or in a 'mushy' region. The choice of heat capacity within the intervals is explained in detail below.

This type of algorithm is only applicable, when the phase change occurs within finite temperature interval. If the modelled material is such that the phase change occurs within very sharp temperature interval, this method might not be appropriate.

For the solidification phase change model Elmer uses, we need enthalpy. The enthalpy is defined to be

$$H(T) = \int_0^T \left( \rho c_p + \rho L \frac{\partial f}{\partial \lambda} \right) d\lambda, \quad (1.5)$$

where  $f(T)$  is the fraction of liquid material as a function of temperature, and  $L$  is the latent heat. The enthalpy-temperature curve is used to compute an effective heat capacity, whereupon the equations become identical to the heat equation. There are two ways of computing the effective heat capacity in Elmer:

$$c_{p,\text{eff}} = \frac{\partial H}{\partial T}, \quad (1.6)$$

and

$$c_{p,\text{eff}} = \left( \frac{\nabla H \cdot \nabla H}{\nabla T \cdot \nabla T} \right)^{1/2}. \quad (1.7)$$

The former method is used only if the local temperature gradient is very small, while the latter is the preferred method. In transient simulations a third method is used, given by

$$c_{p,\text{eff}} = \frac{\partial H / \partial t}{\partial T / \partial t}. \quad (1.8)$$

### 1.2.4 Additional Heat Sources

Frictional heating is calculated currently, for both incompressible and compressible fluids, by the heat source

$$h_f = 2\mu \bar{\epsilon} : \bar{\epsilon}. \quad (1.9)$$

In case there are currents in the media the also the the resistive heating may need to be considered. The Joule heating is then given by

$$h_m = \frac{1}{\sigma} \vec{J} \cdot \vec{J}. \quad (1.10)$$

In the above equations,  $\vec{B}$  and  $\vec{E}$  are the magnetic and electric fields, respectively. The current density  $\vec{J}$  is defined as

$$\vec{J} = \sigma(\vec{E} + \vec{u} \times \vec{B}). \quad (1.11)$$

In modeling biological tissue perfused with blood acting as heat sink an additional heat source term of the Pennes' Bioheat equation is needed. The term is

$$h_b = c_b \rho_b w (T_b - T) \quad (1.12)$$

where  $c_b$  is the specific heat capacity,  $\rho_b$  the density, and  $T_b$  the temperature of the blood. The perfusion rate  $w$  is the volume of blood flowing through a unit volume of tissue per second. This additional source term is modeled so that the part including  $T$  is treated implicitly for better convergence. Even though the model was written for the biological application in mind the additional heat source may find also other uses.

### 1.2.5 Boundary Conditions

For temperature one can apply boundary conditions and have either temperature or heat flux prescribed.

Dirichlet boundary condition (temperature is prescribed) reads as

$$T = T_b. \quad (1.13)$$

The value of  $T_b$  can be constant or a function of time, position or other variables.

Heat flux depending on heat transfer coefficient  $\alpha$  and external temperature  $T_{\text{ext}}$  may be written as

$$-k \frac{\partial T}{\partial n} = \alpha(T - T_{\text{ext}}). \quad (1.14)$$

Both variables  $\alpha$  and  $T_{\text{ext}}$  can be constant or functions of time, position or other variables. If the heat transfer coefficient  $\alpha$  is equal to zero, it means that the heat flux on a boundary is identically zero. The Neumann boundary condition  $-k\partial T/\partial n = 0$  is also used in a symmetry axis in 2D, axisymmetric or cylindrical problems.

Heat flux can consist of idealized radiation whereupon

$$-k \frac{\partial T}{\partial n} = \sigma \varepsilon (T^4 - T_{\text{ext}}^4). \quad (1.15)$$

Above,  $\sigma$  is the Stefan-Boltzmann constant and  $\varepsilon$  the surface emissivity. The emissivity and the external temperature can again be constant or functions of time, position, or other variables.

If the surface  $k$  is receiving radiation from other surfaces in the system, then the heat flux reads as

$$-k_k \frac{\partial T_k}{\partial n_k} = \sigma \varepsilon_k (T_k^4 - \frac{1}{A_k \varepsilon_k} \sum_{i=1}^N G_{ik} \varepsilon_i T_i^4 A_i), \quad (1.16)$$

where the subscripts  $i$  and  $k$  refer to surfaces  $i$  and  $k$ , and the parameters  $A_i$  and  $A_k$  to the specific surface areas. The factors  $G_{ik}$  are Gebhardt factors, and  $N$  represents the total number of radiating surfaces present in the system. Emissivities are assumed to be constant on each surface.

The heat equation is nonlinear when radiation is modelled. The nonlinear term in the boundary condition (1.15) can be linearized as

$$T^4 - T_{\text{ext}}^4 \approx (\mathcal{T}^3 + T_{\text{ext}} \mathcal{T}^2 + T_{\text{ext}}^2 \mathcal{T} + T_{\text{ext}}^3)(T - T_{\text{ext}}), \quad (1.17)$$

where  $\mathcal{T}$  is the temperature from the previous iteration.

One may also give an additional heat flux term as

$$-k \frac{\partial T}{\partial n} = q. \quad (1.18)$$

## 1.3 Keywords

Constants

Stefan Boltzmann `Real`

The value of the Stefan-Boltzmann constant needed for thermal radiation.

Simulation

The simulation section gives the case control data:

Simulation Type `String`

Heat equation may be either Transient or Steady State.

Coordinate System `String`

Defines the coordinate system to be used, one of: Cartesian 1D, Cartesian 2D, Cartesian 3D, Polar 2D, Polar 3D, Cylindric, Cylindric Symmetric and Axi Symmetric.

`Timestepping Method String`

Possible values of this parameter are Newmark (an additional parameter `Newmark Beta` must be given), BDF (BDF `Order` must be given). Also as a shortcut to Newmark-method with values of `Beta`= 0.0, 0.5, 1.0 the keywords `Explicit Euler`, `Crank-Nicolson`, and `Implicit Euler` may be given respectively. The recommended choice for the first order time integration is the BDF method of order 2.

`BDF Order Integer`

Value may range from 1 to 5.

`Newmark Beta Real`

Value in range from 0.0 to 1.0. The value 0.0 equals to the explicit Euler integration method and the value 1.0 equals to the implicit Euler method.

`Solver solver id`

The solver section defines equation solver control variables. Most of the possible keywords – related to linear algebra, for example – are common for all the solvers and are explained elsewhere.

`Equation String Heat Equation`

The name of the equation.

`Nonlinear System Convergence Tolerance Real`

The criterion to terminate the nonlinear iteration after the relative change of the norm of the field variable between two consecutive iterations is small enough

$$||T_i - T_{i-1}|| < \epsilon ||T_i||,$$

where  $\epsilon$  is the value given with this keyword.

`Nonlinear System Max Iterations Integer`

The maximum number of nonlinear iterations the solver is allowed to do.

`Nonlinear System Newton After Iterations Integer`

Change the nonlinear solver type to Newton iteration after a number of Picard iterations have been performed. If a given convergence tolerance between two iterations is met before the iteration count is met, it will switch the iteration type instead. In the heat equation the Picard iterations means that the radiation term is factorized to linear and third-power terms.

`Nonlinear System Newton After Tolerance Real`

Change the nonlinear solver type to Newton iteration, if the relative change of the norm of the field variable meets a tolerance criterion:

$$||T_i - T_{i-1}|| < \epsilon ||T_i||,$$

where  $\epsilon$  is the value given with this keyword.

`Nonlinear System Relaxation Factor Real`

Giving this keyword triggers the use of relaxation in the nonlinear equation solver. Using a factor below unity is sometimes required to achieve convergence of the nonlinear system. A factor above unity might speed up the convergence. Relaxed variable is defined as follows:

$$T'_i = \lambda T_i + (1 - \lambda) T_{i-1},$$

where  $\lambda$  is the factor given with this keyword. The default value for the relaxation factor is unity.

`Steady State Convergence Tolerance Real`

With this keyword a equation specific steady state or coupled system convergence tolerance is given. All the active equation solvers must meet their own tolerances before the whole system is deemed converged. The tolerance criterion is:

$$||T_i - T_{i-1}|| < \epsilon ||T_i||,$$

where  $\epsilon$  is the value given with this keyword.

**Stabilize** Logical

If this flag is set true the solver will use stabilized finite element method when solving the heat equation with a convection term. If this flag is set to `False` RFB (Residual Free Bubble) stabilization is used instead (unless the next flag `Bubbles` is set to `False` in a problem with Cartesian coordinate system). If convection dominates stabilization must be used in order to successfully solve the equation. The default value is `False`.

**Bubbles** Logical

There is also a residual-free-bubbles formulation of the stabilized finite-element method. It is more accurate and does not include any ad hoc terms. However, it may be computationally more expensive. The default value is `True`. If both `Stabilize` and `Bubbles` or set to `False`, no stabilization is used. Note that in this case, the results might easily be nonsensical.

**Smart Heater Control After Tolerance** Real

The smart heater control should not be activated before the solution has somewhat settled. By default the smart heater control is set on when the Newtonian linearization is switched on for the temperature equation. Sometimes it may be useful to have more stringent condition for turning on the smart heater control and then this keyword may be used to give the tolerance.

**Apply Limiter** Logical

The generic soft limiters may be applied for the heat equation equation. They could for example, account for the effects of phase change under circumstances where it may be assumed that the temperature does not go over the phase change temperature. With this flag active the minimum and maximum limiters are accounted.

In some cases the geometry or the emissivities of the radiation boundaries change. This may require the recomputation of the view factors and Gebhardt factors. For that purpose also dynamic computation of the factors is enabled and it is controlled by the keywords below. The radiation factors are also automatically computed if no files for the factors are given although radiation boundaries exist.

**Update View Factors** Logical

The recomputation of the view factors is activated by setting the value of this flag to `True`. `False` is the default.

**Update Gebhardt Factors** Logical

If the emissivities depend on the solution the Gebhardt factors may need to be recomputed. This is activated by setting giving this flag value `True`. `False` is the default.

**Minimum View Factor** Real

This keyword determines the cut-off value under which the view factors are omitted. Neglecting small values will not only save memory but also will make the matrix used for solving the Gebhardt factors less dense. This consequently will enable more efficient sparse matrix strategies in solving the Gebhardt factors. The value for this parameter might be of the order  $10^{-8}$ .

**Minimum Gebhardt Factor** Real

The Gebhardt factors make part of matrix dense. By neglecting the smallest Gebhardt factors the matrix structure for the heat equation may become significantly sparser and thus the solution time may drop. The value for this parameter might also be of the order  $10^{-8}$ .

**Implicit Gebhardt Factor Fraction** Real

In computing heat transfer problems with radiation in an implicit manner the matrix structure becomes partially filled. This affects the performance of the linear equation solvers and also increases the memory requirements. On the other hand explicit treatment of radiation slows down the convergence significantly. This keyword allows that the largest Gebhardt factors are treated in an implicit manner whereas the smallest are treated explicitly. The value should lie in between zero (fully explicit) and one (fully implicit).

**Matrix Topology Fixed** Logical

If the Gebhardt factors change the matrix structure of the heat equation may also have to be changed unless this flag is set to `False`. Then all factors that do not combine with the matrix structure are omitted.

View Factors Geometry Tolerance Real

The view factors take a lot of time to compute. Therefore during the iteration a test is performed to check whether the geometry has changed. If the relative maximum change in the coordinate values is less than the value given by this parameter the view factors are not recomputed and the old values are used.

View Factors Fixed After Iterations Integer

Sometimes the iteration changes the geometry of the radiation boundaries as an unwanted side-effect. Then the geometry on the radiation boundary may be set fixed after some iterations. In practice this is done by adding suitable Dirichlet conditions in the boundary conditions.

Gebhardt Factors Fixed After Iterations Integer

Sometimes the emissivity depends on temperature but recomputing it every time may be costly. By this keyword the recomputation may be limited to the given number of visits to the heat equation solver.

View Factors Fixed Tolerance Real

This keywords defines the coupled system tolerance for the heat equation after which the recomputation of view factors is omitted. Typically this should be defined by a geometry tolerance but if the temperature solver follows the changes in geometry this may be a good control as well.

Gebhardt Factors Fixed Tolerance Real

This keywords defines the coupled system tolerance for the heat equation after which the recomputation of Gebhardt factors is omitted. The temperature dependence of emissivity is typically not so strong that small temperature changes would result to a need to recompute the Gebhardt factors as well.

Gebhardt Factors Solver Full Logical

If the view factor matrix is relatively sparse it will make sense to use a sparse matrix equation for solving the Gebhardt factors. This flag may be used if a full matrix should be desired.

Gebhardt Factors Solver Iterative Logical

If the Gebhardt factors are solved from a sparse matrix equation also the type of solver may be selected. The default is direct umfpack solver. Sometimes the memory usage may be a problem or the direct strategy simply not efficient enough. Then an iterative cgs solver may be used instead.

Viewfactor Divide Integer

For axisymmetric view factor computation gives the number of divisions for each element. The default is 1.

Viewfactor Combine Elements Logical

There may be a significant amount of saved time if in the axisymmetric view factor computation the elements that are aligned and share a common node are united. The shadowing loop will then only be performed over these macroelements.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies.

Heat Equation String

If set to True, solve the heat equation.

Convection String

The type of convection to be used in the heat equation, one of: None, Computed, Constant.

Phase Change Model String

One of: None, Spatial 1, Spatial 2 and Temporal. Note that when solidification is modelled, the enthalpy-temperature- and viscosity-temperature-curves must be defined in the material section.

Body Forces bf id

The body force section may be used to give additional force terms for the equations. The following keywords are recognized by the base solver:

**Heat Source Real**

A heat source  $h$  for the heat equation may be given with this keyword. Note that by default the heating is given per unit mass, not unit volume.

**Friction Heat Logical**

Currently redundant keyword, the frictional heating  $h_f$  is automatically added.

**Joule Heat Logical**

If set True, triggers use of the electromagnetic heating. This keyword accounts for the heating of many different solvers; electrostatics, magnetostatics, and induction equation.

**Smart Heater Control Logical**

Sometimes the prescribed heat source does not lead to the desired temperature. Often the temperature is controlled by a feedback and therefore a similar heater control in the simulation may give more realistic results. This flag makes sets the smart heater control on for the given body force.

**Integral Heat Source Real**

This keyword activates a normalization of the Heat Source so that the integral heating power is the desired objective.

**Temperature Lower Limit Real**

The lower limit for temperature that is enforced iteratively when the soft limiters are applied.

**Temperature Upper Limit Real**

The upper limit for temperature that is enforced iteratively when the soft limiters are applied.

There are four optional keywords related to the Pennes' bioheat equation term that model the perfusion process.

**Perfusion Rate Real**

The rate of the perfusion  $w$ . Activates the perfusion process.

**Perfusion Reference Temperature Real**

Temperature  $T_b$  of the perfusion fluid.

**Perfusion Density Real**

Density  $\rho_b$  of the perfusion fluid.

**Perfusion Heat Capacity Real**

Heat capacity  $c_b$  of the perfusion fluid.

**Initial Condition ic id**

The initial condition section may be used to set initial values for temperature.

**Temperature Real****Material mat id**

The material section is used to give the material parameter values. The following material parameters may be effective when heat equation is solved.

**Density Real**

The value of density is given with this keyword. The value may be constant, or variable. For the compressible flow, the density is computed internally, and this keyword has no effect.

**Enthalpy Real**

Note that, when using the solidification modelling, an enthalpy-temperature curve must be given. The enthalpy is derived with respect to temperature to get the value of the effective heat capacity.

**Viscosity Real**

Viscosity is needed if viscous heating is taken into account. When using the solidification modelling, a viscosity-temperature curve must be given. The viscosity must be set to high enough value in the temperature range for solid material to effectively set the velocity to zero.



**Heat Capacity** Real

The value of heat capacity in constant pressure  $c_p$  is given with this keyword. The value may be constant, or variable. For the phase change model, this value is modified according to rules given in the theory section.

**Heat Conductivity** Real

The value of heat conductivity  $k$  is given with this keyword. The value may be a constant or variable.

**Convection Velocity** i Real

Convection velocity  $i=1, 2, 3$  for the constant convection model.

**Compressibility Model** Real

This setting may be used to set the compressibility model for the flow simulations. Choices are Incompressible and Perfect Gas. If set to the latter there may be mechanical work performed by the heating. Then also the settings Reference Pressure and Specific Heat Ratio must also be given.

**Reference Pressure** Real

With this keyword a reference level of pressure may be given.

**Specific Heat Ratio** Real

The ratio of specific heats (in constant pressure versus in constant volume) may be given with this keyword. The default value of this setting is  $5/3$ , which is the appropriate value for monoatomic ideal gas.

**Emissivity** Real

Emissivity of the radiating surface, required for radiation model is present. If the emissivity is not found in the radiating boundary only then will it be looked at the material properties of the parent elements. Often locating the emissivity here makes the case definition more simple.

**Transmissivity** Real

For the diffuse gray radiation model also transmissivity of the surface may be provided. It gives the part of the energy that is lost as it passes through the wall. By default transmissivity is zero.

**Boundary Condition** bc id

The boundary condition section holds the parameter values for various boundary condition types. In heat equation we may set the temperature directly by Dirichlet boundary conditions or use different flux conditions for the temperature. The natural boundary condition of heat equation is zero flux condition.

**Temperature** Real**Heat Flux BC** Logical

Must be set to True, if heat flux boundary condition is present.

**Heat Flux** Real

A user defined heat flux term.

**Heat Transfer Coefficient** Real

Defines the parameter  $\alpha$  in the heat flux boundary condition of the type

$$-k \frac{\partial T}{\partial n} = \alpha(T - T_{ext}).$$

**External Temperature** Real

Defines the variable for ambient temperature  $T_{ext}$  in the previous equation.

**Radiation** String

The type of radiation model for this boundary, one of: None, Idealized, Diffuse Gray. Note that, when using the diffuse gray radiation model, the file containing the Gebhardt factors must be given in the simulation section.

**Radiation Boundary Integer**

If there are many closures with radiation boundary conditions that do not see each other the view factors may be computed separately. This keyword is used to group the boundaries to independent sets. The default is one.

**Radiation Boundary Open Logical**

The closures may be partially open. Then no normalization of the view factors is enforced. The missing part of the radiation angle is assumed to be ideal radiation. Therefore if this option is enforced also the parameter **External Temperature** must be given.

**Radiation External Temperature Real**

In case the external temperature related to the heat transfer coefficient is different than that related to the radiation they cannot be given with the same keyword. For this purpose an alternative keyword is provided for radiation problems. This is used instead if it present.

**Emissivity Real**

Emissivity of the radiating surface, required for radiation model is present. If the emissivity is not found here it will be searched at the parent elements.

**Transmissivity Real**

If the transmissivity is not found here it will be searched at the parent elements.

**Radiation Target Body Integer**

This flag may be used to set the direction of the outward pointing normal. This is used when computing viewfactors. A body identification number must be given. The default is that the normal points to less dense material or outward on outer boundaries.

**Smart Heater Boundary Logical** If the smart heater is activated the point for monitoring the temperature is the point with maximum  $x$ -coordinate on the boundary where this keyword is set **True**. Alternatively the logical variable **Phase Change** is looked for.

**Smart Heater Temperature Real** The desired temperature for the smart heater system is set by this keyword. Alternatively the real variable **Melting Point** may be used.

## Model 2

# Navier-Stokes Equation

**Module name:** FlowSolve

**Module subroutines:** FlowSolver

**Module authors:** Juha Ruokolainen

**Document authors:** Juha Ruokolainen, Peter Råback

**Document created:** 2002

**Document edited:** 18.5.2011

## 2.1 Introduction

In solid and liquid materials heat transfer and viscous fluid flow are governed by heat and Navier-Stokes equations, which can be derived from the basic principles of conservation of mass, momentum and energy. Fluid can be either Newtonian or non-Newtonian. In the latter case the consideration in Elmer is limited to purely viscous behaviour with the power-law model.

In the following we present the governing equations of fluid flow, heat transfer and stresses in elastic material applied in Elmer. Also the most usual boundary conditions applied in computations are described.

## 2.2 Theory

The momentum and continuity equations can be written as

$$\rho \left( \frac{\partial \vec{u}}{\partial t} + (\vec{u} \cdot \nabla) \vec{u} \right) - \nabla \cdot \bar{\bar{\sigma}} = \rho \vec{f}, \quad (2.1)$$

and

$$\left( \frac{\partial \rho}{\partial t} + (\vec{u} \cdot \nabla) \rho \right) + \rho (\nabla \cdot \vec{u}) = 0, \quad (2.2)$$

where  $\bar{\bar{\sigma}}$  is the stress tensor. For Newtonian fluids

$$\bar{\bar{\sigma}} = 2\mu \bar{\bar{\varepsilon}} - \frac{2}{3}\mu (\nabla \cdot \vec{u}) \bar{\bar{I}} - p \bar{\bar{I}}, \quad (2.3)$$

where  $\mu$  is the viscosity,  $p$  is the pressure,  $\bar{\bar{I}}$  the unit tensor and  $\bar{\bar{\varepsilon}}$  the linearized strain rate tensor, i.e.

$$\varepsilon_{ij} = \frac{1}{2} \left( \frac{\partial u_i}{\partial x_j} + \frac{\partial u_j}{\partial x_i} \right). \quad (2.4)$$

The density of an ideal gas depends on the pressure and temperature through the equation of state

$$\rho = \frac{p}{RT}, \quad (2.5)$$

where  $R$  is the gas constant:

$$R = \frac{\gamma - 1}{\gamma} c_p. \quad (2.6)$$

The specific heat ratio  $\gamma$  is defined as

$$\gamma = \frac{c_p}{c_v}, \quad (2.7)$$

where  $c_p$  and  $c_v$  are the heat capacities in constant pressure and volume, respectively. The value of  $\gamma$  depends solely on the internal molecular properties of the gas.

An incompressible flow is characterized by the condition  $\rho = \text{constant}$ , from which it follows that

$$\nabla \cdot \vec{u} = 0. \quad (2.8)$$

Enforcing the constraint (2.8) in (2.1), (2.2) and (2.3), the equations reduce to the Navier-Stokes equations

$$\rho \left( \frac{\partial \vec{u}}{\partial t} + (\vec{u} \cdot \nabla) \vec{u} \right) - \nabla \cdot (2\mu \vec{\varepsilon}) + \nabla p = \rho \vec{f}, \quad (2.9)$$

$$\nabla \cdot \vec{u} = 0. \quad (2.10)$$

Compressible flows are modelled by the equations (2.1)-(2.7). Then, it is possible to replace the state equation (2.5) by

$$\rho = \frac{1}{c^2} p, \quad (2.11)$$

where  $c = c(p, T, \dots)$  is the speed of sound. The equation (2.11) can be used with liquid materials as well.

Most commonly the term  $\rho \vec{f}$  represents a force due to gravity, in which case the vector  $\vec{f}$  is the gravitational acceleration. It can also represent, for instance, the Lorentz force when magnetohydrodynamic effects are present.

For isothermal flows the equations (2.9) and (2.10) describe the system in full. For thermal flows also the heat equation needs to be solved.

For thermal incompressible fluid flows we assume that the Boussinesq approximation is valid. This means that the density of the fluid is constant except in the body force term where the density depends linearly on temperature through the equation

$$\rho = \rho_0 (1 - \beta(T - T_0)), \quad (2.12)$$

where  $\beta$  is the volume expansion coefficient and the subscript 0 refers to a reference state. Assuming that the gravitational acceleration  $\vec{g}$  is the only external force, then the force  $\rho_0 \vec{g} (1 - \beta(T - T_0))$  is caused in the fluid by temperature variations. This phenomenon is called Grashof convection or natural convection.

One can choose between transient and steady state analysis. In transient analysis one has to set, besides boundary conditions, also initial values for the unknown variables.

### 2.2.1 Boundary Conditions

For the Navier-Stokes equation one can apply boundary conditions for velocity components or the tangential or normal stresses may be defined.

In 2D or axisymmetric cases the Dirichlet boundary condition for velocity component  $u_i$  is simply

$$u_i = u_i^b. \quad (2.13)$$

A value  $u_i^b$  can be constant or a function of time, position or other variables. In cylindrical cases the Dirichlet boundary condition for angular velocity  $u^\theta$  is

$$u^\theta = \omega, \quad (2.14)$$

where  $\omega$  is the rotation rate.

In axisymmetric geometries one has to set  $u_r = 0$  and  $\partial u_z / \partial r = 0$  on the symmetry axis. If there is no flow across the surface, then

$$\vec{u} \cdot \vec{n} = 0 \quad (2.15)$$

where  $\vec{n}$  is the outward unit normal to the boundary.

Surface stresses can be divided into normal and tangential stresses. Normal stress is usually written in the form

$$\sigma_n = \frac{\gamma}{R} - p_a \quad (2.16)$$

where  $\gamma$  is the surface tension coefficient,  $R$  the mean curvature and  $p_a$  the atmospheric (or external) pressure. Tangential stress has the form

$$\vec{\sigma}_\tau = \nabla_s \gamma, \quad (2.17)$$

where  $\nabla_s$  is the surface gradient operator.

The coefficient  $\gamma$  is a thermophysical property depending on the temperature. Temperature differences on the surface influence the transport of momentum and heat near the surface. This phenomenon is called Marangoni convection or thermocapillary convection. The temperature dependence of the surface tension coefficient can be approximated by a linear relation:

$$\gamma = \gamma_0(1 - \vartheta(T - T_0)), \quad (2.18)$$

where  $\vartheta$  is the temperature coefficient of the surface tension and the subscript 0 refers to a reference state. If a Boussinesq hypothesis is made, i.e., the surface tension coefficient is constant except in (2.17) due to (2.18), the boundary condition for tangential stress becomes

$$\vec{\sigma}_\tau = -\vartheta \gamma_0 \nabla_s T. \quad (2.19)$$

In equation (2.16) it holds then that  $\gamma = \gamma_0$ . The linear temperature dependence of the surface tension coefficient is naturally only one way to present the dependence. In fact, the coefficient  $\gamma$  can be any user defined function in Elmer. One may also give the force vector on a boundary directly as in

$$\vec{\sigma} \cdot \vec{n} = \vec{g}. \quad (2.20)$$

## 2.2.2 Linearization

As is well known, the convective transport term of the Navier-Stokes equations and the heat equation is a source of both physical and numerical instability. The numerical instability must be compensated somehow in order to solve the equations on a computer. For this reason the so called stabilized finite element method ([2],[1]) is used in Elmer to discretize these equations.

The convection term of the Navier-Stokes equations is nonlinear and has to be linearized for computer solution. There are two linearizations of the convection term in Elmer:

$$(\vec{u} \cdot \nabla) \vec{u} \approx (\vec{u} \cdot \nabla) \vec{u} \quad (2.21)$$

and

$$(\vec{u} \cdot \nabla) \vec{u} \approx (\vec{u} \cdot \nabla) \vec{u} + (\vec{u} \cdot \nabla) \vec{u} - (\vec{u} \cdot \nabla) \vec{u}, \quad (2.22)$$

where  $\vec{u}$  is the velocity vector from the previous iteration. The first of the methods is called Picard iteration or the method of the fixed point, while the latter is called Newton iteration. The convergence rate of the Picard iteration is of first order, and the convergence might at times be very slow. The convergence rate of the Newton method is of second order, but to successfully use this method, a good initial guess for velocity and pressure fields is required. The solution to this problem is to first take a couple of Picard iterations, and switch to Newton iteration after the convergence has begun.

### 2.2.3 Arbitrary Lagrangian-Eulerian (ALE) coordinates

For problems involving deformations the transient Navier-Stokes equation must be solved using Arbitrary Lagrangian-Eulerian (ALE) frame of reference. Assume that the mesh velocity during the nonlinear iteration is  $\vec{c}$ . Then the convective term yields

$$((\vec{u} - \vec{c}) \cdot \nabla) \vec{u} \approx ((\vec{U} - \vec{c}) \cdot \nabla) \vec{u}. \quad (2.23)$$

This results naturally to Picard iteration. For Newton iteration the additional two terms remains the same since the mesh velocities in there cancel each other.

### 2.2.4 Non-newtonian Material Models

There are several non-newtonian material models. All are functions of the strainrate  $\dot{\gamma}$ . The simple power law model has a problematic behavior at low shear rates. The more complicated models provide a smooth transition from low to high shearrates.

#### Power law

$$\eta = \begin{cases} \eta_0 \dot{\gamma}^{n-1} & \text{if } \dot{\gamma} > \dot{\gamma}_0, \\ \eta_0 \dot{\gamma}_0^{n-1} & \text{if } \dot{\gamma} \leq \dot{\gamma}_0. \end{cases} \quad (2.24)$$

where  $\eta_\infty$  is constant,  $\dot{\gamma}_0$  is the critical shear rate, and  $n$  is the viscosity exponent.

#### Carreau-Yasuda

$$\eta = \eta_\infty + \Delta\eta (1 + (c\dot{\gamma})^y)^{\frac{n-1}{y}}, \quad (2.25)$$

where  $\eta_\infty$  is the high shearrate viscosity  $\dot{\gamma} \rightarrow \infty$  provided that  $n < 1$ . For shearrates approaching zero the viscosity is  $\eta_0 = \eta_\infty + \Delta\eta$ .  $\Delta\eta$  is thus the maximum viscosity difference between low and high shearrate. This model recovers the plain Carreau model when the Yasuda exponent  $y = 2$ .

#### Cross

$$\eta = \eta_\infty + \frac{\Delta\eta}{1 + c\dot{\gamma}^n}, \quad (2.26)$$

where again  $\eta_\infty$  is the high shearrate viscosity.

#### Powell-Eyring

$$\eta = \eta_\infty + \Delta\eta \frac{\text{asinh}(c\dot{\gamma})}{c\dot{\gamma}}. \quad (2.27)$$

All the viscosity models can be made temperature dependent. The current choice is to multiply the suggested viscosity with a factor  $\exp(d(1/(T_o + T) - 1/T_r))$ , where  $d$  is the exponential factor,  $T_o$  is temperature offset (to allow using of Celcius), and  $T_r$  the reference temperature for which the factor becomes one.

### 2.2.5 Flow in Porous Media

A simple porous media model is provided in the Navier-Stokes solver. It utilizes the Darcy's law that states that the flow resistance is proportional to the velocity and thus the modified momentum equation reads

$$\rho \left( \frac{\partial \vec{u}}{\partial t} + (\vec{u} \cdot \nabla) \vec{u} \right) - \nabla \cdot \vec{\sigma} + r\vec{u} = \rho \vec{f}, \quad (2.28)$$

where  $r$  is the porous resistivity which may also be an orthotropic tensor. Usually the given parameter is permeability which is the inverse of the resistivity as defined here. No other features of the porous media flow is taken into consideration. Note that for large value of  $r$  only the bubble stabilization is found to work.

### 2.2.6 Rotating coordinates

In rotating coordinate system around origin one may define the angular velocity vector,  $\vec{\Omega}$ . The rotation introduces additional forces that may be evaluated from the following

$$\frac{d\vec{u}_{inertial}}{dt} = \frac{d\vec{u}_{rotating}}{dt} + 2\vec{\Omega} \times \vec{u}_{rotating} + \vec{\Omega} \times (\vec{\Omega} \times \vec{x}). \quad (2.29)$$

In numerical implementation the following Lagrange's formula is used

$$\vec{\Omega} \times (\vec{\Omega} \times \vec{x}) = (\vec{\Omega} \cdot \vec{x})\vec{\Omega} - (\vec{\Omega} \cdot \vec{\Omega})\vec{x}. \quad (2.30)$$

which results to the following form of the Navier-Stokes equation in rotating coordinates

$$\rho \left( \frac{\partial \vec{u}}{\partial t} + (\vec{u} \cdot \nabla) \vec{u} \right) - \nabla \cdot \vec{\sigma} + 2\rho \vec{\Omega} \times \vec{u} = \rho(\vec{\Omega} \cdot \vec{\Omega})\vec{x} - \rho(\vec{\Omega} \cdot \vec{x})\vec{\Omega} + \rho \vec{f}, \quad (2.31)$$

It should be noted that now also the boundary conditions need to be given in the rotational coordinate system.

### 2.2.7 Coupling to Electric Fields

In electrokinetics the fluid may have charges that are coupled to external electric fields. This results to an external force that is of the form

$$\vec{f}_e = -\rho_e \nabla \phi, \quad (2.32)$$

where  $\rho_e$  is the charge density and  $\phi$  is the external electric field. The charge density may also be a variable. More specifically this force may be used to couple the Navier-Stokes equation to the Poisson-Boltzmann equation describing the charge distribution in electric doubly layers. Also other types of forces that are proportional to the gradient of the field may be considered.

### 2.2.8 Coupling to Magnetic Fields

If the fluid has free charges it may couple with an magnetic field. The magnetic field induced force term for the flow momentum equations is defined as

$$\vec{f}_m = \vec{J} \times \vec{B}, \quad (2.33)$$

Here  $\vec{B}$  and  $\vec{E}$  are the magnetic and electric fields, respectively. The current density  $\vec{J}$  is defined as

$$\vec{J} = \sigma(\vec{E} + \vec{u} \times \vec{B}). \quad (2.34)$$

## 2.3 Keywords

Constants

Gravity Size 4 Real [x y z abs]

The above statement gives a real vector whose length is four. In this case the first three components give the direction vector of the gravity and the fourth component gives its intensity.

Solver solver id

Note that all the keywords related to linear solver (starting with Linear System) may be used in this solver as well. They are defined elsewhere.

Equation String [Navier-Stokes]

The name of the equation.

Flow Model String [Full][No convection][Stokes]

Flow model to be used. The default is to include both convection and time derivative terms in the model. The "No convection" model switches off the convection terms, and the "Stokes" model both the convection terms and the (explicit) time derivative terms.

Nonlinear System Convergence Tolerance Real

this keyword gives a criterion to terminate the nonlinear iteration after the relative change of the norm of the field variable between two consecutive iterations is small enough

$$||u_i - u_{i-1}|| < \epsilon ||u_i||,$$

where  $\epsilon$  is the value given with this keyword.

Nonlinear System Max Iterations Integer

The maximum number of nonlinear iterations the solver is allowed to do.

Nonlinear System Newton After Iterations Integer

Change the nonlinear solver type to Newton iteration after a number of Picard iterations have been performed. If a given convergence tolerance between two iterations is met before the iteration count is met, it will switch the iteration type instead.

Nonlinear System Newton After Tolerance Real

Change the nonlinear solver type to Newton iteration, if the relative change of the norm of the field variable meets a tolerance criterion:

$$||u_i - u_{i-1}|| < \epsilon ||u_i||,$$

where  $\epsilon$  is the value given with this keyword.

Nonlinear System Relaxation Factor Real

Giving this keyword triggers the use of relaxation in the nonlinear equation solver. Using a factor below unity is sometimes required to achieve convergence of the nonlinear system. A factor above unity might speed up the convergence. Relaxed variable is defined as follows:

$$u'_i = \lambda u_i + (1 - \lambda) u_{i-1},$$

where  $\lambda$  is the factor given with this keyword. The default value for the relaxation factor is unity.

Steady State Convergence Tolerance Real

With this keyword a equation specific steady state or coupled system convergence tolerance is given. All the active equation solvers must meet their own tolerances before the whole system is deemed converged. The tolerance criterion is:

$$||u_i - u_{i-1}|| < \epsilon ||u_i||,$$

where  $\epsilon$  is the value given with this keyword.

Stabilize Logical

If this flag is set true the solver will use stabilized finite element method when solving the Navier-Stokes equations. Usually stabilization of the equations must be done in order to successfully solve the equations. If solving for the compressible Navier-Stokes equations, a bubble function formulation is used instead of the stabilized formulation regardless of the setting of this keyword. Also for the incompressible Navier-Stokes equations, the bubbles may be selected by setting this flag to False.

Div Discretization Logical

In the case of incompressible flow using the this form of discretization of the equation may lead to more stable discretization when the Reynolds number increases.

Gradp Discretization Logical

Whit this form of discretization pressure Dirichlet boundary conditions can be used (and pressure level must be fixed by such a condition). Also the mass flux is available as a natural boundary condition.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies:



Navier-Stokes Logical  
if set to True, solve the Navier-Stokes equations.

Magnetic Induction Logical  
If set to True, solve the magnetic induction equation along with the Navier-Stokes equations.

Convection String [None, Computed, Constant]  
The convection type to be used in the heat equation, one of: None, Computed, Constant.  
The second choice is used for thermal flows.

Body Force bf id  
The body force section may be used to give additional force terms for the equations.

Boussinesq Logical  
If set true, sets the Boussinesq model on.

Flow BodyForce i Real  
May be used to give additional body force for the flow momentum equations,  $i=1, 2, 3$ .

Lorentz Force Logical  
If set true, triggers the magnetic field force for the flow momentum equations.

Potential Force Logical  
If this is set true the force used for the electricstatic coupling is activated.

Potential Field Real  
The field to which gradient the external force is proportional to. For example the electrostatic field.

Potential Coefficient Real  
The coefficient that multiplies the gradient term. For example, the charge density.

Angular Velocity Real  
The angular velocity  $\vec{\Omega}$  used for rotating coordinate systems. The size is always expected to be three.

Initial Condition ic id  
The initial condition section may be used to set initial values for the field variables. The following variables are active:

Pressure Real

Velocity i Real  
For each velocity component  $i=1, 2, 3$ .

Kinetic Energy Real  
For the  $k-\varepsilon$  turbulence model.

Kinetic Energy Dissipation Real

Material mat id  
The material section is used to give the material parameter values. The following material parameters may be set in Navier-Stokes equation.

Density Real The value of density is given with this keyword. The value may be constant, or variable. For the of compressible flow, the density is computed internally, and this keyword has no effect.

Viscosity Real  
The relationship between stress and strain velocity. When using the solidification modelling, a viscosity-temperature curve must be given. The viscosity must be set to high enough value in the temperature range for solid material to effectively set the velocity to zero.

Reference Temperature Real  
This is the reference temperature for the Boussinesq model of temperature dependence of density.

Heat Expansion Coefficient `real`

For the Boussinesq model the heat expansion coefficient must be given with this keyword. Default is 0.0.

Applied Magnetic Field `i Real`

An applied magnetic field may be given with these keywords with  $i=1, 2, 3$ .

Compressibility Model `String`

This setting may be used to set the compressibility model for the flow simulations. Currently the setting may be set to either `Incompressible`, `Perfect Gas` and `ArtificialCompressible`. If perfect gas model is chosen the settings `Reference Pressure` and `Specific Heat Ratio` must also be given. The artificial compressibility model may be used to boost convergence in fluid-structure-interaction cases. The default value of this setting is `Incompressible`.

Reference Pressure `Real`

with this keyword a reference level of pressure may be given. This setting applies only if the `Compressibility Model` is set to the value `Perfect Gas`.

Specific Heat Ratio `Real`

The ratio of specific heats (in constant pressure versus in constant volume) may be given with this keyword. This setting applies only if the `Compressibility Model` is set to value `Perfect Gas`. The default value of this setting is  $5/3$ , which is the appropriate value for monoatomic ideal gas.

For the  $k-\varepsilon$  turbulence model the model parameters may also be given in the material section using the following keywords

KE `SigmaK Real [1.0]`

KE `SigmaE Real [1.3]`

KE `C1 Real [1.44]`

KE `C2 Real [1.92]`

KE `Cmu Real [0.09]`

Non-newtonian material laws are also defined in material section. For the power law the constant coefficient is given by the keyword `Viscosity`.

Viscosity Model `String`

The choices are `power law`, `carreau`, `cross`, `powell eyring` and `thermal carreau`. If none is given the fluid is treated as newtonian.

Viscosity Exponent `Real`

Parameter  $n$  in the models `power law`, `Carreau`, `Cross`

Viscosity Difference `Real`

Difference  $\Delta\eta$  between high and low shear rate viscosities. Applicable to `Carreau`, `Cross` and `Powell-Eyring` models.

Viscosity Transition `Real`

Parameter  $c$  in the `Carreau`, `Cross` and `Powell-Eyring` models.

Critical Shear Rate `Real [0.0]`

Optional parameter  $\dot{\gamma}_0$  in power law viscosity model.

Nominal Shear Rate `Real [0.0]`

Optional parameter in the power law viscosity model that gives the shear rate that returns the plain newtonian viscosity.

Yasuda Exponent `Real`

Optional parameter  $y$  in `Carreau` model. The default is 2. If activated the model is the more generic `Yasuda-Carreau` model.

Viscosity Temp Offset Real

Parameter  $T_o$  in the thermal viscosity dependence. When using Celcius instead of Kelvins this would be 273.15, for example.

Viscosity Temp Ref Real

Parameter  $T_r$  in the thermal viscosity dependence. This should be set so that unity factor is obtained when  $T_r = T_o + T$ .

Viscosity Temp Exp Real

Exponential parameter  $d$  in the thermal viscosity dependence.

Porosity is defined by the material properties

Porous Media Logical

If this keyword is set True then the porous model will be active in the material.

Porous Resistance Real

This keyword may give a constant resistance or also a orthotropic resistance where the resistance of each velocity component is given separately.

Boundary Condition bc id

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Navier-Stokes equation are

Velocity i Real

Dirichlet boundary condition for each velocity component  $i=1,2,3$ .

Pressure Real

Absolute pressure.

Normal-Tangential Velocity Real

The Dirichlet conditions for the vector variables may be given in normal-tangential coordinate system instead of the coordinate axis directed system using the keywords

Flow Force BC Logical

Set to true, if there is a force boundary condition for the Navier-Stokes equations.

Surface Tension Expansion Coefficient Real

Triggers a tangential stress boundary condition to be used. If the keyword Surface Tension Expansion Coefficient is given, a linear dependence of the surface tension coefficient on the temperature is assumed. Note that this boundary condition is the tangential derivative of the surface tension coefficient

Surface Tension Coefficient Real

Triggers the same physical model as the previous one except no linearity is assumed. The value is assumed to hold the dependence explicitly.

External Pressure Real

A pressure boundary condition directed normal to the surface.

Pressure i Real

A pressure force in the given direction  $i=1,2,3$ .

Free Surface Logical

Specifies a free surface.

Free Moving Logical

Specifies whether the regeneration of mesh is free to move the nodes of a given boundary when remeshing after moving the free surface nodal points. The default is that the boundary nodes are fixed.

The k- $\varepsilon$  turbulence model also has its own set of boundary condition keywords (in addition to the Dirichlet settings):

Wall Law Logical

The flag activates the (Reichardt's) law of the wall for the boundary specified. the default is 9.0.

Boundary Layer Thickness Real

The distance from the boundary node of the meshed domain to the physical wall.

## Bibliography

- [1] L.P. Franca and S.L. Frey. *Computer methods in Applied Mechanics and Engineering*, 99:209–233, 1992.
- [2] L.P. Franca, S.L. Frey, and T.J.R. Hughes. *Computer methods in Applied Mechanics and Engineering*, 95:253–276, 1992.

## Model 3

# Advection-Diffusion Equation

**Module name:** AdvectionDiffusion

**Module subroutines:** AdvectionDiffusionSolver

**Module authors:** Juha Ruokolainen, Ville Savolainen, Antti Pursula

**Document authors:** Ville Savolainen, Antti Pursula

**Document edited:** Oct 29th 2003

### 3.1 Introduction

Advection-diffusion equation (sometimes called diffusion-convection equation) describes the transport of a scalar quantity or a chemical species by convection and diffusion. The difference in the nomenclature usually indicates that an advected quantity does not have an effect on the velocity field of the total fluid flow but a convected quantity has. Advection-diffusion equation is derived from the principle of mass conservation of each species in the fluid mixture. Advection-diffusion equation may have sources or sinks, and several advection-diffusion equations may be coupled together via chemical reactions.

Fick's law is used to model the diffusive flux. Diffusion may be anisotropic, which may be physically reasonable at least in solids. If the velocity field is identically zero, the advection-diffusion equation reduces to the diffusion equation, which is applicable in solids.

Heat equation is a special case of the advection-diffusion (or diffusion-convection) equation, and it is described elsewhere in this manual.

### 3.2 Theory

#### 3.2.1 Governing Equations

The advection-diffusion equation may, in general, be expressed in terms of relative or absolute mass or molar concentrations. In Elmer, when the transported quantity is carried by an incompressible fluid (or it is diffused in a solid), relative mass concentration  $c_i = C_i/\rho$  for the species  $i$  is used ( $C_i$  is the absolute mass concentration in units  $\text{kg}/\text{m}^3$ , and  $\rho$  the total density of the mixture). We have used the approximation valid for dilute multispecies flows, i.e.,  $0 \leq c_i \ll 1$ . The advection-diffusion equation is now written as

$$\rho \left( \frac{\partial c_i}{\partial t} + (\vec{v} \cdot \nabla) c_i \right) = \rho \nabla \cdot (D_i \nabla c_i) + S_i, \quad (3.1)$$

where  $\vec{v}$  is the advection velocity,  $D_i$  the diffusion coefficient and  $S_i$  is a source, sink or a reaction term. The diffusion coefficient may be a tensor.

For a compressible fluid, the concentration should be expressed in absolute mass units, and the advection-diffusion equation reads

$$\frac{\partial C_i}{\partial t} + (\nabla \cdot \vec{v}) C_i + (\vec{v} \cdot \nabla) C_i = \nabla \cdot (D_i \nabla C_i) + S_i. \quad (3.2)$$

For a situation, where the quantity is transported through a phase change boundary, it is convenient to scale the absolute mass formulation by the respective solubilities of the different phases. Such a case is for example the surface of a liquid, where the transported quantity is evaporated into a gaseous material. The scaled concentration variable satisfies the equilibrium boundary condition on the phase change boundary automatically, and thus the advection-diffusion equation can be solved for both materials simultaneously. The scaling is following

$$x_i = \frac{C_i}{C_{i,max}}, \quad (3.3)$$

where  $x_i$  is the concentration of species  $i$  relative to its maximum solubility in the current material in absolute mass units. The maximum solubility has to be a constant (temperature independent) for the absolute mass formulation of the advection-diffusion equation to remain unchanged.

It is also possible to include temperature dependent diffusion (Soret diffusion). This introduces an additional term on the right hand side of the equation:

$$\nabla \cdot (\rho D_{i,T} \nabla T), \quad (3.4)$$

where  $D_{i,T}$  is the thermal diffusion coefficient of species  $i$ . The coefficient  $D_{i,T}$  has to be given in the units  $m^2/Ks$  regardless of the units used for concentration.

The velocity of the advecting fluid,  $\vec{v}$ , is typically calculated by the Navier-Stokes equation and read in from a restart file. All quantities can also be functions of, e.g., temperature that is given or solved by the heat equation. Several advection-diffusion equations for different species  $i$  may be coupled and solved for the same velocity field.

Given volume species sources  $S_i$  can be prescribed. They are given in absolute mass units, i.e.,  $kg/m^3s$ . If the equation is scaled to maximum solubility, the source term can be given in absolute mass units, or in scaled units,  $S_{i,sc} = S_i/C_{i,max}$ , which is the default.

### 3.2.2 Boundary Conditions

For each species one can apply either a prescribed concentration or a mass flux as boundary conditions.

Dirichlet boundary condition reads as

$$c_i = c_{i,b}, \quad (3.5)$$

or

$$C_i = C_{i,b}, \quad (3.6)$$

depending on the units. If the concentration is scaled to maximum solubility, the Dirichlet boundary conditions have to be given also in scaled values,  $x_i = C_{i,b}/C_{i,max}$ . In all variations, the boundary value can be constant or a function of time, position or other variables.

One may specify a mass flux  $\vec{j}_i$  perpendicular to the boundary by

$$\vec{j}_i \cdot \vec{n} = -D_i \frac{\partial C_i}{\partial n} = g. \quad (3.7)$$

In relative mass units, this may be written as

$$\vec{j}_i \cdot \vec{n} = -\rho D_i \frac{\partial c_i}{\partial n} = g. \quad (3.8)$$

Thus the units in the flux boundary condition are always  $kg/m^2s$  except when the equation is scaled to maximum solubility. In that case the default is to give flux condition in scaled units,  $g_{sc} = g/C_{i,max}$ , although the physical units are also possible.

The mass flux may also be specified by a mass transfer coefficient  $\beta$  and an external concentration  $C_{ext}$

$$-D_i \frac{\partial C_i}{\partial n} = \beta(C_i - C_{i,ext}). \quad (3.9)$$

On the boundaries where no boundary condition is specified, the boundary condition  $g = 0$  is applied. This zero flux condition is also used at a symmetry axis in 2D, axisymmetric or cylindrical problems.

The equilibrium boundary condition on phase change boundaries under certain conditions is that the relative amounts of the transported quantity are equal on both sides of the boundary,

$$\frac{C_i^{(1)}}{C_{i,max}^{(1)}} = \frac{C_i^{(2)}}{C_{i,max}^{(2)}}, \quad (3.10)$$

where the superscripts (1) and (2) refer to different sides of the boundary. This boundary condition is automatically satisfied if the equation is scaled with the maximum solubilities  $C_{i,max}^{(j)}$ .

However, the scaling causes a discontinuity into the mass flux of the species through the phase change surface. The solver compensates this effect as long as such a boundary is flagged in the command file by the user.

### 3.3 Keywords

#### Simulation

The simulation section gives the case control data:

Simulation Type String

Advection-diffusion equation may be either Transient or Steady State.

Coordinate System String

Defines the coordinate system to be used, one of: Cartesian 1D, Cartesian 2D, Cartesian 3D, Polar 2D, Polar 3D, Cylindric, Cylindric Symmetric and Axi Symmetric.

Timestepping Method String

Possible values of this parameter are Newmark (an additional parameter Newmark Beta must be given), BDF (BDF Order must be given). Also as a shortcut to Newmark-method with values of Beta=0.0, 0.5, 1.0 the keywords Explicit Euler, Crank-Nicolson, and Implicit Euler may be given respectively. The recommended choice for the first order time integration is the BDF method of order 2.

BDF Order Integer

Value may range from 1 to 5.

Newmark Beta Real

Value in range from 0.0 to 1.0. The value 0.0 equals to the explicit Euler integration method and the value 1.0 equals to the implicit Euler method.

#### Solver solver id

The solver section defines equation solver control variables. Most of the possible keywords – related to linear algebra, for example – are common for all the solvers and are explained elsewhere.

Equation String [Advection Diffusion Equation Varname]

The name of the equation, e.g., Advection Diffusion Equation Oxygen.

Variable String Varname

The name of the variable, e.g., Oxygen.

Procedure File "AdvectionDiffusion" "AdvectionDiffusionSolver"

The name of the file and subroutine.

Nonlinear System Convergence Tolerance Real

The criterion to terminate the nonlinear iteration after the relative change of the norm of the field variable between two consecutive iterations  $k$  is small enough

$$||u_k - u_{k-1}|| < \epsilon ||u_k||,$$

where  $\epsilon$  is the value given with this keyword, and  $u$  is either  $c_i$  or  $C_i$ .

Nonlinear System Max Iterations Integer

The maximum number of nonlinear iterations the solver is allowed to do.

Nonlinear System Relaxation Factor Real

Giving this keyword triggers the use of relaxation in the nonlinear equation solver. Using a factor below unity is sometimes required to achieve convergence of the nonlinear system. A factor above unity might speed up the convergence. Relaxed variable is defined as follows:

$$u'_k = \lambda u_k + (1 - \lambda)u_{k-1},$$

where  $\lambda$  is the factor given with this keyword. The default value for the relaxation factor is unity.

Steady State Convergence Tolerance Real

With this keyword a equation specific steady state or coupled system convergence tolerance is given. All the active equation solvers must meet their own tolerances for their variable  $u$  before the whole system is deemed converged. The tolerance criterion is:

$$||u_i - u_{i-1}|| < \epsilon ||T_i||,$$

where  $\epsilon$  is the value given with this keyword.

Stabilize Logical

If this flag is set true the solver will use stabilized finite element method when solving the advection-diffusion equation with a convection term. If this flag is set to False, RFB (Residual Free Bubble) stabilization is used instead (unless the next flag Bubbles is set to False in a problem with Cartesian coordinate system). If convection dominates, some form of stabilization must be used in order to successfully solve the equation. The default value is False.

Bubbles Logical

There is also a residual-free-bubbles formulation of the stabilized finite-element method. It is more accurate and does not include any ad hoc terms. However, it may be computationally more expensive. The default value is True. If both Stabilize and Bubbles or set to False, no stabilization is used. This choice may be enforced in a problem with Cartesian coordinates, but the results might be nonsensical. Both Stabilize and Bubbles should not be set to True simultaneously.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies.

Advection Diffusion Equation Varname Logical

If set to True, solve the advection-diffusion equation.

Convection String

The type of convection to be used in the advection-diffusion equation, one of: None, Computed, Constant.

Concentration Units String

If set to Absolute Mass, absolute mass units are used for concentration. Recommended for a compressible flow. Also possible to select Mass To Max Solubility which causes the absolute mass formulation of the equation to be scaled by the maximum solubilities of each material.

Body Forces bf id

The body force section may be used to give additional force terms for the equations. The following keyword is recognized by the solver:

Varname Diffusion Source Real

An additional volume source for the advection-diffusion equation may be given with this keyword. It may depend on coordinates, temperature and other variables, such as concentration of other chemical species, and thus describe a source, a sink or a reaction term. Given in absolute mass units or, in case of scaling, in the scaled units.



Physical Units Logical True

With this keyword, the source term can be given in absolute mass units regardless of scaling.

Initial Condition ic id

The initial condition section may be used to set initial values for the concentration  $c_i$ ,  $C_i$  or  $x_i$ .

Varname Real

Material mat id

The material section is used to give the material parameter values. The following material parameters may be effective when advection-diffusion equation is solved.

Convection Velocity i Real

Convection velocity  $i=1, 2, 3$  for the constant convection model.

Density Real

The value of density of the transporting fluid is given with this keyword. The value may be constant, or variable. For compressible flow, the density of the transporting fluid is computed internally, and this keyword has no effect.

Compressibility Model String

This setting may be used to set the compressibility model for the flow simulations. Choices are Incompressible and Perfect Gas. If set to the latter, the density is calculated from the ideal gas law. Then also the settings Reference Pressure, Specific Heat Ratio and Heat Capacity must be given.

Reference Pressure Real

With this keyword a reference level of pressure may be given.

Specific Heat Ratio Real

The ratio of specific heats (in constant pressure versus in constant volume) may be given with this keyword. The default value of this setting is  $5/3$ , which is the appropriate value for monoatomic ideal gas.

Heat Capacity Real

For the compressible flow, specific heat in constant volume.

Varname Diffusivity Real

The diffusivity  $D$  given by, e.g., Oxygen Diffusivity. Can be a constant or variable. For an anisotropic case, may also be a tensor  $D_{ij}$ .

Varname Soret Diffusivity Real

The thermal diffusivity coefficient  $D_T$  given by, e.g., Oxygen Soret Diffusivity. Can be a constant or variable.

Varname Maximum Solubility Real

The maximum solubility of the species in absolute mass units. Has to be a constant value.

Boundary Condition bc id

In advection-diffusion equation we may set the concentration directly by Dirichlet boundary conditions or use mass flux condition. The natural boundary condition is zero flux condition.

Varname Real

Mass Transfer Coefficient Real

External Concentration Real

These two keywords are used to define flux condition that depends on the external concentration and a mass transfer coefficient. This condition is only applicable to absolute mass formulation of the equation (see keywords for Equation block).

Varname Flux Real

A user defined mass flux term in absolute mass units or, in case of scaling, in the scaled units.

Physical Units Logical True

With this keyword, the flux boundary condition can be given in absolute mass units regardless of scaling. Note that this keyword does NOT affect the Dirichlet boundary condition nor the mass transfer coefficient bc.

Varname Solubility Change Boundary Logical True

This keyword marks the boundary over which the maximum solubility changes. Has to be present for the mass flux continuity to be preserved.

Normal Target Body Integer bd id

In a solubility change boundary, this keyword can be used to control on which side the mass flux compensation is done. Basically, this can be done on either side but there can be some effect on the accuracy or on the speed of the solution. Recommended is to give as normal target the body with less dense mesh, or the direction of average species transport. If normal target body is not specified, the material with smaller density is used.

## Model 4

# Advection-Reaction Equation

**Module name:** AdvectionReaction

**Module subroutines:** AdvectionReactionSolver

**Module authors:** Mikko Lyly, Juha Ruokolainen, Thomas Zwinger

**Document authors:** Thomas Zwinger

**Document edited:** March 3rd 2009

### 4.1 Introduction

Advection-reaction equation describes the transport of a passive scalar quantity,  $c$ , by a fluid. The advected quantity is assumed not to have an effect on the velocity field. Besides a reaction rate, advection-reaction equation may have sources or sinks. If no reaction rate and source are given, this equation may be used to trace passive scalars through a given flow-field. If a constant source of unity value is given, the equation also may be used to evaluate the time a passive tracer has remained in the flow field.

### 4.2 Theory

#### 4.2.1 Governing Equations

The advective transport of a scalar  $c$  can be written as

$$\frac{\partial c}{\partial t} + \vec{v} \cdot \nabla c + \Gamma c = S, \quad (4.1)$$

where  $\vec{v}$  is the advection velocity,  $\Gamma$  is the reaction rate and  $S$  is a source/sink, depending on the sign.

Due to the absence of any diffusion, (4.1) has to be solved applying the Discontinuous Galerkin (DG) method. Elmer implements the particular method as presented in [1]. In order to evaluate jumps across partition boundaries in parallel computations, DG implies the utilization of halo-elements for domain decomposition (see ElmerGrid manual for details).

#### 4.2.2 Limiters

If the scalar has a lower,  $c_{\min} \leq c$  and/or an upper limit  $c \leq c_{\max}$  limit (where the limit can be also a function of another variable), the variational form of (4.1) becomes a variational inequality. In order to obtain a consistent solution a method using Dirichlet constraints within the domain is applied. The exact procedure is the following:

1. construct the linear system:  $\mathbf{A}\vec{c} = \vec{S}$ , with the system matrix  $\mathbf{A}$  and the solution vector  $\vec{c}$  on the left-hand side and the force vector  $\vec{S}$  on the right hand side

2. set nodes as *active* if the constraint is violated
3. for *active* nodes the matrix and force vector are manipulated such that effectively a Dirichlet condition  $c = c_{\max/\min}$  is applied
4. the manipulated system is solved:  $\tilde{\mathbf{A}}\vec{c} = \vec{S}$
5. a residual is obtained from the un-manipulated system:  $\vec{R} = \mathbf{A}\vec{c} - \vec{S}$
6. an *active* node is reset if the residual is  $R < 0$  (for lower limit) and  $R > 0$  (for upper limit)

The whole algorithm is iterated (within the non-linear iteration loop) until the limit given in Nonlinear System Convergence Tolerance is reached. In the converged solution the residual represents the needed accumulation/volume flux (on matrix level, hence not in physical units) needed in order to obtain the limited solution. Consequently, the system not necessarily is volume conserving if the Dirichlet method is applied.

### 4.2.3 Boundary Conditions

At boundaries, a Dirichlet boundary condition reads as

$$c = c_b. \quad (4.2)$$

By nature of the applied DG method, the condition above only applies at inflow boundaries, i.e., if

$$\vec{v} \cdot \vec{n}_b < 0, \quad (4.3)$$

where  $\vec{n}_b$  is the outwards facing surface normal of the boundary.

On the boundaries where no boundary condition is specified, the boundary condition  $c = 0$  is applied upon inflow.

## 4.3 Keywords

### Simulation

The simulation section gives the case control data:

Simulation Type `String`

Advection-reaction equation may be either Transient or Steady State.

Coordinate System `String`

Defines the coordinate system to be used, one of: Cartesian 1D, Cartesian 2D, Cartesian 3D, Polar 2D, Polar 3D, Cylindric, Cylindric Symmetric and Axi Symmetric.

Timestepping Method `String`

Possible values of this parameter are Newmark (an additional parameter Newmark Beta must be given), BDF (BDF Order must be given). Also as a shortcut to Newmark-method with values of Beta=0.0, 0.5, 1.0 the keywords Explicit Euler, Crank-Nicolson, and Implicit Euler may be given respectively. The recommended choice for the first order time integration is the BDF method of order 2.

BDF Order `Integer`

Value may range from 1 to 5.

Newmark Beta `Real`

Value in range from 0.0 to 1.0. The value 0.0 equals to the explicit Euler integration method and the value 1.0 equals to the implicit Euler method.

Solver `solver id`

The solver section defines equation solver control variables. Most of the possible keywords – related to linear algebra, for example – are common for all the solvers and are explained elsewhere.

Equation String [Advection Reaction Equation Variable\_name]

The name of the equation, e.g., Advection Reaction Equation Tracer.

Discontinuous Galerkin Logical

needs to be set to true

Variable String Variable\_name

The name of the variable, e.g., Tracer. As the variable is a DG variable (i.e., not renderable e.g. in ElmerPost), the user usually adds the option `-nooutput` in order to avoid output in the output files

Procedure File "AdvectionReaction" "AdvectionReactionSolver"

The name of the file and subroutine.

Nonlinear System Convergence Tolerance Real

The criterion to terminate the nonlinear iteration after the relative change of the norm of the field variable between two consecutive iterations  $k$  is small enough

$$\|c_k - c_{k-1}\| < \epsilon \|c_k\|,$$

where  $\epsilon$  is the value given with this keyword.

Nonlinear System Max Iterations Integer

The maximum number of nonlinear iterations the solver is allowed to do.

Steady State Convergence Tolerance Real

With this keyword a equation specific steady state or coupled system convergence tolerance is given. All the active equation solvers must meet their own tolerances for their variable  $c$  before the whole system is deemed converged. The tolerance criterion is:

$$\|c_i - c_{i-1}\| < \epsilon \|c_i\|,$$

where  $\epsilon$  is the value given with this keyword.

Limit Solution Logical

Assumes the variational inequality method to apply, if set to true.

Exported Variable 1 String

in order to write the DG variable Variable\_name to a for ElmerPost (non-DG mesh) readable variable, an exported variable with an arbitrary name (e.g., Exported Variable 1 = Variable\_name Nodal Result) has to be defined. It is then used to interpolate the DG result to nodal values in order to display them.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies.

Convection String

The type of convection to be used in the advection-reaction equation, one of: None, Computed, Constant.

Body Forces bf id

The body force section may be used to give additional force terms for the equations. The following keyword is recognized by the solver:

Variable\_name Source Real

defines the volumetric source for variable  $c$

Initial Condition ic id

The initial condition section may be used to set initial values for the scalar  $c$ .

Variable\_name Real

Material mat id

The material section is used to give the material parameter values. The following material parameters may be effective when advection-diffusion equation is solved.

Convection Velocity i Real

Convection velocity  $i=1, 2, 3$  for the constant convection model.

Variable\_name Upper Limit Real

The upper limit,  $c_{\max}$ , for variable Variable\_name. Only used if keyword Limit Solution for the solver is set to true

Variable\_name Lower Limit Real

The lower limit,  $c_{\min}$ , for variable Variable\_name. Only used if keyword Limit Solution for the solver is set to true

Variable\_name Gamma Real

defines the reaction rate,  $\Gamma$

Boundary Condition bc id

Variable\_name Real sets the value for  $c$  at inflow boundaries

## Bibliography

- [1] F. Brezzi and E. Marini, .L. D.and Süli. Discontinuous Galerkin methods for first-order hyperbolic problems. *Math. Models Methods Appl. Sci.*, 14(12):1893–1903, 2004.

## Model 5

# Linear Elasticity Solver

**Module name:** StressSolve

**Module subroutines:** StressSolver

**Module authors:** Juha Ruokolainen

**Document authors:** Juha Ruokolainen

**Document edited:** 22.04.2007

### 5.1 Introduction

This module computes displacement field from Navier equations. The Navier equations correspond to linear theory of elastic deformation of solids. The material may be anisotropic and stresses may be computed as a post processing step, if requested by the user. Thermal stresses may also be requested.

### 5.2 Theory

The dynamical equation for elastic deformation of solids may be written as

$$\rho \frac{\partial^2 \vec{d}}{\partial t^2} - \nabla \cdot \tau = \vec{f}, \quad (5.1)$$

where  $\rho$  is density,  $\vec{d}$  is the displacement field,  $\vec{f}$  given volume force, and  $\tau$  the stress tensor. Stress tensor is given by

$$\tau^{ij} = C^{ijkl} \varepsilon_{kl} - \beta^{ij} (T - T_0), \quad (5.2)$$

where  $\varepsilon$  is the strain and quantity  $C$  is the elastic modulus. The elastic modulus is a fourth order tensor, which has at the most 21 (in 3D, 10 in 2D) independent components due to symmetries. In Elmer thermal stresses may be considered by giving the heat expansion tensor  $\beta$  and reference temperature of the stress free state  $T_0$ . The temperature field  $T$  may be solved by the heat equation solver or otherwise. The linearized strains are given simply as:

$$\varepsilon = \frac{1}{2} (\nabla \vec{d} + (\nabla \vec{d})^T). \quad (5.3)$$

#### 5.2.1 Material laws

For isotropic materials the elastic modulus tensor may be reduced to two independent values, either the Lamé parameters, or equivalently to Young's modulus and Poisson ratio. The stress tensor given in terms of Lamé parameters is:

$$\tau = 2\mu \varepsilon + \lambda \nabla \cdot \vec{d} I - \beta (T - T_0) I, \quad (5.4)$$

where  $\mu$  and  $\lambda$  are the first and second Lamé parameters respectively,  $\beta$  the heat expansion coefficient, and  $I$  is the unit tensor. Lamé parameters in terms of Young's modulus and Poisson ratio read

$$\lambda = \frac{Y\kappa}{(1+\kappa)(1-2\kappa)}, \quad \mu = \frac{Y}{2(1+\kappa)} \quad (5.5)$$

except for plane stress situations ( $\tau_z = 0$ ) where  $\lambda$  is defined as

$$\lambda = \frac{Y\kappa}{(1-\kappa^2)}. \quad (5.6)$$

Quantities  $Y$  and  $\kappa$  are the Young's modulus and Poisson ratio respectively.

For anisotropic materials, the stress-strain relations may be given in somewhat different form:

$$\tau_V = E\varepsilon_V, \quad (5.7)$$

where  $\tau_V$  and  $\varepsilon_V$  are the stress and strain vectors respectively. The  $6 \times 6$  matrix  $E$  (in 3D,  $4 \times 4$  in 2D) is the matrix of elastic coefficients. The stress and strain vectors are defined as

$$\tau_V = (\tau_x \ \tau_y \ \tau_z \ \tau_{xy} \ \tau_{yz} \ \tau_{xz})^T \quad (5.8)$$

and

$$\varepsilon_V = (\varepsilon_x \ \varepsilon_y \ \varepsilon_z \ 2\varepsilon_{xy} \ 2\varepsilon_{yz} \ 2\varepsilon_{xz})^T. \quad (5.9)$$

In 2D the stress vector is

$$\tau_V = (\tau_x \ \tau_y \ \tau_z \ \tau_{xy})^T \quad (5.10)$$

and the strain vector

$$\varepsilon_V = (\varepsilon_x \ \varepsilon_y \ \varepsilon_z \ 2\varepsilon_{xy})^T. \quad (5.11)$$

When plane stress computation is requested  $\tau_z = 0$ , otherwise  $\varepsilon_z = 0$ . Cylindrically symmetric case is identical to the 2D case, the components are given in the order of  $r$ ,  $z$ , and  $\phi$ . The matrix  $E$  is given as input for the anisotropic material model of Elmer.

### 5.2.2 Modal, harmonic and stability analysis

In addition to steady state and time dependent equations, modal, harmonic and stability analysis may be considered. In modal analysis the Fourier transform of the homogeneous form of the dynamical equation is

$$\rho\omega^2\vec{\phi} = \nabla \cdot \tau(\vec{\phi}), \quad (5.12)$$

or

$$\omega^2 \int_{\Omega} \rho \phi_k \psi_k \, d\Omega = \int_{\Omega} \tau_{ij}(\vec{\phi}) \epsilon_{ij}(\vec{\psi}) \, d\Omega, \quad (5.13)$$

where  $\omega$  is the angular frequency and  $\vec{\phi}$  is the corresponding vibration mode.

When modal analysis of pre-stressed solids are considered, we first perform a steady analysis to compute stress tensor, here denoted by  $\sigma_{ij}$ , and solve the variational equation

$$\omega^2 \int_{\Omega} \rho \phi_k \psi_k \, d\Omega = \int_{\Omega} \tau_{ij}(\vec{\phi}) \epsilon_{ij}(\vec{\psi}) \, d\Omega + \int_{\Omega} \sigma_{ij} \frac{\partial \phi_k}{\partial x_i} \frac{\partial \psi_k}{\partial x_j} \, d\Omega. \quad (5.14)$$

The last term on the right-hand-side represents here the geometric stiffness due to external loads, thermal stresses etc.

In stability analysis the buckling modes  $\vec{\phi}$  are obtained from

$$-\lambda \int_{\Omega} \sigma_{ij} \frac{\partial \phi_k}{\partial x_i} \frac{\partial \psi_k}{\partial x_j} \, d\Omega = \int_{\Omega} \tau_{ij}(\vec{\phi}) \epsilon_{ij}(\vec{\psi}) \, d\Omega, \quad (5.15)$$

where  $\lambda$  is the margin of safety with respect to bifurcation (the current load can be multiplied by factor  $\lambda$  before stability is lost).

The equations may be interpreted as generalized eigenproblems and solved with standard techniques.



### 5.2.3 Rayleigh damping

Damping may be taken into consideration using viscous damping or Rayleigh damping, in which it is assumed that the damping matrix  $C$  is proportional to the mass  $M$  and stiffness matrices  $K$ , or

$$C = \alpha M + \beta K \quad (5.16)$$

The identification of suitable damping coefficients  $\alpha$  and  $\beta$  may be a difficult task.

### 5.2.4 Boundary conditions

For each boundary either a Dirichlet boundary condition

$$d_i = d_i^b \quad (5.17)$$

or a force boundary condition

$$\tau \cdot \vec{n} = \vec{g} \quad (5.18)$$

must be given. The default boundary condition is the natural boundary condition which implies that  $\vec{g} = 0$ .

The user may give spring  $k$  or damping  $\lambda$  coefficients on the boundary. These enable the introduction of the force term in the form

$$\vec{g} = k\vec{d} + \lambda \frac{\partial \vec{d}}{\partial t} \quad (5.19)$$

which may be solved implicitly maintaining the linear form of the equation.

### 5.2.5 Model lumping

For linear structures it is possible to create a lumped model that gives the same dependence between force and displacement as the original distributed model,

$$\vec{F} = \mathbf{K} \vec{D} \quad (5.20)$$

where  $\vec{F} = (F_x F_y F_z M_x M_y M_z)^T$  and  $\vec{D} = (D_x D_y D_z \phi_x \phi_y \phi_z)^T$ . However, the lumped model is not uniquely defined as it depends on the force or displacement distribution used in the model lumping. In the current model lumping procedure the lumping is done with respect to a given boundary. The lumped force and momentum are then integrals over this boundary,

$$F_i = \int_A f_i dA. \quad (5.21)$$

Lumped displacements and angles are determined as the mean values over the boundary,

$$D_i = \frac{1}{A} \int_A d_i dA. \quad (5.22)$$

Therefore the methodology works best if the boundary is quite rigid in itself.

There are two different model lumping algorithms. The first one uses pure lumped forces and lumped moments to define the corresponding displacements and angles. In 3D this means six different permutations. Each permutation gives one row of the inverse matrix  $\mathbf{K}^{-1}$ . Pure lumped forces are obtained by constant force distributions whereas pure moments are obtained by linearly varying loads vanishing at the center of area. Pure moments are easily achieved only for relatively simple boundaries which may limit the usability of the model lumping utility.

The second choice for model lumping is to set pure translations and rotations on the boundary and compute the resulting forces on the boundary. This method is not limited by geometric constraints. Also here six permutations are required to get the required data. In this method the resulting matrix equation is often better behaving as in the model lumping by pure forces which may be a reason another reason to favour this procedure.

## 5.3 Keywords

`Solver solver id`

Note that all the keywords related to linear solver (starting with `Linear System`) may be used in this solver as well. They are defined elsewhere.

`Equation String [StressSolver]`

A describing name for the solver. This can be changed but it must be given,

`Procedure File "StressSolve" "StressSolver"`

Name of the solver subroutine.

`Eigen Analysis Logical`

Modal or stability analysis may be requested with this keyword.

`Eigen System Values Integer`

The number of the lowest eigen states must be given with this keyword, if modal or stability analysis is in effect.

`Harmonic Analysis Logical`

Time-harmonic analysis where the solution becomes complex if damping is defined. The solution algorithm assumes that the diagonal entries in the matrix equation dominates.

`Frequency Real`

The frequency related to the harmonic analysis. If the simulation type is `scanning` this may a scalar function, otherwise it is assumed to be a vector of the desired frequencies.

`Displace Mesh Logical`

Should the mesh be deformed by the displacement field. The default is `True` except for eigen and harmonic analysis.

`Stability Analysis Logical`

If set to `true`, then eigen analysis is stability analysis. Otherwise modal analysis is performed.

`Geometric Stiffness Logical`

If set to `true`, then geometric stiffness is taken into account in modal analysis.

`Calculate Strains Logical`

Computes the strain tensor of the solution.

`Calculate Stresses Logical`

If set to `true` the stress tensor will be computed. Also von Mises will be computed by default.

`Calculate Principal Logical`

Computes the principal stress components.

`Calculate Pangle Logical`

Calculate the principal stress angles.

`Model Lumping Logical`

If model lumping is desired this flag should be set to `True`.

`Model Lumping Filename File`

The results from model lumping are saved into an external file the name of which is given by this keyword.

`Fix Displacements Logical`

This keyword defined if the displacements or forces are set and thereby chooses the model lumping algorithm.

`Constant Bulk System Logical`

For some type of analysis only the boundary conditions change from one subroutine call to another. Then the original matrix may be maintained using this logical keyword. The purpose is mainly to save time spent on matrix assembly.

Update Transient System Logical

Even if the matrix is defined constant it may change with time. The time may also be pseudo-time and then for example the frequency could change with time thus making the harmonic system different between each timestep. This keyword has effect only if the previous keyword is also defined to be true.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies:

Stress Analysis Logical

if set to True, solve the Navier equations.

Plane Stress Logical

If set to True, compute the solution according to the plane stress situation  $\tau_{zz} = 0$ . Applies only in 2D.

Body Force bf id

The body force section may be used to give additional force terms for the equations.

Stress Bodyforce 1 Real

Stress Bodyforce 2 Real

Stress Bodyforce 3 Real

The keywords may be used to give volume force.

Stress Bodyforce 1 im Real

Stress Bodyforce 2 im Real

Stress Bodyforce 3 im Real

The keywords may be used to give volume force for the imaginary part. May be applied only to harmonic solution of the equation.

Stress Load Real

Keyword for defining stress load for the body.

Strain Load Real

Keyword for defining strain load for the body.

Initial Condition ic id

The initial condition section may be used to set initial values for the field variables. The following variables are active:

Displacement i Real

For each displacement component  $i = 1, 2, 3$ .

Material mat id

The material section is used to give the material parameter values. The following material parameters may be set in Navier equations.

Density Real The value of density is given with this keyword. The value may be constant, or variable.

Poisson Ratio Real

For isotropic materials Poisson ratio must be given with this keyword.

Youngs Modulus Real

The elastic modulus must be given with this keyword. The modulus may be given as a scalar for the isotropic case or as  $6 \times 6$  (3D) or  $4 \times 4$  (2D and axisymmetric) matrix for the anisotropic case. Although the matrices are symmetric, all entries must be given.

Rayleigh Damping Logical

Apply rayleig damping.

Rayleigh Damping Alpha Real

Rayleigh Damping Beta Real

The parameters of Rayleigh damping.

Pre Stress Real

One may give prestress as an input to the solver.

Pre Strain Real

One may give prestrain as an input to the solver.

Heat Expansion Coefficient Real

If thermal stresses are to be computed this keyword may be used to give the value of the heat expansion coefficient. May also be given as  $3 \times 3$  tensor for 3D cases, and  $2 \times 2$  tensor for 2D cases.

Reference Temperature Real

If thermal stresses are to be computed this keyword may be used to give the value of the reference temperature of the stress free state.

Rotate Elasticity Tensor Logical

For anisotropic materials the principal directions of anisotropy do not always correspond to the coordinate axes. Setting this keyword to True enables the user to input Youngs Modulus matrix with respect to the principal directions of anisotropy. Otherwise Youngs Modulus should be given with respect to the coordinate axis directions.

Material Coordinates Unit Vector 1(3) Real [1 0 0]

Material Coordinates Unit Vector 2(3) Real [0 0.7071 0.7071]

Material Coordinates Unit Vector 3(3) Real [0 -0.7071 0.7071]

The above vectors define the principal directions of the anisotropic material. These are needed only if Rotate Elasticity Tensor is set to True. The values given above define the direction of anisotropy to differ from the coordinate axes by a rotation of 45 degrees about x-axis, for example.

Mesh Velocity 1 Real

Mesh Velocity 2 Real

Mesh Velocity 3 Real

Keywords for giving the mesh velocity

Boundary Condition bc id

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Navier equations are

Displacement i Real

Dirichlet boundary condition for each displacement component  $i = 1, 2, 3$ .

Normal-Tangential Displacement Logical

The Dirichlet conditions for the vector variables may be given in normal-tangential coordinate system instead of the coordinate axis directed system. The first component will in this case be the normal component and the components 2,3 two orthogonal tangent directions.

Normal Force Real

A force normal to the boundary is given with this keyword.

Force i Real

A force in the given in coordinate directions  $i = 1, 2, 3$ .

Force i Im Real

An imaginary part of the force in the given in coordinate directions  $i = 1, 2, 3$ . Applies only to harmonic simulation.

Normal Force Im Real

A imaginary part of the force normal to the boundary is given with this keyword. Applies only to harmonic simulation.

Damping Real

Introduces a force proportional to velocity with the given coefficient. Also Damping i and Damping ij may be given.

Spring Real

Introduces a force proportional to displacement with the given coefficient. Also Spring i and Spring ij may be given.

Stress Load Real

Keyword for defining stress load for the boundary.

Model Lumping Boundary Logical True

When using the model lumping utility the user must define which boundary is to be loaded in order to determined the lumped model.

# Model 6

## Finite Elasticity

**Module name:** ElasticSolve

**Module subroutines:** ElasticSolver

**Module authors:** Mikko Lyly, Juha Ruokolainen, Mika Malinen

**Document authors:** Mika Malinen

**Document edited:** Dec 2nd 2011

### 6.1 Introduction

This chapter is concerned with the equations which describe finite deformations of elastic solids. As the region of space occupied by the body at time  $t$  is not known in advance, it is not convenient to handle the equations in the form that expresses the field equations on the deformed configuration. Therefore the associated boundary-value problem is formulated here by employing the reference configuration which equals to the region occupied by the body before the deformation.

### 6.2 Field equations

Let  $\Omega$  denote the reference configuration, so that the region of space occupied by the body at the time  $t$  is given by

$$\Omega_t = \mathbf{x}(\Omega, t),$$

with  $\mathbf{x}(\cdot, t)$ , for fixed  $t$ , a deformation of  $\Omega$ . If we define the displacement  $u(p, t)$  of the material point  $p \in \Omega$  by

$$u(p, t) = \mathbf{x}(p, t) - p,$$

the basic system of field equations describing finite deformations of the body  $\Omega$  may then be written as

$$\begin{aligned}\rho_0 \ddot{u} - \text{Div } S &= \rho_0 b_0, \\ S &= F \bar{S}(C), \\ F &= I + \nabla u, \quad C = F^T F,\end{aligned}\tag{6.1}$$

where  $\rho_0$  gives the density when the body is in the reference position, the tensor field  $S$  is referred to as the first Piola-Kirchhoff stress, and  $b_0 = b_0(\mathbf{x}(p, t), t)$  gives the body force measured per unit mass. The response function  $\bar{S}(C)$  generally characterizes the second Piola-Kirchhoff stress as a function of the right Cauchy-Green tensor  $C$ . It is assumed here that either

$$\bar{S}(C) = \frac{\lambda}{2} [\text{tr}(C - I)]I + \mu(C - I)\tag{6.2}$$

or, when the neo-Hookean material is assumed,

$$\bar{S}(C) = \frac{\lambda}{2}[(\det F)^2 - 1]C^{-1} + \mu(I - C^{-1}), \quad (6.3)$$

with  $\lambda$  and  $\mu$  the Lamé material parameters. We note that a common way to express (6.2) uses the strain tensor

$$E = 1/2(C - I), \quad (6.4)$$

so that the constitutive law (6.2) may be written as

$$\bar{S} = \lambda \text{tr}(E)I + 2\mu E.$$

### 6.3 Boundary conditions and linearization

Boundary conditions may be obtained by prescribing the displacement and surface traction on complementary parts  $\Gamma_1$  and  $\Gamma_2$  of the boundary  $\partial\Omega$ , respectively. The displacement boundary condition is simply of the form

$$u = \hat{u}(p, t), \quad (6.5)$$

with  $\hat{u}$  a prescribed vector field on  $\Gamma_1 \times [0, T]$ .

Handling surface traction is more involved. We here assume that the surface traction  $s$  on the deformed surface  $\mathbf{x}(\Gamma_2, t)$  is normal to the tangent plane of the deformed boundary surface, so that

$$s(x, t) = g(x, t)m(x),$$

where  $m(x)$  is the unit normal on the deformed configuration,  $x \in \mathbf{x}(\Gamma_2, t)$  for any  $t$ , and  $g(x, t)$  is a given scalar function. This can be shown to be equivalent to specifying the values of  $S$  such that

$$Sn = \hat{g}(\det F)F^{-T}n \quad \text{on } \Gamma_2 \times [0, T], \quad (6.6)$$

where  $n = n(p)$  is the normal vector to the boundary  $\partial\Omega$  and  $\hat{g} = \hat{g}(p, t) = g(\mathbf{x}(p, t), t)$ . The constraint (6.6) gives rise to a nonlinear force term which is handled in the computational solution iteratively by using a lagged-value approximation.

To handle the resulting system computationally, the constitutive law  $S = S(F)$  has to be linearized also. This can be done in terms of the derivative  $DS(F)[U]$  by using the approximation

$$S(F_{k+1}) = S(F_k) + DS(F_k)[F_{k+1} - F_k].$$

The solver, however, employs the displacement variables directly and hence considers the stress to be the function of  $u$ , writing  $S = S(u)$ . We then have

$$S(u + v) = S(u) + F(u)D\bar{S}(u)[\nabla v] + \nabla v \bar{S}(u) + o(v),$$

which leads to the linearization

$$\begin{aligned} S(u_{k+1}) &= S(u_k) + F(u_k)D\bar{S}(u_k)[\nabla u_{k+1} - \nabla u_k] + (\nabla u_{k+1} - \nabla u_k)\bar{S}(u_k) \\ &= S(u_k) - F(u_k)D\bar{S}(u_k)[\nabla u_k] - \nabla u_k \bar{S}(u_k) + F(u_k)D\bar{S}(u_k)[\nabla u_{k+1}] + \nabla u_{k+1} \bar{S}(u_k). \end{aligned} \quad (6.7)$$

In the case of (6.2) the derivative of the response function is given by

$$D\bar{S}(u)[\nabla v] = \frac{\lambda}{2} \text{tr}[F(u)^T \nabla v + \nabla v^T F(u)]I + \mu[F(u)^T \nabla v + \nabla v^T F(u)],$$

while

$$\begin{aligned} D\bar{S}(u)[\nabla v] &= \lambda[\det F(u)]^2 \text{tr}[\nabla v F(u)^{-1}]C(u)^{-1} + \\ &\quad \left\{ \mu - \frac{\lambda}{2} [\det F(u) - 1][\det F(u) + 1] \right\} C(u)^{-1} [F(u)^T \nabla v + \nabla v^T F(u)] C(u)^{-1} \end{aligned}$$

for the neo-Hookean material obeying (6.3). In the computation of the associated tangential stiffness matrix, which result from substituting the approximation (6.7) into the discrete version of the weak formulation of (6.1), the following self-adjointness property

$$F(u_k)D\bar{S}(u_k)[\nabla u_{k+1}] \cdot \nabla v + \nabla u_{k+1} \bar{S}(u_k) \cdot \nabla v = F(u_k)D\bar{S}(u_k)[\nabla v] \cdot \nabla u_{k+1} + \nabla v \bar{S}(u_k) \cdot \nabla u_{k+1}$$

is also used.

## 6.4 Stress and strain computation

In addition to solving for the displacement, the solver can produce the strain and stress fields associated with the solution. In this connection the strain tensor is defined by (6.4). In the stress computation the material description of the usual Cauchy stress  $T$  is produced. That is, we measure the surface force per unit area in the deformed configuration and write  $T(p, t) = T(\mathbf{x}(p, t), t)$ . We note that this stress is related to one of the Piola-Kirchhoff stresses as

$$T = (\det F)^{-1} S F^T = (\det F)^{-1} F \bar{S}(C) F^T. \quad (6.8)$$

## 6.5 Keywords

Material mat id

The following keywords relate to giving the material parameters for the finite elasticity solver.

Density Real

This keyword is used for defining the density field  $\rho_0$  corresponding to the reference configuration.

Poisson Ratio Real

The values of the scalar Lamé material parameters depend on the Poisson ratio as in the case of the linear elasticity solver. The Poisson ratio is given by using this keyword.

Youngs Modulus Real

The values of the scalar Lamé material parameters depend on the Youngs modulus as in the case of the linear elasticity solver. This keyword specifies the value of the Youngs modulus.

Solver solver id

Equation String [ElasticSolver]

A describing name for the solver. This can be changed but it must be given,

Procedure File "ElasticSolve" "ElasticSolver"

Name of the solver subroutine.

Neo-Hookean Material Logical

By default the constitutive law (6.2) is employed. Switching to the neo-Hookean material model (6.3) can be performed by giving the value True for this keyword.

Calculate Strains Logical

If the value True is given for this keyword, the strains are also computed. The strain components are output into an ordered six-tuple as  $(E_{xx} \ E_{yy} \ E_{zz} \ E_{xy} \ E_{yz} \ E_{xz})$ .

Calculate Stesses Logical

If the value True is given for this keyword, the Cauchy stress (6.8) is also computed. The stress components are output into an ordered six-tuple in the same way as the strain.

Body Force bf id

The body force section may be used to define volume forces.



Inertial Bodyforce  $j$  Real

This keyword may be used to give the component  $j$  of the body force field  $b_0$  measured per unit mass. This considers correctly the density changes.

Stress Bodyforce  $j$  Real

This keyword may be used to give the component  $j$  of the body force field  $b_0$  measured per unit volume. Note that for large displacement the density is not conserved and hence this force would be more appropriate for some real volumetric forces, whatever they might be.

Boundary Condition  $bc$   $id$

Non-vanishing surface forces that are defined on the deformed configuration and have standard interpretation in the deformed configuration (force per surface area on the deformed surface) can only be given in the normal direction to the deformed surface. On the other hand, the Dirichlet conditions (6.5) for the displacement variable of the solver can be given in the standard manner.

Normal Force Real

A surface force normal to the deformed boundary is given with this keyword.

# Model 7

## Mesh Adaptation Solver

**Module name:** MeshSolve

**Module subroutines:** MeshSolver

**Module authors:** Juha Ruokolainen

**Document authors:** Juha Ruokolainen

**Document edited:** April 5th 2002

### 7.1 Introduction

Moving boundaries are often encountered in different types of computations, i.e. Fluid-Structure-Interaction (FSI) problems. Moving boundaries pose the problem of mesh adaptation to the boundaries. With this solver, instead of generating the whole mesh afresh when a boundary is moved, the current mesh nodes are moved so that the mesh hopefully remains 'good'. This type of solution only applies to cases where the changes in geometry are relatively small. It is, however, often cheaper in terms of CPU time to use this module in contrast to regenerate the whole mesh.

For time dependent simulations the mesh deformation velocity is also computed. The name of this variable is `Mesh Velocity`.

### 7.2 Theory

The equation for elastic deformation of the mesh, given displacement of the boundaries, may be written as

$$-\nabla \cdot \tau = 0, \quad (7.1)$$

where,  $\vec{d}$  is the mesh displacement field and  $\tau$  the stress tensor.

The stress tensor given in terms of Lamé parameters is:

$$\tau = 2\mu\varepsilon + \lambda\nabla \cdot \vec{d}I \quad (7.2)$$

where  $\mu$  and  $\lambda$  are the first and second Lamé parameters respectively, and  $I$  is the unit tensor. The linearized strains are given as:

$$\varepsilon = \frac{1}{2}(\nabla \vec{d} + (\nabla \vec{d})^T). \quad (7.3)$$

Lamé parameters in terms of Young's modulus and Poisson ratio read

$$\mu = \frac{Y\kappa}{(1-\kappa)(1-2\kappa)}, \quad \lambda = \frac{Y}{2(1+\kappa)} \quad (7.4)$$

Quantities  $Y$  and  $\kappa$  are the Young's modulus and Poisson ratio respectively. Note that in this context the values of the material parameters are fictional, and may be chosen to help convergence or quality of the resulting mesh.

### 7.2.1 Boundary Conditions

For each boundary a Dirichlet boundary condition

$$d_i = d_i^b \quad (7.5)$$

may be given. Usually this the displacement is given a priori or computed by, for example, the elasticity solvers.

## 7.3 Keywords

`Solver solver id`

Note that all the keywords related to linear solver (starting with `Linear System`) may be used in this solver as well. They are defined elsewhere.

`Equation String [Mesh Update]`

The name of the equation. If different from the default name `Mesh Update` then the following two keywords must be defined as well.

`Procedure File "NonphysicalMeshSolve" "NonphysicalMeshSolver"`

Name of the solver subroutine.

`Variable String`

Name of the variable.

`Equation eq id`

The equation section is used to define a set of equations for a body or set of bodies:

`Mesh Update Logical`

if set to `True`, solve the mesh adaptation equations.

`Material mat id`

The material section is used to give the material parameter values. The following material parameters may be set in Navier equations.

`Poisson Ratio Real`

For isotropic materials Poisson ratio must be given with this keyword.

`Youngs Modulus Real`

The elastic modulus must be given with this keyword.

`Boundary Condition bc id`

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Navier equations are

`Mesh Update i Real`

Dirichlet boundary condition for each displacement component  $i = 1, 2, 3$ . The boundary displacement may be computed some other solver. The computed displacement field then may be used in the setting in the following way:

`Mesh Update i Equals Displacement i` with  $i = 1, 2, 3$ . Including such lines in the boundary condition setting will give the mesh update on the boundary directly from the displacement solver.

## 7.4 Examples

### 7.4.1 A Simple FSI computation using MeshSolver

In this simple computation Navier-Stokes equations are solved in the domain shown in the two pictures below. On the left there is an inflow boundary, and on the right an outflow boundary. In the block inside the flow domain (the mesh is not shown for the block), the elasticity equations are solved. The block is fixed at the bottom, and is otherwise deformed by the fluid pressure and flow fields. The whole system is iterated as follows:

- Solve fluid flow,
- Solve deformation of the block,
- Solve the fluid domain mesh with MeshSolver according to the displacements of the block,

until convergence is obtained.

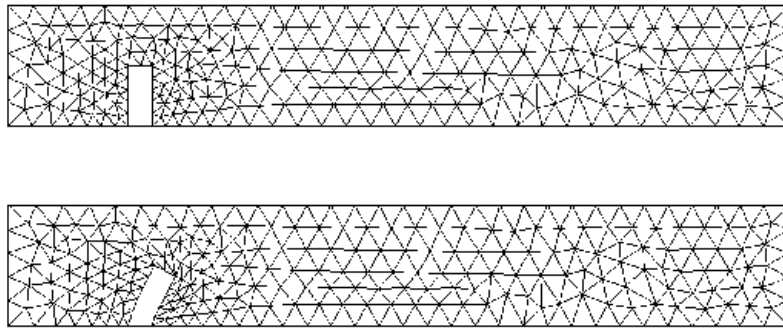


Figure 7.1: The original computational mesh (up), and the mesh of the converged solution (down) of a FSI computation.

# Model 8

## Elastic Linear Plate Solver

**Module name:** Smitc

**Module subroutines:** SmitcSolver

**Module authors:** Mikko Lyly, Jani Paavilainen

**Document authors:** Mikko Lyly, Peter Råback

**Document created:** August 26th 2002

### 8.1 Introduction

The linear elastic plate elements of Elmer are based on the shear deformable model of Reissner and Mindlin. The finite element discretization is performed using the so called stabilized MITC-plate elements, which are free from numerical locking.

#### 8.1.1 Reissner-Mindlin model

The displacement  $\vec{u} = (u_x, u_y, u_z)$  of a Reissner-Mindlin plate (thin or moderately thick linearly elastic body which in its undeformed reference configuration occupies the three dimensional region  $\Omega \times (-\frac{t}{2}, \frac{t}{2})$ , where  $\Omega$  is the midsurface and  $t$  the thickness) is obtained from the kinematic equations

$$u_x(x, y, z) = -\theta_x(x, y) \cdot z \quad (8.1)$$

$$u_y(x, y, z) = -\theta_y(x, y) \cdot z \quad (8.2)$$

$$u_z(x, y, z) = w(x, y) \quad (8.3)$$

where  $\theta_x$  and  $\theta_y$  are components of the rotation vector  $\underline{\theta} = (\theta_x, \theta_y)$  and  $w$  is the transverse deflection of the mid-surface, see Figure 1.

The functions  $w$  and  $\underline{\theta} = (\theta_x, \theta_y)$  are determined from the condition that they minimize the total potential energy

$$\frac{1}{2} \int_{\Omega} \underline{\kappa} : \underline{m} \, d\Omega + \int_{\Omega} \underline{\gamma} \cdot \underline{q} \, d\Omega - \int_{\Omega} p w \, d\Omega \quad (8.4)$$

where  $p$  is the transverse pressure load,  $\underline{\kappa} = \frac{1}{2}(\underline{\nabla}\underline{\theta} + \underline{\nabla}\underline{\theta}^T)$  is the curvature of the mid-surface,  $\underline{\gamma} = \underline{\nabla}w - \underline{\theta}$  is the transverse shear strain,  $\underline{m} = \underline{\mathcal{E}} : \underline{\kappa}$  is the bending moment, and  $\underline{q} = \underline{\mathcal{G}} \cdot \underline{\gamma}$  the transverse shear force vector. The fourth order tensor  $\underline{\mathcal{E}}$  and second order tensor  $\underline{\mathcal{G}}$  define the bending and shear rigidities of the cross section, respectively. For linearly elastic materials we have  $\underline{\mathcal{G}} \cdot \underline{\gamma} = Gt\underline{\gamma}$  and

$$\underline{\mathcal{E}} : \underline{\kappa} = K[\underline{\kappa} + \frac{\nu}{1-\nu}(\text{tr}\underline{\kappa})\underline{I}] \quad (8.5)$$

where  $K = Et^3/[12(1-\nu^2)]$  is the bending stiffness,  $E$  is Young's modulus,  $G$  shear modulus, and  $\nu$  Poisson ratio. The design of the tensors  $\underline{\mathcal{E}}$  and  $\underline{\mathcal{G}}$  for orthotropic and perforated materials is discussed in section 8.3.

The minimizer of the energy satisfies the equilibrium equations

$$\underline{\nabla} \cdot \underline{m} + \underline{q} = 0 \quad (8.6)$$

$$-\underline{\nabla} \cdot \underline{q} = p \quad (8.7)$$

### 8.1.2 Surface tension

When surface tension is present, the following term is added to the energy:

$$\frac{1}{2} \int_{\Omega} \underline{\nabla} w \cdot \underline{T} \cdot \underline{\nabla} w \, d\Omega \quad (8.8)$$

where  $\underline{T}$  is a second order tensor representing the given normal force (usually  $\underline{T} = T \underline{I}$ , where  $T$  is constant). The equilibrium equation (8.7) is then rewritten as

$$-\underline{\nabla} \cdot (\underline{q} + \underline{T} \cdot \underline{\nabla} w) = p \quad (8.9)$$

### 8.1.3 Boundary conditions

The following boundary conditions can be applied in the Reissner-Mindlin plate model:

- Soft fixed edge:  $w = 0$  and  $\underline{\theta} \cdot \underline{n} = 0$
- Hard fixed edge:  $w = 0$  and  $\underline{\theta} = \underline{0}$
- Soft simply supported edge:  $w = 0$
- Hard simply supported edge:  $w = 0$  and  $\underline{\theta} \cdot \underline{t} = 0$
- Free edge:  $\underline{m} \cdot \underline{n} = 0$  and  $(\underline{q} + \underline{T} \cdot \underline{\nabla} w) \cdot \underline{n} = 0$

The boundary conditions can of course be non-homogenous as well. For fixed and simply supported edges the prescribed values of  $w$ ,  $\underline{\theta}$ ,  $\underline{\theta} \cdot \underline{n}$ , and  $\underline{\theta} \cdot \underline{t}$ , are taken into account on matrix level after finite element discretization. On the free part of the edge, the non-homogenous case is treated by adding the following terms in the energy:

$$\int_{\Gamma_{free}} q_n w \, d\Gamma + \int_{\Gamma_{free}} \underline{m}_n \cdot \underline{\theta} \, d\Gamma \quad (8.10)$$

where  $q_n = \underline{q} \cdot \underline{n}$  and  $\underline{m}_n = \underline{m} \cdot \underline{n}$  are prescribed functions.

### 8.1.4 Kirchhoff plates

When the thickness of the plate is small ( $t \ll \text{diam}(\Omega)$ ), the Reissner-Mindlin model can be considered as a penalty approximation of the classical plate model of Kirchhoff. The Kirchhoff model is obtained from (8.1)-(8.9) by enforcing the constraint  $\underline{\gamma} = \underline{0}$ . The governing equations are then reduced to

$$K \Delta \Delta w - T \Delta w = p \quad (8.11)$$

### 8.1.5 Transient and natural mode analysis

A transient plate model is obtained by adding the inertia term  $\rho t \ddot{w}$  on the left hand-side of (8.7), (8.9), and (8.11). Here  $\rho$  is the density of the material. The natural vibration frequencies and mode shapes are then obtained by taking  $p = 0$  and solving the Fourier transformed equations.

## 8.2 Finite element implementation

The direct minimization of (8.4) using the standard Galerkin finite element method fails due to the well known numerical locking phenomena (the method is unable to deal with the Kirchhoff constraint  $\gamma = \underline{0}$ , which becomes valid when  $t$  is small). In order to avoid locking, Elmer utilizes the so called SMITC (Stabilization and Mixed Interpolation of Tensorial Components) elements, which are known to be optimally convergent and work well under all conditions [4].

The linear element of the SMITC-family was first introduced by Brezzi, Fortin and Stenberg in [2]. The method is defined by replacing the shear energy term in (8.4) by the following numerical modification:

$$\int_{\Omega} \underline{\gamma}_h \cdot \underline{q}_h \, d\Omega \quad (8.12)$$

where  $\underline{\gamma}_h$  is called the reduced shear strain (sometimes also referred to as the assumed or substitute shear) and  $\underline{q}_h = (t^2 + \alpha h^2)^{-1} \mathcal{G} \cdot \underline{\gamma}_h$  the reduced shear force. Here  $h$  is the mesh size (the diameter of the biggest element) and  $\alpha > 0$  is a numerical stabilization parameter (typically  $\alpha = 0.15$ ).

The reduced shear  $\underline{\gamma}_h$  is defined elementwise such that

$$\underline{\gamma}_{h|K} = (a_K - b_K y, a_K + c_K x) \quad (8.13)$$

for any element  $K$ . The parameters  $a_K$ ,  $b_K$ , and  $c_K$ , are determined from the conditions

$$\int_E (\underline{\gamma} - \underline{\gamma}_h) \cdot \underline{t} \, ds = 0 \quad (8.14)$$

for every edge  $E$  of  $K$ . Here  $\underline{t}$  is the counterclockwise tangent to  $E$ .

It has been shown [3] that the linear SMITC-element is equivalent to the T3BL (Triangle, 3 nodes, Linked Interpolation) element of Xu, Auricchio and Taylor [8, 1], the anisoparametrically interpolateed MIN3 element of Tessler and Hughes [7], and the TRIA3 element of MacNeal [5]. We refer to [3] for a more detailed discussion.

## 8.3 Elastic parameters for perforated plates

In microelectromechanical systems the plate structures are often perforated in order to reduce the squeezed-film damping effect. This has also an effect on the elasticity equation. If there are so many holes that it is not feasible to treat them individually their effect may be homogenized over the whole structure. In practice this means that the original elastic parameters are replaced by effective parameters that take into account the holes. This method was reported by Pedersen et al. [6] and implemented into the solver by Jani Paavilainen.

In the homogenization effective parameters for an ortotropic plate are defined so that the unperforated model approximates the perforated plate. The basic idea is to set the analytical expressions of the deformation energies of the perforated and unperforated plates equal. This method is inherently limited to simple geometries where analytical expressions may be found. So far, only square holes have been implemented in the solver.

The unit cell of a perforated plate may be assumed to consist of one small square plate with side  $b - 2a$ , and of four beams of length  $a$  as shown in Figure 8.1. Using approximate formulas an analytical formula for the deformation energy of the perforated plate is obtained. This has to be equal to the deformation energy of an unperforated ortotropic membrane. From this condition we get a set of equations from which the effective parameters may be solved.

The elasticity tensor has three independent components,  $C_{11} = C_{22}$ ,  $C_{12} = C_{21}$ , and  $C_{44}$ . The expressions for these are [6],

$$C_{11} = C_{22} = \frac{E}{b^2} \left\{ \frac{b(b-2a)}{1-\nu^2} + \frac{a(b-2a)^2}{b} \right\} \quad (8.15)$$

$$C_{12} = C_{21} = \frac{\nu E(b-2a)}{b(1-\nu^2)} \quad (8.16)$$

$$C_{44} = \frac{E}{4b^2(1+\nu)} \left\{ 2b(b-2a) + \frac{12Ka(b-2a)}{bh^3} \right\}. \quad (8.17)$$

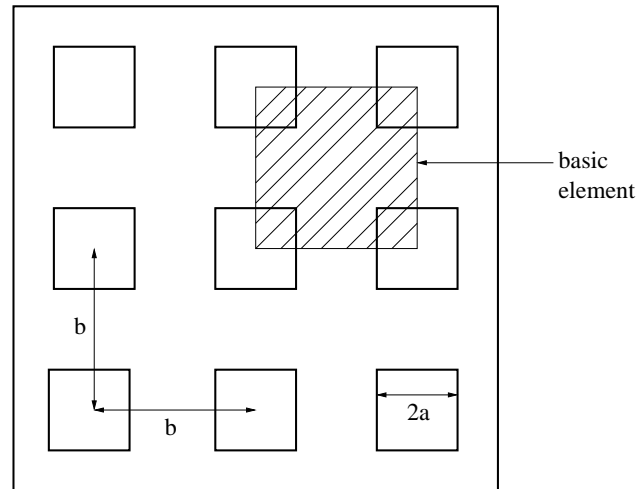


Figure 8.1: The basic element of the perforated plate consisting of five rectangular beams

where  $K$  is a constant<sup>1</sup>, defined as

$$K = \begin{cases} \frac{1}{3} \left( 1 - 0.63 \frac{b-2a}{h} \right) (b-2a)^3 h, & \text{jos } h > b-2a \\ \frac{1}{3} \left( 1 - 0.63 \frac{h}{b-2a} \right) (b-2a) h^3, & \text{jos } h < b-2a. \end{cases} \quad (8.18)$$

The midplane tension of the perforated plate may be reduced to lateral stresses of the ortotropic plate by a simple scaling,

$$T = \sqrt{(1 - 4a^2/b^2)} T_0, \quad (8.19)$$

where is the tension  $T_0$  of the perforated plate. Using this reduced tension and the modified material parameters of equations (8.15), (8.16) and (8.17) the ortotropic plate mimics the behavior of the perforated plate when looking at macroscopic quantities. However, the model is not suitable for approximating maximum stresses around the holes, for example.

## 8.4 Keywords

Solver `solver id`

Equation `String` `SmitcSolver`

Procedure `File` `"Smitc"` `"SmitcSolver"`

The procedure which includes the linear plate model.

Variable `String` `Deflection`

This may be of any name as far as it is used consistently also elsewhere.

Variable `DOFs` `Integer` `3`

Degrees of freedom for the deflection. The first degree is the displacement and the two following ones are its derivatives in the direction of the coordinate axis.

Eigen `Analysis` `Logical`

Also the eigenvalues and eigenmodes of the elasticity equation may be computed. This is done automatically by calling a eigensolver after the original equation has been solved. The default is `False`.

<sup>1</sup>In article [6] there is an error in the definition of  $K$ . In the article there is an expression  $(b-2a)/h^3$ , which would make  $K$  discontinuous at  $h = b-2a$ .



Eigen System Values Integer

If the eigenvalues are computed this keyword gives the number of eigenmodes to be computed. The lowest eigenvalues are always solved for.

Hole Correction Logical

If the plate is perforated the holes may be taken into account by a homogenized model. This is activated with this keyword. The default is False.

Procedure File "Smict" "SmitcSolver"

Material mat id

Density Real

Density of the plate.

Poisson ratio Real

Youngs modulus Real

The elastic parameters are given with Youngs modulus and Poisson ratio.

Thickness Real

Thickness of the plate.

Tension Real

The plate may be pre-stressed.

Hole Size Real

Hole Fraction Real

If Hole Correction is True the solver tries to find the size and relative fraction of the holes. If these are present the hole is assumed to be a square hole.

Boundary Condition bc id

Deflection i Real

Dirichlet BC for the components of the deflection, i=1,2,3.

Body Force bf id

Pressure Real

Possibility for a body forces. For coupled systems there is a possibility to have up to three forces. The two others are then marked with Pressure B and Pressure C.

Spring Real

The local spring which results to a local force when multiplied by the displacement.

Damping Real

The local damping which results to a local force when multiplied by the displacement velocity. The spring and damping may also be defined as material parameters.

## Bibliography

- [1] F. Auricchio and R.L. Taylor. A triangular thick plate finite element with an exact thin limit. *Finite Element in Analysis and Design*, 19:57–68, 1995.
- [2] M. Fortin F. Brezzi and R. Stenberg. Error analysis of mixed-interpolated elements for reissner-mindlin plates. *Mathematical Models and Methods in Applied Sciences*, 1:125–151, 1991.
- [3] M. Lyly. On the connection between some linear triangular reissner-mindlin plate bending elements. *Numerische Mathematik*, 85:77–107, 2000.
- [4] M. Lyly and R. Stenberg. Stabilized mitc plate bending elements. In *Advances in Finite Element Techniques (M. Papadrakakis and B.H.V. Topping, eds.) Civil Comp Press.*, pages 11–16, 1994.

- [5] R.H. MacNeal. Derivation of element stiffness matrices by assumed strain distribution. *Nucl. Engrg. Design*, 70:3–12, 1982.
- [6] M. Pedersen, W. Olthuis, and P. Bergveld. On the mechanical behaviour of thin perforated plates and their application in silicon condenser microphones. *Sensors and Actuators, A* 54:6.
- [7] A. Tessler and T.J.R. Hughes. A three-node mindlin plate element with improved transverse shear. *Comp. Meths. Appl. Mech. Engrg.*, 50:71–101, 1985.
- [8] Z. Xu. A thick-thin triangular plate element. *Int. J. Num. Meths. Eng.*, 33:963–973, 1992.

## Model 9

# Helmholtz Solver

**Module name:** HelmholtzSolve

**Module subroutines:** HelmholtzSolver

**Module authors:** Juha Ruokolainen, Mikko Lyly, Mika Malinen, Peter Råback

**Document authors:** Juha Ruokolainen, Peter Råback

**Document created:** 30.3.2006

**Document edited:** 30.6.2011

## 9.1 Introduction

This module solves the Helmholtz equation, which is the Fourier transform of the wave equation. In addition to the basic equation the solver may take into consideration variable density, background convections field, simple damping and special boundary conditions with other time-harmonic solvers.

## 9.2 Theory

For example, sound propagation in air is fairly well described by the wave equation:

$$\frac{1}{c^2} \frac{\partial^2 p}{\partial t^2} - \nabla^2 p = 0. \quad (9.1)$$

When linear the equation may be written in frequency space as

$$k^2 P + \nabla^2 P = 0, \quad (9.2)$$

where  $k = \omega/c$ . This is the Helmholtz equation. The instantaneous pressure may be computed from the given field  $P$ :

$$p(t) = \Re(Pe^{i\omega t}) = \Re(P) \cos(\omega t) - \Im(P) \sin(\omega t), \quad (9.3)$$

where  $i = \sqrt{-1}$  is the imaginary unity.

In Elmer the equation has an added term which is proportional to first time derivative of the field, whereupon the equation becomes

$$(k^2 - ikD)P + \nabla^2 P = 0, \quad (9.4)$$

where  $D$  is the damping factor.

### 9.2.1 Boundary Conditions

The usual boundary condition for the Helmholtz equation is to give the flux on the boundary:

$$\nabla P \cdot \vec{n} = g, \quad (9.5)$$

also Dirichlet boundary conditions may be set. The Sommerfeldt or far field boundary condition is as follows

$$\nabla P \cdot \vec{n} + \frac{i\omega}{Z} P = 0, \quad (9.6)$$

where the complex-valued quantity  $Z$  may be defined by the user. It is noted that incoming and outgoing waves may be approximated by setting  $Z = \pm c$ , respectively.

A special kind of flux condition is one with a given harmonic velocity field that is obtained from a harmonic solution of a flow or structure equation. When the velocity field  $\vec{v}$  is given then the flux is obtained from

$$g = i\omega\rho\vec{v} \cdot \vec{n} \quad (9.7)$$

where  $\rho$  is the fluid density. If harmonic displacement is given instead a further term  $i\omega$  appears in the equation.

## 9.3 Keywords

### Simulation

This section gives values to parameters concerning the simulation as whole.

#### Frequency Real

Give simulation frequency in units of 1/s. Alternatively use the Angular Frequency keyword.

#### Angular Frequency Real

Give simulation frequency in units of 1/rad. Alternatively use the Frequency keyword.

### Solver solver id

Note that all the keywords related to linear solver (starting with Linear System) may be used in this solver as well. They are defined elsewhere. Note also that for the Helmholtz equation ILUT preconditioning works well.

#### Equation String [Helmholtz]

The name of the equation.

#### Procedure File ["HelmholtzSolve" "HelmholtzSolver"]

This keyword is used to give the Elmer solver the place where to search for the Helmholtz equation solver.

#### Variable String [Pressure]

Give a name to the field variable.

#### Variable DOFs Integer [2]

This keyword must be present, and *must* be set to the value 2.

#### Bubbles Logical

If set to True this keyword activates the bubble stabilization.

#### Use Density Logical

Historically the solver was able to solve only cases with constant density when it may be eliminated. If the density is however not constant this flag must be set True.

#### Velocity Variable Name String

If there is a Flow Interface then the name of the harmonic velocity variable may be specified. The default is Flow. Note that normal real valued velocity field is not suitable.

#### Displacement Variable Name String

If there is a Structure Interface then the name of the harmonic displacement variable may be specified. The default is Displacement. Note that normal real valued displacement field is not suitable, its complex valued eigenmode however is.

#### Displacement Variable Eigenmode Integer

If eigenmode is used for the interface this keyword is used to specify the number of the mode.

Displacement Variable Frequency Logical

If eigenmode is used for the interface this keyword may be used to choose the frequency to be the frequency of the computed eigenmode.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies:

Helmholtz Logical

If set to True, solve the Helmholtz equation, the name of the variable must match the Equation setting in the Solver section. Alternatively use the Active Solvers keyword.

Initial Condition ic id

The initial condition section may be used to set initial values for the field variables. The following variables are active:

Pressure i Real

For each the real and imaginary parts of the solved field  $i = 1, 2$ .

Material mat id

The material section is used to give the material parameter values. The following material parameters may be set in Helmholtz equation.

Sound Speed Real

This keyword is use to give the value of the speed of sound.

Sound Damping Real

This keyword is use to give the value of the damping factor  $D$  in equation 9.4.

Density Real

If sound density is varying the density must be specified and its use must be enforced by the Use Density keyword.

Convection Velocity i Real

If the pressure field is convected by a background velocity field (as in the Doppler effect) then this keyword is used to give the velocity field.

Body Force bf id

Pressure Source i Real

The pressure sources of the real ( $i = 1$ ) and complex ( $i = 2$ ) parts. The use of this is rather seldom.

Boundary Condition bc id

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Helmholtz equations are

Pressure i Real

Dirichlet boundary condition for real and imaginary parts of the variable. Here the values  $i = 1, 2$  correspond to the real and imaginary parts of the unknown field.

Wave Flux 1,2 Real

Real and imaginary parts of the boundary flux. Here the values  $i = 1, 2$  correspond to the real and imaginary parts of the boundary flux.

Wave Impedance 1,2 Real

This keyword may be used to define the real and imaginary parts of the quantity  $Z$  in (9.6). Here the values  $i = 1, 2$  correspond to the real and imaginary parts of  $Z$ .

Flow Interface Logical

Use harmonic velocity field to set the flux.

Structure Interface Logical

Use harmonic displacement field to set the flux.

## Model 10

# The linearized Navier–Stokes equations in the frequency domain

**Module name:** Acoustics

**Module subroutines:** AcousticsSolver

**Module authors:** Mika Malinen

**Document authors:** Mika Malinen

**Document edited:** Aug 14, 2012

### 10.1 Introduction

The basic acoustic equations such as the Helmholtz equation, which is frequently taken as the starting point in acoustic analyses, are based on the assumption of lossless flow, i.e. the effects of viscosity and heat conduction are neglected. These effects are significant, however, in thin zones near a solid boundary. In this chapter, a system of acoustic field equations taking into account the effects of viscosity and heat conduction is described. Consideration is confined to the time-harmonic solution of these equations.

### 10.2 Mathematical model

The acoustic field equations may be derived using the general principles of continuum mechanics and supplementing these equations by suitable constitutive equations applicable for the fluid flow. Here the linearized versions of such equations are used to derive an approximate system of field equations appropriate to the small-amplitude acoustics problem.

In the following the velocity, density, pressure and temperature fields associated with the flow are denoted by  $\vec{v}$ ,  $\rho$ ,  $p$  and  $T$ , respectively. The notations  $\rho_0$ ,  $p_0$  and  $T_0$  are used for the values of the density, pressure and temperature at the equilibrium state.

#### 10.2.1 The field equations

Consider the acoustic equations based on the linearized equation of motion, the constitutive equation relating the stress to the motion for a Newtonian fluid, the kinematic relation, the linearized continuity equation and

the linearized energy equation

$$\begin{aligned}
 \rho_0 \frac{\partial \vec{v}}{\partial t} &= \nabla \cdot \bar{\bar{\sigma}} + \rho_0 \vec{b}, \\
 \bar{\bar{\sigma}} &= -p \bar{\bar{I}} + \lambda (\nabla \cdot \vec{v}) \bar{\bar{I}} + 2\mu \bar{\bar{D}}(\vec{v}), \\
 \bar{\bar{D}}(\vec{v}) &= \frac{1}{2} (\nabla \vec{v} + \nabla \vec{v}^T), \\
 \frac{\partial \rho}{\partial t} &= -\rho_0 \nabla \cdot \vec{v}, \\
 \rho_0 \frac{du}{dt} &= \kappa \Delta T - p_0 \nabla \cdot \vec{v} + \rho_0 h.
 \end{aligned} \tag{10.1}$$

Here  $\bar{\bar{\sigma}}$  is the stress tensor,  $\vec{b}$  is the body force (per unit mass),  $\lambda$  and  $\mu$  are parameters characterizing the viscosity of the fluid,  $u$  is the specific internal energy,  $\kappa$  is the heat conductivity and  $h$  is the internal supply of heat.

We supplement the system (10.1) by suitable equations of state assuming that the properties of the medium are expressible as functions of two state variables, say the temperature and density. We denote the specific entropy (entropy per unit mass) and its equilibrium value by  $s$  and  $s_0$  and assume that the relation

$$du = T_0 ds + (p_0/\rho_0^2) d\rho \tag{10.2}$$

is valid. In addition, we approximate the equations which give the changes of pressure and specific entropy in terms of the changes of the state variables by

$$p - p_0 = \frac{(\gamma - 1)\rho_0 C_V}{T_0 \beta} (T - T_0) + \frac{(\gamma - 1)C_V}{T_0 \beta^2} (\rho - \rho_0) \tag{10.3}$$

and

$$s - s_0 = \frac{C_V}{T_0} (T - T_0) - \frac{C_V(\gamma - 1)}{T_0 \rho_0 \beta} (\rho - \rho_0), \tag{10.4}$$

where  $C_V$  is the specific heat at constant volume (per unit mass),  $\gamma$  is the ratio of the specific heats at constant pressure and constant volume and  $\beta$  is the coefficient of thermal expansion defined by

$$\beta = -\frac{1}{\rho} \left( \frac{\partial \rho}{\partial T} \right)_p. \tag{10.5}$$

Confining consideration to the time-harmonic case, the solutions of the primary unknowns are assumed to be of the form

$$\begin{aligned}
 \vec{v}(x, t) &= \vec{v}(x) \exp(i\omega t), \\
 \rho(x, t) &= \rho_0 + \rho(x) \exp(i\omega t), \\
 T(x, t) &= T_0 + T(x) \exp(i\omega t),
 \end{aligned} \tag{10.6}$$

where  $\omega$  is the angular frequency. By the substitution of (10.6), the system of field equations based on (10.1)–(10.4) may be reduced to a system where the only unknown fields are the amplitudes  $\vec{v}(x)$  and  $T(x)$  of the disturbances of the velocity and temperature fields. The reduced system may be written as

$$\begin{aligned}
 i\omega \rho_0 \vec{v} + \frac{(\gamma - 1)C_V \rho_0}{\beta T_0} \nabla T - \left( \lambda + \mu - \frac{i(\gamma - 1)C_V \rho_0}{\omega T_0 \beta^2} \right) \nabla (\nabla \cdot \vec{v}) - \mu \Delta \vec{v} &= \rho_0 \vec{b}, \\
 -\kappa \Delta T + i\omega \rho_0 C_V T + \frac{(\gamma - 1)C_V \rho_0}{\beta} \nabla \cdot \vec{v} &= \rho_0 h.
 \end{aligned} \tag{10.7}$$

It is noted that after the solution of the velocity and temperature the amplitudes  $p(x)$  and  $\rho(x)$  of the disturbances of the pressure and density fields can readily be obtained from the relations

$$\begin{aligned}
 p &= \frac{(\gamma - 1)C_V \rho_0}{\beta T_0} \left( T + \frac{i}{\omega \beta} \nabla \cdot \vec{v} \right), \\
 \rho &= \frac{i\rho_0}{\omega} \nabla \cdot \vec{v}.
 \end{aligned} \tag{10.8}$$



For numerical approximation the system (10.7) is rewritten as a mixed problem; to motivate this, see [2]. The mixed formulation is written as

$$\begin{aligned} \vec{v} - i\nabla\tau - i\nabla\phi + i\epsilon\nabla(\nabla \cdot \vec{v}) + i\epsilon\Delta\vec{v} &= -(i/\omega)\vec{b}, \\ -\frac{i\epsilon}{(\gamma-1)\delta}\Delta\tau - \frac{1}{\gamma-1}\tau + \frac{1}{1+i\gamma k^2\epsilon\eta}\phi &= \frac{ih}{\beta T_0\omega^2}, \\ i\nabla \cdot \vec{v} - \frac{\gamma k^2}{1+i\gamma k^2\epsilon\eta}\phi &= 0, \end{aligned} \quad (10.9)$$

where  $\phi$  is an auxiliary unknown,  $\tau$  is the scaled temperature defined by

$$\tau = \frac{\omega\beta}{\gamma k^2} T \quad (10.10)$$

and

$$k = \frac{\omega}{c} \quad \epsilon = \frac{\mu}{\rho_0\omega} \quad \delta = \frac{C_V\mu}{\kappa} \quad \eta = \frac{\lambda}{\mu} \quad (10.11)$$

with  $c$  the adiabatic sound speed defined by the relation

$$T_0\beta^2 c^2 = \gamma(\gamma-1)C_V. \quad (10.12)$$

It should be noted that although the solver of the acoustic equations is based on the formulation (10.9), the solver overwrites the approximations of  $\tau$  and  $\phi$  by the unscaled temperature and the pressure, which may be expressed as

$$p = \rho_0\omega\left(\tau + \frac{1}{1+i\gamma k^2\epsilon\eta}\phi\right). \quad (10.13)$$

It is assumed that  $\beta = 1/T_0$ . This value is obtained by evaluating the coefficient of thermal expansion for the equilibrium values of the state variables in the case of an ideal gas.

### 10.2.2 Boundary conditions

Suitable boundary conditions must be adjoined to the field equations (10.1). In a usual manner, one may specify any component of the velocity vector on the boundary. Alternatively, if the component of the velocity vector is not specified at a point on the boundary, the corresponding component of the surface force vector may be prescribed. Similarly, as a boundary condition for the energy equation one may specify either the disturbance of the temperature or zero heat flux (the default boundary condition) on the boundary.

Specifying two impedances on the boundary provides an alternative way of prescribing boundary conditions in the normal direction to the boundary. Firstly, one may specify the specific acoustic impedance  $Z$  which is defined to be the ratio of the normal component of the surface force vector (which equals to the pressure in the case of a nonviscous Newtonian fluid with no bulk viscosity) to the normal component of the velocity vector at a point on the boundary, i.e. one may specify

$$Z = \frac{\vec{n} \cdot \vec{\sigma}\vec{n}}{\vec{v} \cdot \vec{n}},$$

where  $\vec{n}$  is the outward unit normal vector to the boundary. Secondly, one may prescribe the ratio of the heat flux to the disturbance of the temperature at a point on the boundary by specifying

$$Z_T = \frac{\nabla T(x) \cdot \vec{n}}{T(x)}.$$

For example, outgoing waves may be approximated by setting  $Z = -\rho_0 c$  and  $Z_T = -i\omega/c$  on the outflow boundary.

Slip boundary conditions may also be used. The velocity slip boundary condition relating the tangential component of the surface force vector to the tangential velocity jump at a point on the boundary is written in the form

$$\vec{\sigma}\vec{n} \cdot \vec{t} = -\frac{c_\sigma}{2-c_\sigma} \left( \frac{2(\gamma-1)C_V(T_0+T_w)}{\pi} \right)^{1/2} \rho_0 (\vec{v} \cdot \vec{t} - \vec{v}_w \cdot \vec{t}),$$

where  $\vec{t}$  is a tangent vector to the boundary,  $c_\sigma$  is the momentum accommodation coefficient and  $T_w$  and  $\vec{v}_w$  are the reference wall temperature and velocity. Here the reference wall temperature is defined to be the deviation of the wall temperature from the equilibrium temperature  $T_0$ . The similar boundary condition for the heat flux is given by

$$\kappa \nabla T \cdot \vec{n} = -\frac{c_T(\gamma + 1)}{2(2 - c_T)} \left( \frac{2(\gamma - 1)C_V(T_0 + T_w)}{\pi} \right)^{1/2} \rho_0 C_V (T - T_w),$$

where  $c_T$  is the energy accommodation coefficient.

### 10.3 The use of block preconditioning

The finite element approximation of the system (10.9) leads usually to large linear systems which have to be solved using preconditioned iterative methods. The general preconditioners available in Elmer may not always work satisfactorily well when the size of the system becomes larger and larger. To facilitate the solution of large problems, a problem-specific strategy for solving the linear systems that arise from the discretization of (10.9) has been developed. We describe the essential features of this solution method in this section; for a full description see [1].

The solution strategy discussed here is based on using nested GCR iterations in combination with a special block-preconditioner. Given the linear system

$$KU = F$$

the standard GCR method generates a sequence of improving approximations such that each iterate  $U^{(k)}$  minimizes  $\|F - KU^{(k)}\|$  over the so-called Krylov subspace. The standard algorithm can be modified easily so that the update direction can be chosen flexibly. Obviously, an optimal update direction would be given by the current error  $e^{(k)} = U - U^{(k)}$ . To find an approximation to the error one may apply an iterative method to

$$Ke^{(k)} = r^{(k)},$$

where  $r^{(k)} = F - KU^{(k)}$  is the residual. The preconditioned GCR algorithm which employs this idea to find the update direction can be described as follows:

Form an initial guess  $U^{(0)}$

$$r^{(0)} = F - KU^{(0)}$$

$$k = 0$$

while (Stopping criterion is not met)

Solve  $Ke^{(k)} = r^{(k)}$  iteratively using at most  $m$  iteration steps

$$v^{(k+1)} = Ke^{(k)}$$

do  $j = 1, k$

$$v^{(k+1)} = v^{(k+1)} - \langle v^{(j)}, v^{(k+1)} \rangle v^{(j)}$$

$$s^{(k+1)} = s^{(k+1)} - \langle v^{(j)}, s^{(k+1)} \rangle s^{(j)}$$

end do

$$v^{(k+1)} = v^{(k+1)} / \|v^{(k+1)}\|$$

$$s^{(k+1)} = s^{(k+1)} / \|v^{(k+1)}\|$$

$$U^{(k+1)} = U^{(k)} + \langle v^{(k+1)}, r^{(k)} \rangle s^{(k+1)}$$

$$r^{(k+1)} = r^{(k)} - \langle v^{(k+1)}, r^{(k)} \rangle v^{(k+1)}$$

$$k = k + 1$$

end while

Here the inner product and norm are defined by  $\langle v, r \rangle = \bar{v} \cdot r$  and  $\|v\| = \langle v, v \rangle^{1/2}$ . The GCR iteration steps used to update the approximation of  $U$  are referred to as outer iterations, while the iteration steps of the preconditioning iterative method used for solving the new search direction  $s^{(k+1)}$  are referred to as inner iterations.

Here the GCR algorithm is also used as the inner iterative method. In connection with the inner iterations a special block-preconditioner is used. The preconditioning is done by solving approximately the block-triangular system of the form

$$\begin{bmatrix} A & B^* & B^* & 0 \\ 0 & C & D & 0 \\ 0 & E & G & H \\ 0 & 0 & 0 & M \end{bmatrix} \begin{bmatrix} s_v \\ s_\tau \\ s_\phi \\ \psi \end{bmatrix} = \begin{bmatrix} r_v \\ r_\tau \\ r_\phi \\ r_\phi \end{bmatrix}, \quad (10.14)$$

where  $s_v$ ,  $s_\tau$  and  $s_\phi$  are update directions for the errors of  $v$ ,  $\tau$  and  $\phi$ . In addition,  $\psi$  is an auxiliary unknown which has been introduced so as to handle the boundary conditions of the preconditioner in a consistent way. In practice, an approximate solution of (10.14) is constructed by applying iterative methods to the systems of the type

$$M\psi = r_\phi, \quad (10.15)$$

$$\begin{bmatrix} C & D \\ E & G \end{bmatrix} \begin{bmatrix} s_\tau \\ s_\phi \end{bmatrix} = \begin{bmatrix} r_\tau \\ \hat{r}_\phi \end{bmatrix} \quad (10.16)$$

and

$$As_v = \hat{r}_v, \quad (10.17)$$

where  $\hat{r}_\phi$  and  $\hat{r}_v$  are modified right-hand sides the computation of which requires the evaluation of certain matrix-vector products. The special solver discussed hence requires that iterations are performed on three levels.

One of the key ideas in the nested application of the GCR algorithm is that the outer iteration can be made rapidly convergent. Consequently the optimality of the outer iteration need not be sacrificed by using such techniques as restarting or truncation. A few inner iterations are usually enough to produce a useful reduction in the outer iteration residual. Therefore the maximum number of iterations the inner iterative method may take need not be large. We have found that limiting the number of inner iterations by taking  $m = 5$  (this is the default value) or  $m = 10$  leads often to an efficient method. In addition to specifying the maximum number of inner iterations, the user can control the residual reduction in the outer iteration process by specifying the error tolerance  $\delta_{\text{inner}}$  so that the inner GCR iteration is stopped if

$$\|r^{(k)} - K\hat{s}^{(k+1)}\| < \delta_{\text{inner}}\|r^{(k)}\|, \quad (10.18)$$

where  $\hat{s}^{(k+1)}$  is the approximation to  $s^{(k+1)}$ . The default value of  $\delta_{\text{inner}}$  is 0.1.

Ideally a mild stopping criterion should be used in the solution of the linear systems of the type (10.15)–(10.17) which arise in the block-preconditioning of the inner iteration. The iterative solution of (10.15) being a cheap operation, the overall cost of the block-preconditioning is essentially determined by the solution of the systems of the type (10.16) and (10.17). These systems are solved using the preconditioned BiCGStab(l) method. In this connection the Jacobi and incomplete LU factorization preconditioners can be applied.

## 10.4 Utilities

The dissipative acoustics solver may be used in resolving the acoustic impedance of a system. The value of the impedance defined by

$$z_i = \frac{\int_{S_i} p \, dS}{\int_{S_i} \vec{v} \cdot (-\vec{n}) \, dS} \quad (10.19)$$

may automatically be calculated for a given boundary  $S_i$ . Here this impedance will be referred to as the specific acoustic impedance of the surface ( $S_i$ ).

The acoustic impedance is divided into two parts, a part in phase with velocity and a part out of phase with velocity. The value of the impedance  $z_i$  is meaningful only when the velocity on the input boundary is considered. It is though possible to calculate the response over an other boundary  $S_j$  and to compare it to the input velocity, i.e. one may compute

$$z_{ij} = \frac{\int_{S_j} p \, dS}{\int_{S_i} \vec{v} \cdot (-\vec{n}) \, dS}. \quad (10.20)$$

This impedance is here called the cross specific acoustic impedance.

## 10.5 Keywords

The following keywords are particularly related to the acoustics solver.

Simulation

Angular Frequency Real

This keyword is used to declare the angular frequency. Alternatively one may define the frequency by using the `Frequency` keyword.

Frequency Real

This keyword is used to declare the frequency. Alternatively one may define the angular frequency by using the `Angular Frequency` keyword.

Simulation Type String

The value of this keyword should be either `Steady State` or `Scanning`. The value `Scanning` may be used to obtain results for several frequencies by using a single `sif`-file.

Coordinate System String

The coordinate system must be set to be one of the following options: `Cartesian 2D`, `Cartesian 3D` or `Axi Symmetric`.

Solver solver-id

The following keywords may be used in the solver section that contains solver parameters for the acoustics solver.

Equation String

This keyword can be used to give a name for the discrete acoustic equations

Procedure File Acoustics AcousticsSolver

This keyword is used to give the Elmer solver the place where to search for the acoustics solver.

Variable String Flow

The name `Flow` is used for the solution of the acoustics equations consisting of the amplitudes of the disturbances of the velocity, temperature and pressure from the equilibrium state (note that the disturbance of the density is not computed explicitly). The acoustics solver uses a convention that if  $dim$  is the coordinate system dimension then the components  $1, \dots, 2 \times dim$  of `Flow` give the real and imaginary parts of velocities (`Flow.1` and `Flow.2` are the real and imaginary parts of the first velocity component, etc.). The temperature and pressure solutions come after the velocity solution.

Variable Dofs Integer

The value of this keyword should equal to  $2 \times (dim + 2)$  where  $dim$  is the coordinate system dimension.

Element String

The use of standard finite elements in the approximation of the acoustic equations is likely to lead to an unstable method. The finite element formulation can be stabilised by using additional bubble finite element functions in the approximation of velocities. If this keyword is given the value `p:1 b:n`, with  $n$  an integer, then  $n$  additional bubble functions contained in the  $p$ -element library are used in the approximation of each velocity component.

Bubbles in Global System Logical

This keyword should be given the value `False`, so that the additional bubble basis functions needed for the stability are eliminated via the static condensation.

Utilize Previous Solution Logical

If a single `sif`-file is used to compute the solutions for several frequencies, then the previous solution can be used as an initial guess for the next iterative solution. This can be done by giving the value `True` for this keyword.

Material material-id

Specific Heat Real

This keyword is used to define the specific heat (per unit mass) at constant volume.

Specific Heat Ratio Real

This keyword is used to define the ratio of the specific heats at constant pressure and constant volume.

Equilibrium Density Real

This keyword is used to declare the density at the equilibrium state.

Equilibrium Temperature Real

This keyword is used to declare the absolute temperature at the equilibrium state.

Heat Conductivity Real

This keyword is used to define the value of the heat conductivity.

Viscosity Real

This keyword is used to define the value of the viscosity  $\mu$ .

Bulk Viscosity Real

The material parameter  $\lambda$  is determined by giving the bulk viscosity  $\kappa'$  defined by  $\kappa' = \lambda + 2/3\mu$ . If the value of this keyword is not given, the Stokes condition is assumed, i.e. the value of  $\lambda$  is determined by the condition  $\kappa' = 0$ .

Re Heat Source Real

This keyword is used to define the real part of the heat source (per unit mass).

Im Heat Source Real

This keyword is used to define the imaginary part of the heat source (per unit mass).

Re Body Force i Real

This keyword is used to define the real part of the  $i$ 's component of the body force vector (per unit mass).

Im Body Force i Real

This keyword is used to define the imaginary part of the  $i$ 's component of the body force vector (per unit mass).

Boundary Condition bc-id

Re Velocity i Real

This keyword is used to prescribe the real part of the  $i$ 's component of the velocity vector.

Im Velocity i Real

This keyword is used to prescribe the imaginary part of the  $i$ 's component of the velocity vector.

Re Temperature Real

This keyword is used to prescribe the real part of the amplitude of the disturbance of temperature.

Im Temperature Real

This keyword is used to prescribe the imaginary part of the amplitude of the disturbance of temperature.

Re Surface Traction i Real

This keyword is used to define the real part of the  $i$ 's component of the surface force vector.

Im Surface Traction i Real

This keyword is used to define the imaginary part of the  $i$ 's component of the surface force vector.

Re Specific Acoustic Impedance Real

This keyword is used to define the real part of the ratio of the normal component of the surface force vector to the normal component of the velocity vector at a point on the boundary.

Im Specific Acoustic Impedance Real

This keyword is used to define the imaginary part of the ratio of the normal component of the surface force vector to the normal component of the velocity vector at a point on the boundary.

Re Specific Thermal Impedance Real

This keyword is used to define the real part of the ratio of the normal derivative of temperature to the disturbance of the temperature at a point on the boundary.

Im Specific Thermal Impedance Real

This keyword is used to define the imaginary part of the ratio of the normal derivative of temperature to the disturbance of the temperature at a point on the boundary.

Slip Boundary Logical

The value of this keyword should be set to be True if slip boundary conditions were given.

Momentum Accommodation Coefficient Real

This keyword is used to define the momentum accommodation coefficient  $c_\sigma$ .

Energy Accommodation Coefficient Real

This keyword is used to define the energy accommodation coefficient  $c_T$ .

Re Reference Wall Velocity i Real

This keyword is used to prescribe the real part of the  $i$ 's component of the reference wall velocity.

Im Reference Wall Velocity i Real

This keyword is used to prescribe the imaginary part of the  $i$ 's component of the reference wall velocity.

Reference Wall Temperature Real

This keyword is used to define the reference wall temperature.

Calculate Acoustic Impedance Logical

This keyword is used to define the boundary for which the specific acoustic impedance  $z_i$  is calculated.

Impedance Target Boundary Logical

When calculating the cross impedance  $z_{ij}$ , this keyword defines the boundary  $S_j$ . The input velocity boundary ( $S_i$ ) is defined using the Calculate Acoustic Impedance keyword.

The following keywords are related to the use of block preconditioning and may be given in the Solver section.

Solver solver-id

Block Preconditioning Logical

The value of this keyword should be set to be True to enable the use of block preconditioning.

Max Outer Iterations Integer

The value of this keyword defines the maximum number of outer iterations.

Max Inner GCR Iterations Integer

This keyword is used to define the value of the parameter  $m$ , i.e. the maximum number of inner iterations. The default value is 5.

Ratio of Convergence Tolerances Real

This keyword is used to define the stopping criterion for the outer iteration. The outer iteration is stopped when

$$\|F - KU^{(k)}\|_\infty < (\varepsilon_r \times \varepsilon)(\|K\|_\infty \|U^{(k)}\|_\infty + \|F\|_\infty).$$

Here  $\varepsilon_r$  is defined using this keyword and  $\varepsilon$  is the value of the Linear System Convergence Tolerance keyword. Having  $\varepsilon_r \ll 1$  is desirable.

Residual Reduction Ratio Real

This keyword is used to define the value of the parameter  $\delta_{\text{inner}}$  in the stopping criterion (10.18). The default value is 0.1.

`Linear System Convergence Tolerance Real`

In connection with the block-preconditioning the keyword `Linear System Convergence Tolerance` defines the stopping criterion used in connection with the iterative solution of (10.16) and (10.17). In this connection the stopping criterion of the type

$$\|\hat{r}_v^{(k)} - As_v^{(k)}\| < \varepsilon \|\hat{r}_v^{(k)}\|$$

is used. Here  $\varepsilon$  is the value of this keyword. It is noted that the solution accuracy of (10.15) need not be specified by the user.

`Velocity Convergence Tolerance Real`

The systems (10.16) and (10.17) may solved with different degrees of accuracy. Instead of using the `Linear System Convergence Tolerance` keyword one may specify the solution accuracy for (10.17) by using this keyword.

`Schur Complement Convergence Tolerance Real`

The systems (10.16) and (10.17) may solved with different degrees of accuracy. Instead of using the `Linear System Convergence Tolerance` keyword one may specify the solution accuracy for (10.16) by using this keyword.

`Linear System Max Iterations Integer`

In connection with the block-preconditioning the `Linear System Max Iterations` keyword is used for defining the maximum number of iteration steps which can be taken in the iterative solution of (10.15)–(10.17).

`Velocity Assembly Logical`

The coefficient matrix  $A$  in (10.17) corresponds to the (1,1) block of the coefficient matrix  $K$ . As the elements of  $A$  can be extracted from  $K$ , the assembly of  $A$  can be avoided if a diagonal preconditioning is used in the iterative solution of (10.17). If an incomplete factorization preconditioner is used, the matrix  $A$  is assembled explicitly. In this case the value `True` must be given for this keyword.

`ILU Order for Schur Complement Integer`

The value of this keyword defines the fill level for the incomplete LU factorization preconditioner that is applied in the iterative solution of the linear systems of the type (10.16).

`ILU Order for Velocities Integer`

The value of this keyword defines the fill level for the incomplete LU factorization preconditioner that is applied in the iterative solution of the linear systems of the type (10.17). If this keyword is not given, then a diagonal preconditioning is used. This keyword has an effect only when the `Velocity Assembly` keyword is given the value `True`.

## Bibliography

- [1] M. Malinen. Boundary conditions in the schur complement preconditioning of dissipative acoustic equations. *SIAM J. Sci. Comput.*, 29:1567–1592, 2007.
- [2] M. Malinen, M. Lyly, P. Råback, A. Kärkkäinen, and L. Kärkkäinen. A finite element method for the modeling of thermo-viscous effects in acoustics. In P. Neittaanmäki et. al., editor, *Proceedings of the 4th European Congress on Computational Methods in Applied Sciences and Engineering*, 2004.

# Model 11

## Large-amplitude wave motion in air

**Module names:** CompressibleNS

**Module subroutines:** CompressibleNS

**Module authors:** Mika Malinen

**Document authors:** Mika Malinen

**Document edited:** Aug 14, 2012

### 11.1 Introduction

This module contains a monolithic solver for the compressible Navier–Stokes equations subject to the ideal gas law. It can be used to model the fully nonlinear wave propagation in the time domain.

### 11.2 Mathematical model

The acoustic wave motion in a fluid is generally characterized by the compressional Navier–Stokes equations. If the medium obeys the ideal gas law, so that the fluid pressure  $p$  satisfies

$$p = R\rho T, \quad (11.1)$$

the Navier–Stokes system may be reduced to consist of the equation of motion

$$\rho \left[ \frac{\partial \vec{v}}{\partial t} + (\vec{v} \cdot \nabla) \vec{v} \right] - \mu \Delta \vec{v} - (\mu + \lambda) \nabla (\nabla \cdot \vec{v}) + R\rho \nabla T + RT \nabla \rho = \vec{b}, \quad (11.2)$$

the energy equation

$$\rho C_V \left( \frac{\partial T}{\partial t} + \vec{v} \cdot \nabla T \right) - K \Delta T + R\rho T \nabla \cdot \vec{v} = 0, \quad (11.3)$$

and the continuity equation

$$\frac{\partial \rho}{\partial t} + \vec{v} \cdot \nabla \rho + \rho \nabla \cdot \vec{v} = 0. \quad (11.4)$$

Here  $\vec{v}$ ,  $\rho$  and  $T$  are the fluid velocity, density and temperature, respectively, and the material properties are expressed in terms of the viscosity parameters  $\mu$  and  $\lambda$ , the heat conductivity  $K$  and the specific heat  $C_V$ , with  $R = (\gamma - 1)C_V$ .

If  $\rho_0$  and  $T_0$  are the equilibrium values of density and temperature, we may then write

$$\rho = \rho_0 + \delta, \quad T = T_0 + \tau, \quad (11.5)$$

so that  $\delta$  and  $\tau$  give the disturbances in  $\rho$  and  $T$ . To solve the coupled system consisting of (11.2)–(11.4) the fully implicit time integration is employed. At each time level a nonlinear iteration is thus applied. Given



nonlinear iterates  $\vec{v}_k$ ,  $\tau_k$  and  $\delta_k$ , new approximations are generated via

$$\begin{aligned} &(\rho_0 + \delta_k)[(\vec{v}_t)_{k+1} + (\vec{v}_k \cdot \nabla)\vec{v}_{k+1}] - \mu\Delta\vec{v}_{k+1} - (\mu + \lambda)\nabla(\nabla \cdot \vec{v}_{k+1}) \\ &+ R(\rho_0 + \delta_k)\nabla\tau_{k+1} + R(T_0 + \tau_k)\nabla\delta_{k+1} = \vec{b}, \\ &(\rho_0 + \delta_k)C_V[(\tau_t)_{k+1} + \vec{v}_k \cdot \nabla\tau_{k+1}] - K\Delta\tau_{k+1} + R(\rho_0 + \delta_k)(T_0 + \tau_k)\nabla \cdot \vec{v}_{k+1} = 0, \\ &(\rho_t)_{k+1} + \vec{v}_k \cdot \nabla\delta_{k+1} + (\rho_0 + \delta_k)\nabla \cdot \vec{v}_{k+1} = 0, \end{aligned} \quad (11.6)$$

with the time derivatives approximated using suitable finite difference schemes. It is recommended that the BDF(2) method is used for the time discretization. It is also noted that the pressure is not approximated directly, so it has to be computed separately using (11.1) and (11.5).

It should be noted that the solver is tailored to the case of the lowest-order continuous temperature and density approximation. To obtain stable finite element solutions the velocity discretization must be enhanced by using elementwise bubble functions or by rising the polynomial order of the velocity approximation. Therefore a special element type definition in the solver input file should be given.

### 11.3 Keywords

The keywords that are related especially to this solver are described in the following.

Simulation

Coordinate System String

The coordinate system must be set to be one of the following options: Cartesian 2D, Cartesian 3D or Axi Symmetric.

Solver solver id

Equation String

A name to the equation may be given by using this keyword.

Procedure File "CompressibleNS" "CompressibleNS"

This keyword is used to give the Elmer solver the place where to search for the compressible Navier–Stokes solver.

Variable String

A name to the solver variable should be given by using this keyword.

Variable DOFs Integer

The value of this keyword should equal to  $dim + 2$  where  $dim$  is the coordinate system dimension. The field variables are organized in such a way that the first  $dim$  components correspond to the velocity solution and the temperature and density fluctuations come after the velocity.

Element String

The user has to specify what strategy is used for enhancing the velocity approximation by giving the element type definition. If the command `Element = "p:2"` is given, then the velocity is approximated using the shape functions of the second order elements. The element type definition `Element = "p:1 b:1"` can be given to enhance the velocity approximation with one bubble function.

Material mat id

Equilibrium Density Real

The equilibrium density  $\rho_0$  should be specified by using this keyword.

Equilibrium Temperature Real

The equilibrium temperature  $T_0$  should be specified by using this keyword.

Specific Heat Real

The value of this keyword specifies  $C_V$ .

Specific Heat Ratio Real

The value of this keyword specifies  $\gamma$ .

Heat Conductivity Real

The heat conductivity  $K$  should be defined by using this keyword.

Viscosity Real

The viscosity parameter  $\mu$  should be defined by using this keyword.

Bulk Viscosity Real

The viscosity parameter  $\lambda$  is taken to be  $\lambda = \kappa - 2/3\mu$ , with  $\kappa$  the value of this keyword.

Body Force bc id

Body Force i Real

This keyword defines the  $i$ 's component of the body force.

# Model 12

## Electrostatics

**Module name:** StatElecSolve

**Module subroutines:** StatElecSolver

**Module authors:** Leila Puska, Antti Pursula, Peter Råback

**Document authors:** Peter Råback, Antti Pursula

**Document edited:** June 29th 2006

### 12.1 Introduction

The macroscopic electromagnetic theory is governed by the Maxwell's equations. In Elmer it is possible to solve the electrostatic potential in linear dielectric material and in conducting medium. The dielectric case is described in this Chapter. For static currents, refer to Chapter 13. Based on the potential, various field variables as well as physical parameters, such as capacitance, can be calculated.

### 12.2 Theory

When  $\epsilon\mu c^2 \ll 1$  we may assume that the Maxwell's equations are:

$$\nabla \cdot \vec{D} = \rho \quad (12.1)$$

$$\nabla \cdot \vec{B} = 0 \quad (12.2)$$

$$\nabla \times \vec{E} = -\frac{\partial \vec{B}}{\partial t} \quad (12.3)$$

$$\nabla \times \vec{H} = \vec{J} + \frac{\partial \vec{D}}{\partial t} \quad (12.4)$$

For linear materials the fields and fluxes are simply related,  $\vec{B} = \mu \vec{H}$  and  $\vec{D} = \epsilon \vec{E}$ , where the permittivity  $\epsilon = \epsilon_0 \epsilon_r$  is defined through the permittivity of vacuum  $\epsilon_0$  and the relative permittivity of the material  $\epsilon_r$ .

In steady-state case the electric field may be expressed with a help of an electric scalar potential  $\phi$ ,

$$\vec{E} = -\nabla \phi. \quad (12.5)$$

Assuming linear material law and using equation 12.1 gives

$$-\nabla \cdot \epsilon \nabla \phi = \rho. \quad (12.6)$$

This is the electrostatic equation for non-conducting media.

The energy density of the field is

$$e = \frac{1}{2} \vec{E} \cdot \vec{D} = \frac{1}{2} \epsilon (\nabla \phi)^2. \quad (12.7)$$

Thus the total energy of the field may be computed from

$$E = \frac{1}{2} \int_{\Omega} \varepsilon (\nabla \phi)^2 d\Omega. \quad (12.8)$$

If there is only one potential difference  $\Phi$  present then the capacitance  $C$  may be computed from

$$C = \frac{2E}{\Phi^2}. \quad (12.9)$$

### 12.2.1 Boundary Conditions

For electric potential either Dirichlet or Neumann boundary condition can be used. The Dirichlet boundary condition gives the value of the potential on specified boundaries. The Neumann boundary condition is used to give a flux condition on specified boundaries

$$-\varepsilon \nabla \phi \cdot \vec{n} = g. \quad (12.10)$$

The flux may be defined *e.g.* by the surface charge density:  $g = \sigma$ .

In case there is a object in infinite space it is of course not possible to extent the volume over it. Instead a spherically symmetric approximation may be used. It results to a flux given by

$$g = \varepsilon \phi \frac{\vec{r} \cdot \vec{n}}{r^2}. \quad (12.11)$$

This may be implemented as an additional term to the matrix so that the linear nature of the problem is maintained.

Conductors are often covered by thin oxidation layers which may contain static charges. The effect of these charges can be taken into account by Robin type of boundary condition which combines the fixed potential value on the conductor and the flux condition due to the static charges

$$g = -\frac{\varepsilon_h}{h} \phi + \frac{1}{2} \rho h + \frac{\varepsilon_h}{h} \Phi_0 \quad \text{on the boundary,} \quad (12.12)$$

where  $\varepsilon_h$  and  $h$  are the permittivity and the thickness of the oxidation layer respectively,  $\rho$  is the static charge density of the layer, and  $\Phi_0$  is the fixed potential on the conductor.

Note that this formulation is valid only for thin layers. For a larger layer a separate body should be added and a source defined for that.

### 12.2.2 Capacitance matrix

There is a possibility to compute the capacitance matrix. The algorithm takes use of the original matrix  $A$  before to the initial conditions are set. Now the point charges are given by

$$q = A\phi. \quad (12.13)$$

The induced charges on a body may be computed by summing up the point charges.

If there are  $n$  different bodies the boundary conditions are permuted  $n$  times so that body  $i$  gets a potential unity while others are set to zero potential.

$$C_{ij} = \sum_{\Gamma_j} q. \quad (12.14)$$

The symmetry of the matrix is ensured afterwards by setting

$$C = \frac{1}{2}(C + C^T). \quad (12.15)$$

## 12.3 Notes on output control

The user can control which derived quantities (from the list of electric field, electric flux, electric energy, surface charge density and capacitance matrix) are calculated.

There are also available two choices of visualization types for the derived quantities. The node values can be calculated by taking the average of the derived values on neighbouring elements (constant weights). This results often in visually good images. The other possible choice is to weight the average with the size of the elements, which is more accurate and should be used when some other variable depends on these derived values. The latter choice is also the default.

## 12.4 Keywords

Constants

Permittivity Of Vacuum Real [8.8542e-12]

Solver solver id

Equation String Stat Elec Solver

Variable String Potential

This may be of any name as far as it is used consistently also elsewhere.

Variable DOFs Integer 1

Degrees of freedom for the potential.

Procedure File "StatElecSolve" "StatElecSolver"

Following are listed four keywords with default values for output control.

Calculate Electric Field Logical [True]

Calculate Electric Flux Logical [True]

Calculate Electric Energy Logical [False]

Calculate Surface Charge Logical [False]

Calculate Capacitance Matrix Logical [False]

Capacitance Bodies Integer

In case of a capacitance matrix computation the number of bodies at different potential must be given (not accounting the ground).

Capacitance Matrix Filename String

The name of the file where capacitance matrix is being saved. The default is `cmatrix.dat`.

Constant Weights Logical [True]

Used to turn constant weighting on for the results.

Potential Difference Real

Used to give the potential difference for which the capacitance is calculated, when capacitance matrix calculation is not performed. This keyword gives thus the voltage between the electrodes of a simple capacitor. The voltage has to be consistent with the potentials defined in boundary conditions.

Material mat id

Relative Permittivity Real

Body Force bodyforce id

Charge Density Real

Boundary Condition bc id

Potential Real

If the name of the primary variable is potential then this sets the Dirichlet boundary condition.

Electric Flux Real

Neumann boundary condition for  $g$ .

Surface Charge Density Real

Another way to define flux condition. Identical to the previous keyword.

Electric Infinity BC Logical

The spherical approximation for the open boundaries extending to infinity.

The following five keywords are used if a thin oxidation layer is modeled. Note that these are only active if the `Electric Flux BC` keyword is set to `True`.

Layer Thickness Real

Defines the thickness of the oxidation layer. This is presumed to extend on the outside the boundary.

Layer Relative Permittivity Real

The relative permittivity of the oxidation layer.

Layer Charge Density Real

The volume charge density in the oxidation layer.

Electrode Potential Real

The potential on the conductor behind the oxidation layer.

Nominal Potential Difference Real

The potential difference of the system.

Capacitance Body Integer  $i$

These should number from  $i=1$  up to `Capacitance Bodies`. The ground may be given directly with zero potential or with value 0 for this keyword. This definition is only needed in the computation of the capacitance matrix where the potential is permuted in a very specific way.

# Model 13

## Static Current Conduction

**Module name:** StatCurrentSolve

**Module subroutines:** StatCurrentSolver

**Module authors:** Leila Puska, Antti Pursula, Peter Råback

**Document authors:** Antti Pursula

**Document edited:** August 2nd 2002

### 13.1 Introduction

The macroscopic electromagnetic theory is governed by the Maxwell's equations. This module solves the electrostatic potential in conducting medium allowing volume currents and electric power loss (Joule heating) to be derived.

### 13.2 Theory

In quasi-static approximation, when  $\varepsilon\mu c^2 \ll 1$ , the first and fourth Maxwell equation can be written as follows

$$\nabla \cdot \vec{D} = \rho \quad (13.1)$$

$$\nabla \times \vec{H} = \vec{J} + \frac{\partial \vec{D}}{\partial t} \quad (13.2)$$

The continuity equation for electric charges is easily derived from the above Maxwell Eqs. 13.1 and 13.2

$$\frac{\partial \rho}{\partial t} + \nabla \cdot \vec{J} = 0 \quad (13.3)$$

The Ohm's law for conducting material gives the relationship between current density and electric field,

$$\vec{J} = \sigma \vec{E} \quad (13.4)$$

where  $\sigma$  is the electric conductivity. In steady-state case the electric field may be expressed with a help of an electric scalar potential  $\phi$ ,

$$\vec{E} = -\nabla \phi. \quad (13.5)$$

Starting from the continuity equation 13.3 and using Eqs. 13.4 and 13.5 we get

$$\nabla \cdot \sigma \nabla \phi = \frac{\partial \rho}{\partial t}. \quad (13.6)$$

This Poisson equation is used to solve the electric potential. The source term is often zero but in some cases it might be necessary.

The volume current density is now calculated by

$$\vec{J} = -\sigma \nabla \phi, \quad (13.7)$$

and electric power loss density which is turned into heat by

$$h = \nabla \phi \cdot \sigma \nabla \phi. \quad (13.8)$$

The latter is often called the Joule heating. The total heating power is found by integrating the above equation over the conducting volume.

### 13.2.1 Boundary Conditions

For electric potential either Dirichlet or Neumann boundary condition can be used. The Dirichlet boundary condition gives the value of the potential on specified boundaries. The Neumann boundary condition is used to give a current  $J_b$  on specified boundaries

$$J_b = \sigma \nabla \phi \cdot \vec{n}. \quad (13.9)$$

### 13.2.2 Power and current control

Sometimes the desired power or current of the system is known a priori. The control may be applied to the system. When the electric potential has been computed the heating power may be estimated from

$$P = \int_{\Omega} \nabla \phi \cdot \sigma \nabla \phi d\Omega. \quad (13.10)$$

If there is a potential difference  $U$  in the system the effective resistance may also be computed from  $R = U^2/P$  and the effective current from  $I = P/U$ .

The control is achieved by multiplying the potential and all derived field by a suitable variable. For power control the coefficient is

$$C_P = \sqrt{P_0/P}, \quad (13.11)$$

where  $P_0$  is the desired power. For current control the coefficient is

$$C_I = I_0/I, \quad (13.12)$$

where  $I_0$  is the desired total current.

## 13.3 Note on output control

The user can control which derived quantities (*i.e.* volume current and Joule heating) are calculated and additionally specify if he/she wants to output also the electric conductivity. The latter is useful when the conductivity depends for example on temperature. This feature is available only for isotropic (scalar) conductivities.

There are also available two choices of visualization types for the derived quantities. The node values can be calculated by taking the average of the derived values on neighbouring elements (constant weights). This results often in visually good images. The other possible choice is to weight the average with the size of the elements, which is more accurate and should be used when some other variable depends on these derived values. The latter choice is also the default.

## 13.4 Keywords

Solver `solver id`

Equation `String Stat Current Solver`



Variable String Potential

This may be of any name as far as it is used consistently also elsewhere.

Variable DOFs Integer 1

Degrees of freedom for the potential.

Procedure File "StatCurrentSolve" "StatCurrentSolver"

Following are listed three keywords with default values for output control.

Calculate Volume Current Logical [True]

Calculate Joule Heating Logical [True]

Constant Weights Logical [True]

Used to turn constant weighting on for the results.

Power Control Real

Apply power control with the desired heating power being  $P_0$ .

Current Control Real

Apply current control with the desired current being  $I_0$ .

Material mat id

Electric Conductivity Real

Body Force bodyforce id

Current Source Real

Possibility for a current source, not used often though.

Joule Heat Logical

If this flag is active the Heat equation will automatically compute the quantity  $\nabla\phi \cdot \sigma \nabla\phi$  as heat source. Then it is assumed that  $\phi$  is named Potential. If there is no heat equation this flag has no effect.

Boundary Condition bc id

Potential Real

Dirichlet BC for the potential.

Current Density BC Logical

Must be set to True if Neumann BC is used.

Current Density Real

Neumann boundary condition for the current.

## Model 14

# Computation of Magnetic Fields with Whitney Elements

**Module name:** MagnetoDynamics

**Module subroutines:** WhitneyAVSolver, WhitneyAVHarmonicSolver, MagnetoDynamicsCalcFields

**Module authors:** Juha Ruokolainen

**Module status:** Alpha

**Document authors:** Mika Malinen, Juha Ruokolainen, Peter Råback

**Document created:** Sep 9, 2010

**Document edited:** Dec 3, 2012

### 14.1 Introduction

This module may be used to solve a version of the Maxwell equations in the A-V form. The approximation of the associated vector potential variable  $\vec{A}$  is here done by using the lowest-order edge element discretization, while the classic Lagrange interpolation is applied to compute the scalar potential  $V$ . In addition to performing the computations in the time domain, the analogous version of the equations may also be solved in the frequency domain. Furthermore, an additional solver may be called to produce nodal approximations of derived fields after the two potentials have been obtained.

### 14.2 Theory

Consider solving the following version of electromagnetics equations on a body  $\Omega$ :

$$-\sigma \vec{E} + \nabla \times \left( \frac{1}{\mu} \vec{B} \right) = \vec{g}, \quad (14.1)$$

$$\nabla \cdot \vec{B} = 0, \quad \text{with } \vec{B} = \nabla \times \vec{A}, \quad (14.2)$$

$$\nabla \times \vec{E} = -\frac{\partial \vec{B}}{\partial t}, \quad (14.3)$$

where  $\sigma$  is the electrical conductivity,  $\mu$  is the permeability and the source term  $\vec{g}$  is assumed to be divergence-free, i.e.  $\nabla \cdot \vec{g} = 0$ . It should be noted that this set of equations does not have a unique solution without imposing additional constraints on  $\vec{A}(x, t)$ . Otherwise, if  $\vec{A}$  satisfies the equations, then any field  $\vec{A}_\phi$  having the decomposition  $\vec{A}_\phi = \vec{A} + \nabla \phi$  also solves the same system of equations. The uniqueness of  $\vec{A}$  could be assured for example by seeking  $\vec{A}(\cdot, t) \in H(\text{curl}, \Omega) \cap H(\text{div}, \Omega)$  that satisfies additionally

$$\nabla \cdot \vec{A} = 0 \text{ on } \Omega \text{ and } \vec{A} \cdot \vec{n} = 0 \text{ on the boundary } \partial\Omega. \quad (14.4)$$

In view of (14.2), we may rewrite (14.3) as

$$\nabla \times (\vec{E} + \frac{\partial \vec{A}}{\partial t}) = \vec{0}$$

to see that we may automate the satisfaction of (14.3) by seeking the solution in the form

$$\vec{E} + \frac{\partial \vec{A}}{\partial t} = -\nabla V, \quad (14.5)$$

with  $V(\cdot, t) \in \mathcal{V} \subset H^1(\Omega)$  an unknown scalar potential. This offers the possibility of eliminating  $\vec{E}$  from the set of primary unknowns if an additional constraint based on the requirement

$$\nabla \cdot (-\sigma \vec{E}) = \nabla \cdot \vec{g} = 0 \quad (14.6)$$

is simultaneously imposed to serve the determination of  $V$ .

To derive a computational version of the equations, let  $v$  be an appropriate test function for  $V$ , so that we have  $\nabla v \in L_2(\Omega)$ . Multiplying (14.5) with a quantity  $\sigma \nabla v$  and integrating over  $\Omega$  then gives

$$\int_{\Omega} \sigma \frac{\partial \vec{A}}{\partial t} \cdot \nabla v \, d\Omega + \int_{\Omega} \sigma \nabla V \cdot \nabla v \, d\Omega = - \int_{\Omega} \sigma \vec{E} \cdot \nabla v \, d\Omega. \quad (14.7)$$

Applying integration by parts to the left-hand side and imposing the constraint (14.6) bring us to the weak formulation

$$\int_{\Omega} \sigma \frac{\partial \vec{A}}{\partial t} \cdot \nabla v \, d\Omega + \int_{\Omega} \sigma \nabla V \cdot \nabla v \, d\Omega = \int_{\Omega} \nabla \cdot (\sigma \vec{E}) v \, d\Omega - \int_{\partial\Omega} (\sigma \vec{E}) \cdot \vec{n} v \, dS = - \int_{\partial\Omega} (\sigma \vec{E}) \cdot \vec{n} v \, dS. \quad (14.8)$$

On the other hand, by using (14.2) and (14.5), we may rewrite (14.1) as

$$\sigma \frac{\partial \vec{A}}{\partial t} + \sigma \nabla V + \nabla \times \left( \frac{1}{\mu} \nabla \times \vec{A} \right) = \vec{g} \quad (14.9)$$

to obtain the weak version

$$\begin{aligned} \int_{\Omega} \sigma \frac{\partial \vec{A}}{\partial t} \cdot \vec{\eta} \, d\Omega + \int_{\Omega} \sigma \nabla V \cdot \vec{\eta} \, d\Omega + \int_{\Omega} \frac{1}{\mu} (\nabla \times \vec{A}) \cdot (\nabla \times \vec{\eta}) \, d\Omega \\ - \int_{\partial\Omega} [\vec{n} \times \left( \frac{1}{\mu} \nabla \times \vec{A} \right) \times \vec{n}] \cdot (\vec{n} \times \vec{\eta}) \, dS = \int_{\Omega} \vec{g} \cdot \vec{\eta} \, d\Omega, \end{aligned} \quad (14.10)$$

with  $\vec{\eta}$  an appropriate test function corresponding to  $\vec{A}$ .

The weak formulations obtained from (14.10) and (14.8) form the basis for the A-V formulation of the problem. It should be noted that by starting from (14.7) we have avoided seeking the solution  $\vec{A}(\cdot, t)$  from  $H(\text{curl}, \Omega) \cap H(\text{div}, \Omega)$  as only the requirement  $\vec{A}(\cdot, t) \in H(\text{curl}, \Omega)$  appears to be necessary in this derivation. The Elmer implementation relies on this minimal regularity assumption so that a finite element approximation  $\vec{A}_h(\cdot, t)$  is sought from an edge function space  $X_h \subset H(\text{curl}, \Omega)$ . This simplification however leads to the inconvenience that the uniqueness of the vector potential solution cannot be ensured.

We see from the weak versions (14.10) and (14.8) that, if the Dirichlet type constraints

$$\vec{n} \times \vec{A} \times \vec{n} = \vec{a}_\tau \quad \text{and} \quad V = \hat{v} \quad (14.11)$$

are not given, we may specify the tangential components of the magnetic field  $\vec{H} = (1/\mu) \vec{B}$  and the normal component of electric current density  $\vec{J} = \sigma \vec{E}$  via giving

$$\left( \frac{1}{\mu} \nabla \times \vec{A} \right) \times \vec{n} = \vec{h}_\tau \quad (14.12)$$

and

$$-(\sigma \vec{E}) \cdot \vec{n} = j_n. \quad (14.13)$$

We note that giving a Dirichlet constraint is a useful way to guarantee the uniqueness of the scalar potential  $V$  which would otherwise be determined only up to a constant.

A Robin-like generalization of (14.12) leads to the boundary condition

$$\alpha(\vec{n} \times \vec{A} \times \vec{n}) + \left(\frac{1}{\mu} \nabla \times \vec{A}\right) \times \vec{n} = \vec{h}_\tau, \quad (14.14)$$

with  $\alpha$  a given parameter. We however note that the case  $\alpha \neq 0$  may lack in having a physical interpretation. On the other hand, a generalized version of (14.13) is written as

$$-(\sigma \vec{E}) \cdot \vec{n} = j_n - \beta V, \quad (14.15)$$

which in the stationary case reduces to the Robin boundary condition

$$\sigma \nabla V \cdot \vec{n} + \beta V = j_n. \quad (14.16)$$

In addition, a procedural technique may be applied to specify a Dirichlet constraint for  $\vec{A}$  when the normal component of the magnetic flux density  $\vec{B}$  is given on the boundary.

The divergence-free property of  $\vec{g}$  may be assured in connection with solving the discrete equations by setting  $\vec{g} = \mathcal{P}_h(\vec{g}_u)$  where  $\vec{g}_u$  is the user-supplied source term and the projection  $\mathcal{P}_h(\vec{g}_u) = \vec{g}_u - \nabla q_h$ , with  $q_h \in M_h \subset H^1(\Omega)$ , is defined via the requirement

$$\int_{\Omega} \mathcal{P}_h(\vec{g}_u) \cdot \nabla \phi_h \, d\Omega = \int_{\Omega} (\vec{g}_u - \nabla q_h) \cdot \nabla \phi_h \, d\Omega = 0 \quad (14.17)$$

for any admissible variation  $\phi_h$  of  $q_h$ . The user may specify the vector  $\vec{g}_u$  in the form

$$\vec{g}_u = \vec{J}^s + \nabla \times \vec{M}^s, \quad (14.18)$$

with  $\vec{M}^s$  the magnetization. In order to provide a way to ensure the uniqueness of  $q_h$  automatically,  $q_h$  is chosen to satisfy the zero Dirichlet condition on parts where  $|\vec{J}^s \cdot \vec{n}| \neq 0$ . If desired, other Dirichlet conditions for  $q_h$  may also be given by the user.

**The stationary equations.** In the stationary case the electric field  $\vec{E}$  is simply the gradient of a scalar potential. The weak formulation based on (14.10) and (14.8) then simplifies to

$$\int_{\Omega} \sigma \nabla V \cdot \vec{\eta} \, d\Omega + \int_{\Omega} \frac{1}{\mu} (\nabla \times \vec{A}) \cdot (\nabla \times \vec{\eta}) \, d\Omega - \int_{\partial\Omega} [\vec{n} \times \left(\frac{1}{\mu} \nabla \times \vec{A}\right) \times \vec{n}] \cdot (\vec{n} \times \vec{\eta}) \, dS = \int_{\Omega} \vec{g} \cdot \vec{\eta} \, d\Omega \quad (14.19)$$

and

$$\int_{\Omega} \sigma \nabla V \cdot \nabla v \, d\Omega = - \int_{\partial\Omega} (\sigma \vec{E}) \cdot \vec{n} v \, dS. \quad (14.20)$$

**Solution in the frequency domain.** The equations in the A-V form may also be solved in the frequency domain. In this case the ansatz  $\vec{A}(x, t) = \vec{A}(x) \exp(i\omega t)$  and  $V(x, t) = V(x) \exp(i\omega t)$  is made to obtain the analogous set of equations for determining the complex-valued amplitudes  $\vec{A}(x)$  and  $V(x)$ .

## 14.3 Keywords

### Keywords for WhitneyAVSolver

Here we list the keywords that are relevant to solving the evolutionary and stationary versions of the equations by calling the solver subroutine `WhitneyAVSolver` and that may also be common to the other solvers. Such common keywords relate to specifying material parameters, body forces, and boundary conditions.

## Constants

Permeability of Vacuum `Real`

This constant has the default value  $4\pi \cdot 10^{-7}$ .

Material `mat id`

The following material parameters may be used by all the solvers in the module.

Electric Conductivity `Real`

This keyword is used to specify the electric conductivity  $\sigma$ .

Relative Permeability `Real`

If this keyword is used, the permeability  $\mu$  can be specified in terms of the permeability of vacuum. To obtain the permeability, the value of this keyword is then internally multiplied with the permeability of vacuum. Instead of using this keyword, the keywords `Permeability` or `Reluctivity` may be used.

Permeability `Real`

This keyword may be used to specify directly the permeability  $\mu$ .

Reluctivity `Real`

The value of this keyword specifies the reluctivity  $\nu$ . The permeability is then taken to be  $\mu = 1/\nu$ .

Solver `solver id`

Equation `String` `WhitneySolver`

A describing name for the discrete model handled by this solver may be given by using this keyword. The name can be changed as long as it is used consistently.

Procedure `File` `"MagnetoDynamics"` `"WhitneyAVSolver"`

This declaration specifies the name of the solver subroutine.

Variable `String` `Potential`

The name of the variable may be freely chosen provided it is used consistently also elsewhere. The associated number of degrees of freedom should always be one.

Element

The default initialization routine should give a suitable element type definition automatically, so that the value of this keyword need not necessarily be given by the user.

Fix Input Current Density `Logical`

To ensure the divergence-freeness of the source term  $\vec{g}_u$  via performing the projection (14.17), the value `True` should be given for this keyword.

Use Tree Gauge `Logical`

Due to the chosen discretization, the vector potential is not sufficiently constrained to guarantee the uniqueness. Despite this, the iterative solvers are expected to be able to generate a consistent solution among many. However, to enable the solution with direct solvers this keyword is by default given the value `True` so that a special technique is applied to additionally constrain the discrete vector potential variable (in the case of iterative solvers the default value is `False`).

Linear System Refactorize `Logical`

It is noted that if the refactorization of the system matrix is controlled with this keyword, the matrix factorization is anyhow recomputed automatically if the time step size differs from the previous one.

Linear System Preconditioning `String`

Here the value `None` may give better performance than the standard ILU preconditioners since the null space of the system matrix may be non-trivial, leading to a singularity problem in connection with handling the LU decomposition.

Linear System Iterative Method `String`

The iterative solvers `BiCGStab` or `BiCGStab(L)` may work well.

Body Force `bf id`

In the body force section the user may give various volume sources contained in the vector  $\vec{g}_u$  as defined in (14.18).

Current Density `i Real`

This keyword is used to specify the components of the current density  $J_i^s$  where,  $i = 1, 2, 3$ .

Magnetization `i Real`

This keyword is used to specify the components of the magnetization  $M_i^s$ , with  $i = 1, 2, 3$ .

Boundary Condition `bc id`

As explained, two versions of Dirichlet conditions are possible in connection with the A-V formulation. The first option relates to giving the value of the scalar potential, while the other version is used for prescribing the tangential component of the vector potential field. The edge element approximation of a field  $\vec{A}(x)$  is generally written as

$$\vec{A}_h(x) = \sum_{i=1}^m \alpha_i \vec{\psi}_i(x),$$

where the degrees of freedom  $\alpha_i$  are chosen to be the integrals of tangential components over element edges  $E_i$ :

$$\alpha_i = \int_{E_i} \vec{A}_h \cdot \vec{\tau} ds.$$

The user may specify the coefficients  $\alpha_i$  on a boundary via

$$\alpha_i = \int_{E_i} (\vec{a} \cdot \vec{\tau} + \hat{a}_\tau) ds \quad (14.21)$$

where the scalar  $\hat{a}_\tau$  and the components of  $\vec{a}$  with respect to the global Cartesian coordinate axes can be given. Assuming that the solver variable is `Potential`, we may thus use the following keywords to specify the Dirichlet conditions:

Potential `Real`

This keyword is used to specify the Dirichlet condition for the scalar potential  $V$ , which is approximated by using the standard Lagrange interpolation.

Potential {e} `Real`

The value of this keyword gives the scalar  $\hat{a}_\tau$  in (14.21) in order to specify the degrees of freedom corresponding to the edge element interpolation of the vector potential.

Potential {e} `j Real`

This keyword is used to give the vector  $\vec{a}$  in (14.21) in order to prescribe the degrees of freedom corresponding to the edge element interpolation of the vector potential. The value of this keyword defines the component  $a_j$ ,  $j \in \{1, 2, 3\}$ , with respect to the global Cartesian coordinate system.

The following keywords may be used in order to handle the flux-related boundary conditions:

Magnetic Field Strength `i Real`

This keyword can be used to define the components  $h_i$  of a vector  $\vec{h}$  so that the boundary conditions (14.12) and (14.14) may be imposed with the tangential vector  $\vec{h}_\tau = \vec{h} - (\vec{h} \cdot \vec{n})\vec{n}$ .

Electric Current Density `Real`

This keyword can be used to define the electric current density  $j_n$  in the boundary conditions (14.13) and (14.15).

Magnetic Transfer Coefficient `Real`

The value of this keyword gives the parameter  $\alpha$  in the boundary condition (14.14).

Electric Transfer Coefficient Real

The value of this keyword gives the parameter  $\beta$  in the boundary condition (14.15).

Finally, the following keywords relate to a procedural technique to determine a tangential constraint for the vector potential  $\vec{A}$  when the normal component of the magnetic flux density  $\vec{B}$  is specified on the boundary.

Magnetic Flux Density i Real

This keyword is used to specify the components of the magnetic flux density  $\vec{B}$  with respect to the global Cartesian coordinate axes.

Magnetic Flux Density {n} Real

This keyword may be used to specify directly the normal component  $B_n$  of the magnetic flux density.

### Keywords for WhitneyHarmonicAVSolver

In the following the additional keywords related to solving the harmonic version are listed. Typically these are used for giving optional values which specify the imaginary parts of the parameter values. The corresponding real parts are then given by using the keyword commands already described above.

Solver solver id

Equation String WhitneyHarmonicSolver

This gives a describing name for the discrete model handled here. The name can be changed as long as it is used consistently.

Procedure File "MagnetoDynamics" "WhitneyHarmonicAVSolver"

The name of the solver subroutine is declared.

Variable String P[Pot re:1 Pot im:1]

The name of the variable may be freely chosen provided it is used consistently also elsewhere. The associated number of degrees of freedom is always two. Here the real and imaginary parts are named so that they are easily recognized.

Angular Frequency Real

The angular frequency  $\omega = 2\pi f$  in the harmonic ansatz is specified.

Material mat id

Reluctivity Im Real

The reluctivity  $\nu = 1/\mu$  may be specified to be a complex-valued quantity with the imaginary part given by using this keyword.

Electric Conductivity Im Real

The value of this keyword may be used to specify the imaginary part of the conductivity parameter.

Body Force bf id

The following keywords are used to specify the imaginary parts of the volume sources:

Current Density Im i Real

Magnetization Im i Real

Boundary Condition bc id

The following keywords relate to specifying imaginary parts in conjunction with defining boundary conditions:

Magnetic Field Strength Im i Real

Electric Current Density Im Real

Magnetic Transfer Coefficient Im Real

Electric Transfer Coefficient Im Real

Magnetic Flux Density Im i Real

Magnetic Flux Density Im {n} Real

### Keywords for MagnetoDynamicsCalcFields

An additional solver may finally be called to compute derived fields.

Solver solver id

The fields to be computed are chosen in the solver section. The field Magnetic Flux Density is computed always, others if requested. The size of a vector field is 3, while a tensor field has the size 6. For the harmonic solution the sizes are doubled as the imaginary components are also present.

Equation String CalcFields

A describing name for the solver is given. This can be changed as long as it is used consistently.

Procedure File "MagnetoDynamics" "MagnetoDynamicsCalcFields"

The name of the solver subroutine is given.

Potential Variable String

This keyword is used to specify the name of the underlying potential variable, for example Potential.

Angular Frequency Real

The angular frequency must be declared in this connection also.

Calculate Magnetic Field Strength Logical

If True is given, a vector field Magnetic Field Strength is computed.

Calculate Electric Field Logical

If True is given, a vector field Electric Field is computed.

Calculate Current Density Logical

If True is given, a vector field Current Density is computed.

Calculate Maxwell Stress Logical

If True is given, a tensor field Maxwell Stress is computed.

Calculate Joule Heating Logical

If True is given, a scalar field Joule Field is computed.

In addition to the field computation, two scalar quantities are always computed by the solver and saved in the list of the Simulation section values: Eddy current power and Magnetic Field Energy. The first one is only relevant for time-dependent and harmonic cases.



## Model 15

# Computation of Magnetic Fields in 2D

**Module name:** MagnetoDynamics2D

**Module subroutines:** MagnetoDynamics2D, MagnetoDynamics2DHarmonic, BSolver

**Module authors:** Juha Ruokolainen

**Module status:** Alpha

**Document authors:** Peter R  back

**Document created:** 21.1.2013

**Document edited:** 2.4.2013

### 15.1 Introduction

This module may be used to solve a version of the Maxwell equations in the 2D special case when the approximation may be associated to the z-component of the vector potential. In contrast to the 3D version of the magnetodynamics solver of the previous chapter here standard Lagrange interpolation is applied. In addition to performing the computations in the time domain, the analogous version of the equations may also be solved in the frequency domain. Furthermore, an additional solver may be called to produce the magnetic field intensity from the computed vector potential.

### 15.2 Theory

The relevant equation for this solver is

$$\sigma \frac{\partial A_z}{\partial t} + \nabla \cdot \left( \frac{1}{\mu} \nabla A_z \right) = J_z + \nabla \cdot \vec{M} g_z \quad (15.1)$$

where  $A_z$  is the out-of-plane component of the vector potential,  $J_z$  the corresponding current density and  $\vec{M}$  is the magnetization vector. The harmonic equation is obtained by replacing operator  $\frac{\partial}{\partial t}$  with  $i\omega$ .

### 15.3 Keywords

#### Keywords for MagnetodDynamics2D

Here we list the keywords that are relevant to solving the evolutionary and stationary versions of the equations by calling the solver subroutine `MagnetoDynamics2D` and that may also be common to the other solvers. Such common keywords relate to specifying material parameters, body forces, and boundary conditions.

Constants

Permeability of Vacuum `Real`

This constant has the default value  $4\pi \cdot 10^{-7}$  in SI units. In different unit system change this accordingly.

Material `mat id`

The following material parameters may be used by all the solvers in the module.

Electric Conductivity `Real`

This keyword is used to specify the electric conductivity  $\sigma$ .

Relative Permeability `Real`

If this keyword is used, the permeability  $\mu$  can be specified in terms of the permeability of vacuum. To obtain the permeability, the value of this keyword is then internally multiplied with the permeability of vacuum. Instead of using this keyword, the keywords `Permeability` or `Reluctivity` may be used.

Permeability `Real`

This keyword may be used to specify directly the permeability  $\mu$ .

Reluctivity `Real`

The value of this keyword specifies the reluctivity  $\nu$ . The permeability is then taken to be  $\mu = 1/\nu$ .

Magnetization `i Real`

The components of the Magnetization vector,  $i = 1, 2$ .

B-H Curve `Cubic Real`

The  $B - H$  curve must be given as a cubic spline. This enables that the derivative of the curve is computed analytically from the spline coefficients.

Solver `solver id`

Equation `String MgDyn2D`

A describing name for the discrete model handled by this solver may be given by using this keyword. The name can be changed as long as it is used consistently.

Procedure `File "MagnetoDynamics2D" "MagnetoDynamics2D"`

This declaration specifies the name of the solver subroutine.

Variable `String Az`

The name of the variable may be freely chosen provided it is used consistently also elsewhere. The associated number of degrees of freedom should always be one.

Nonlinear System Max Iterations `Integer`

If the material laws are nonlinear the equation may need some iterations before reaching the solution. This keywords gives the maximum number of iterations. The default is one. If a nonlinear  $H - B$  curve is given then Newton's linearization is applied after the 1st iteration.

Nonlinear System Convergence Tolerance `Real`

This keyword gives the convergence tolerance for the nonlinear iteration.

Body Force `bf id` In the body force section the user may give various volume sources.

Current Density `Real`

This keyword is used to specify the current density in the z-direction.

Boundary Condition `bc id`

`Az Real`

This keyword is used to specify the Dirichlet condition for the vector potential.

Infinity BC `Logical`

Sets far-field conditions for the vector potential assuming spherical symmetry at distance.

Mortar BC `Integer`

This enforces continuity in the case of rotating boundary conditions by the mortar finite element method. Note that this feature is still under development.

## Keywords for Magnetodynamics2DHarmonic

Here only the additional keywords related to the harmonic solver are listed. For other keywords see the definitions above.

Material `mat id`

Electric Conductivity `im Real`  
Imaginary part of the electric conductivity.

Magnetization `i Im Real`  
Imaginary components of the Magnetization vector,  $i = 1, 2$ .

Solver `solver id`

Equation `String MgDyn2DHarmonic`  
A name for the solver.

Procedure `File "MagnetoDynamics2D" "MagnetoDynamics2DHarmonic"`  
This declaration specifies the name of the solver subroutine.

Variable `String Az[Az Re:Az Im`  
The name of the variable may be freely chosen provided it is used consistently also elsewhere.  
The associated number of degrees of freedom should always be two.

Body Force `bf id` In the body force section the user may give various volume sources.

Current Density `Im Real`  
This keyword is used to specify the imaginary part of the current density.

## Keywords for Bsolver

An additional solver may finally be called to compute derived fields.

Solver `solver id` The postprocessing solver currently only solves for the magnetic field density. The size of the requested vector field is 2 in when the target variable is real valued and 4 if it is complex valued, respectively. The user does not need to specify the output fields.

Equation `String BSolver`  
A describing name for the solver is given. This can be changed as long as it is used consistently.

Procedure `File "MagnetoDynamics2D" "BSolver"`  
The name of the solver subroutine is given.

Target Variable `String`  
This keyword is used to specify the name of the underlying potential variable, the default is `Az`.

Discontinuous Galerkin `Logical`  
The derived fields are discontinuous if the material properties has jumps. Therefore the visualizations are more appealing if the fields may be allowed to be discontinuous. Setting this flag `True` activates discontinuous Galerkin (DG) computation of the fields. Note that these fields are compatible only with certain postprocessing practices. One possible way is to use `vtu` output and ask elemental fields for saving, such as `Vector Field Elemental 1`.

Average Within Materials `Logical`  
If DG formulation for the fields is asked this enforces averaging of the fields within materials.

# Model 16

# Magnetostatics

**Module name:** StatMagSolve

**Module subroutines:** StatMagSolver

**Module authors:** Juha Ruokolainen, Ville Savolainen, Jussi Heikonen, Peter Råback, Antti Pursula

**Document authors:** Ville Savolainen, Peter Råback, Antti Pursula, Peter Råback

**Document created:** 29.6.2006

**Document edited:** 21.1.2013

## 16.1 Introduction

The Maxwell's equations may generally be expressed with a scalar and a vector potential. The magnetic field is then the curl of the vector potential. In some cases the scalar potential vanishes and the system is fully described by the vector potential. These cases includes magnetostatics and time-harmonic induction at low frequencies.

Magnetostatics describes the time-independent magnetic fields. The magnetic field may be created by electromagnets with given current distributions or permanent ferromagnets. This solver allows the first option, with non-homogeneous and non-linear magnetic materials.

In some cases the current density varies sinusoidally with time. If the field varies slowly and there are no conductors in the system the problem is described with the stationary model. However, in conductors the magnetic field results in additional currents that make the equation complex.

This solver was historically developed for the axisymmetric cases and it should only be used in those. For 3D cartesian cases look at the `MagneticDynamics` module, and for the 2D versio at the `MagnetoDynamics2D`, respectively.

## 16.2 Theory

When there are no hard ferromagnets, the magnetostatics problems may be expressed with magnetic vector potential  $\vec{A}$  that satisfies  $\vec{B} = \nabla \times \vec{A}$ . It is obtained directly from the Ampère's law, with displacement current ignored, that

$$\nabla \times \left( \frac{1}{\mu} \nabla \times \vec{A} \right) = \vec{j}.$$

Here  $\mu$  is the magnetic permeability of the material. The equation may be non-linear through the magnetic permeability curve of a ferromagnetic material. This solver simplified to a Poisson equation in case of 2D or axial symmetry. The current solver is limited to the axisymmetric approximation.

If there are conductors in the system the electric field is obtained from

$$\vec{E} = -\sigma \frac{\partial \vec{A}}{\partial t},$$

where  $\sigma$  is the electric conductivity. In time-harmonic case the current density is sinusoidal  $\vec{j} = \vec{j}_0 e^{i\omega t}$ , where  $\omega = 2\pi f$  is the angular frequency. Using a trial  $\vec{A} = \vec{A}_0 e^{i\omega t}$  we obtain an equation for the amplitude

$$\nabla \times \left( \frac{1}{\mu} \nabla \times \vec{A}_0 \right) + i\omega\sigma \vec{A}_0 = \vec{j}_0.$$

If the geometry is axisymmetric, then the magnetic flux density  $\vec{B}$  has only  $r$ - and  $z$ -components, and the current density  $\vec{j}$  and the vector potential  $\vec{A}$  only  $\phi$ -components, and

$$\nabla \times \left( \frac{1}{\mu} \nabla \times A_\phi \vec{e}_\phi \right) + i\omega\sigma A_\phi \vec{e}_\phi = j_\phi \vec{e}_\phi. \quad (16.1)$$

The current density is given as a body force with the keyword `Current Density`. The vector potential satisfies now automatically the Coulomb gauge.

In steady state case  $A_\phi$  is real and there is only one unknown. In the harmonic case the equation has two unknowns – the in-phase and the out-of-phase component of the vector potential. After solution the heat generation in the conductors may be computed from

$$h = \frac{1}{2} \sigma \omega^2 |\vec{A}_0|^2.$$

The magnetic flux density is calculated as a post-processing step from the vector potential. Both the vector potential and the magnetic flux density components are created for later to be saved. The variable names in the result file are `magnetic vector potential` and `magnetic flux density 1, 2` and `3`.

This solver deals with steady-state and harmonic problems. However, the problem may be solved nominally time-dependent. This merely means that it is solved for a set of given current densities.

### 16.2.1 Boundary Conditions

For the magnetostatics equation one can apply either Dirichlet or natural boundary conditions. In both cases, one must check that the computational domain is extended far enough to avoid numerical errors.

The Dirichlet boundary condition for  $A_\phi$  is

$$A_\phi = A_\phi^b. \quad (16.2)$$

In practice, when Dirichlet condition is used, usually  $A_\phi^b = 0$ . The keyword for the Dirichlet boundary condition is `Magnetic Vector Potential`. If Dirichlet condition is not specified, natural boundary condition is used.

## 16.3 Keywords

Simulation

`Frequency Real`

`Frequency  $f$`  if harmonic simulation is used.

`Angular Frequency Real`

`Angular frequency  $\omega = 2\pi f$`  if harmonic simulation is used, alternative to the previous one.

Constants

`Permeability of Vacuum Real  $[4\pi 10^{-7}]$`

Solver `solver id`

Note that all the keywords related to linear solver (starting with `Linear System`) may be used in this solver as well. They are defined elsewhere.

Equation String [Static Magnetic Field]

The name of the equation.

Variable String [Aphi]

The name of the variable.

Variable Dofs Integer

Number of dofs in the field, this should be one for the steady-state case and two for time-harmonic analysis.

Procedure File ["StatMagSolve" "StatMagSolver"]

The name of the file and subroutine.

Harmonic Simulation Logical

Assume time-harmonic simulation.

Calculate Magnetic Flux Logical [True]

By this flag the computation of the magnetic flux is activated. The default is False.

Calculate Magnetic Flux Abs Logical [True]

Sometimes it is useful to have the absolute magnetic flux available for nonlinear material laws. Then this flag can be turned on. The default is False.

Calculate Joule Heating Logical [True]

In large computations the automatic computation of the Joule heating may be turned off by this keyword. The default is False. The keyword is only applicable for the harmonic case. The computation results to two additional variables. `Joule Heating` gives the absolute heating and `Joule Field` the field that gives the heating when multiplied by the electric conductivity. This may be needed if the electric conductivity is discontinuous making also the heating power discontinuous.

Desired Heating Power Real

A constant that gives the desired total heating power in Watts. If the keyword is active the `Joule Heating` and `Joule Field` are multiplied by the ratio of the desired and computed heating powers.

Nonlinear System Convergence Tolerance Real

This keyword gives a criterion to terminate the nonlinear iteration after the relative change of the norm of the field variable between two consecutive iterations  $k$  is small enough

$$\|A_\phi^k - A_\phi^{k-1}\| < \epsilon \|A_\phi^k\|,$$

where  $\epsilon$  is the value given with this keyword.

Nonlinear System Max Iterations Integer

The maximum number of nonlinear iterations the solver is allowed to do. If neither the material parameters nor the boundary conditions are functions of the solution the problem is linear, this should be set to 1.

Nonlinear System Relaxation Factor Real

Giving this keyword triggers the use of relaxation in the nonlinear equation solver. Using a factor below unity is sometimes required to achieve convergence of the nonlinear system. A factor above unity might speed up the convergence. Relaxed variable is defined as follows:

$$A'_\phi = \lambda A_\phi^k + (1 - \lambda) A_\phi^{k-1},$$

where  $\lambda$  is the factor given with this keyword. The default value for the relaxation factor is unity.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies:

Static Magnetic Field Logical

If set to True, solve the magnetostatics equation.

Body Force `bf id`

The body force section may be used to give additional force terms for the equations.

Current Density `Real`

Specifies the azimuthal component of the current density. May be a positive or negative constant or a function of a given variable.

Current Phase Angle `Real`

Specifies the phase angle of the current density in degrees. The default phase angle is zero. Applies only to the time-harmonic case.

Joule Heat `Logical`

If this flag is active the Heat equation will automatically include the computed Joule heating as a heat source. Then it is assumed that Joule heating field is named  $\phi$  is named `Joule field`. If there is no heat equation this flag has no effect.

Initial Condition `ic id`

The initial condition section may be used to set initial values for the field variables. The following variable is active:

Aphi `Real`

The azimuthal component of the magnetic vector potential.

Material `mat id`

The material section is used to give the material parameter values. Material parameter available for the magnetostatics equation are.

Relative Permeability `Real`

The relative magnetic permeability  $\mu$  is set with this keyword, defining the material relation  $\vec{B} = \mu_r \mu_0 \vec{H}$ . By default the relative magnetic permeability is one, but it may also be set otherwise or be a function of a given variable, typically given by the relation  $\mu_r = \mu_r(|\vec{B}|)$ . The value of the magnetic flux density  $|\vec{B}|$  is available by the variable named. Absolute Magnetic Flux.

Electric Conductivity `Real`

The electric conductivity defines the relation  $\vec{j} = \sigma \vec{E}$ . Only isotropic case is possible. The parameter is needed only in the time-harmonic case.

Boundary Condition `bc id`

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary condition may be set for the vector potential. The one related to the axisymmetric magnetostatics problem is

Aphi `Real`

The azimuthal component of the magnetic vector potential.

## Model 17

# Magnetic Induction Equation

**Module name:** MagneticSolve

**Module subroutines:** MagneticSolver

**Module authors:** Juha Ruokolainen

**Document authors:** Ville Savolainen, Antti Pursula

**Document edited:** May 24th 2005

### 17.1 Introduction

The magnetic induction equation describes interaction of a conducting liquid or gas with applied and induced magnetic fields in the low-frequency domain. The induction equation for the magnetic flux density is always coupled to the Navier-Stokes equation for the movement of the fluid. The magnetic field, in turn, causes the Lorentz force in the Navier-Stokes equation. The fluid is typically hot, and the Navier-Stokes equation is often coupled also to the heat equation.

The induction equation solver can also be used in a body without a moving fluid, i.e., when  $\vec{v} = 0$  and the Navier-Stokes equation is not solved. In this case, the problem belongs to the field of magneto-quasistatics.

### 17.2 Theory

The magnetic induction equation may be derived from the Maxwell's equations, with the displacement current in Ampère's law neglected, and the Ohm's law for conducting fluids,  $\vec{j} = \sigma(\vec{E} + \vec{v} \times \vec{B})$ . This approximation for the behavior of electromagnetic fields in conducting, moving fluids is called magnetohydrodynamics.

The magnetic induction equation is given by

$$\frac{\partial \vec{B}}{\partial t} + \frac{1}{\sigma \mu} \nabla \times \nabla \times \vec{B} - \nabla \times (\vec{v} \times \vec{B}) = 0, \quad (17.1)$$

where  $\sigma$  is the electric conductivity and  $\mu$  the magnetic permeability of the material. These must be specified in the `Material` section by the keywords `Electric Conductivity` and `Magnetic Permeability`.

The force term induced by the magnetic field for the flow momentum equations is given by

$$\vec{f}_m = \vec{j} \times \vec{B}, \quad (17.2)$$

and the Joule heating in the heat equation by

$$h_m = \frac{1}{\sigma} |\vec{j}|^2, \quad (17.3)$$

where  $\vec{j}$  is the current density, calculated from the Ampère's law  $\vec{j} = \nabla \times \vec{H}$ . These body forces are specified by the keywords `Lorentz Force` and `Joule Heat`.



The magnetic field can also be divided into external, or applied, and induced field,  $\vec{B} = \vec{B}^e + \vec{B}^i$ . The external magnetic field  $\vec{B}^e$  is created by permanent magnets or currents outside the fluid. The external field may be given to the induction equation solver either from a restart file, e.g., as calculated by the magnetostatic solver, or defined via the `sif` file's keywords `Applied Magnetic Field 1, 2 and 3`. If the restart file is used, the components of  $\vec{B}^e$  are read from the variables named `magnetic flux density 1, 2 and 3`. If both methods are used, the two applied fields are summed together. It is assumed that the sources of the external field are outside the flow region, i.e.,  $\nabla \times \vec{B}^e = 0$ , and that the time derivative of the external field can be ignored. The time derivative  $\partial \vec{B}^e / \partial t$  can, however, be specified directly by the keywords `Magnetic Bodyforce 1, 2 and 3`. The induction equation solver gives the components of the induced magnetic field  $\vec{B}^i$ .

Both transient and steady-state solvers for the magnetohydrodynamical system (induction, Navier-Stokes and heat equations) are available. The magnetostatic and time-harmonic solvers for the external magnetic field are described elsewhere in the Models Manual. In some cases it is also possible that the velocity is *a priori* known, for example when studying induction in a rotating body. Then a user defined velocity can be used instead of computing the velocity from Navier-Stokes equations.

Currently the induction equation can be solved in a cylindrically symmetric or a general three-dimensional formulation.

### 17.2.1 Boundary Conditions

For the induction equation one can apply either Dirichlet or natural boundary conditions. In both cases, one must check that the computational domain is extended far enough to avoid numerical errors. For this reason, it is possible to solve the magneto-quasistatics problem in an adjacent body.

The Dirichlet boundary condition for a component of the induced magnetic field  $B_i$  (we have dropped now the superscript  $i$  that marked the induced field) is

$$B_i = B_i^b. \quad (17.4)$$

$B_i^b$  can be a constant or a function of time, position or other variables. The keywords for the Dirichlet boundary conditions are `Magnetic Field 1, 2 and 3`.

In the cylindrically symmetric case, the Dirichlet boundary condition for the azimuthal component  $B_\phi$  is in the same units as for the other two components, i.e., in T, and not for a contravariant component. On the symmetry axis one has to set  $B_r = 0$  and  $B_\phi = 0$ , and  $\partial B_z / \partial r = 0$  is applied implicitly.

If no Dirichlet condition is specified, natural boundary condition is applied.

## 17.3 Keywords

`Solver solver id`

Note that all the keywords related to linear solver (starting with `Linear System`) may be used in this solver as well. They are defined elsewhere.

`Equation String [Magnetic Induction]`

The name of the equation. It is also possible to use this solver as external procedure. Then the name of the equation must not be the above (use e.g. `Magnetic Field Solver`). Also the following four keywords have to be added with the values give here.

`Procedure File "MagneticSolve" "MagneticSolver"`

`Variable String Magnetic Field`

`Variable DOFs Integer 3`

`Exported Variable 1 = -dofs 3 electric current`

The above four keywords are to be given only when using the solver as an external procedure.

`Nonlinear System Convergence Tolerance Real`

This keyword gives a criterion to terminate the nonlinear iteration after the relative change of the norm of the field variable between two consecutive iterations  $k$  is small enough

$$\|\vec{B}^k - \vec{B}^{k-1}\| < \epsilon \|\vec{B}^k\|,$$

where  $\epsilon$  is the value given with this keyword.

Nonlinear System Max Iterations Integer

The maximum number of nonlinear iterations the solver is allowed to do. If neither the material parameters nor the boundary conditions are functions of the solution, the problem is linear, and this should be set to 1.

Nonlinear System Relaxation Factor Real

Giving this keyword triggers the use of relaxation in the nonlinear equation solver. Using a factor below unity is sometimes required to achieve convergence of the nonlinear system. A factor above unity might speed up the convergence. Relaxed variable is defined as follows:

$$\vec{B}' = \lambda \vec{B}^k + (1 - \lambda) \vec{B}^{k-1},$$

where  $\lambda$  is the factor given with this keyword. The default value for the relaxation factor is unity.

Steady State Convergence Tolerance Real

With this keyword a equation specific steady state or coupled system convergence tolerance is given. All the active equation solvers must meet their own tolerances for their variable  $u$ , before the whole system is deemed converged. The tolerance criterion is:

$$||u_i - u_{i-1}|| < \epsilon ||u_i||,$$

where  $\epsilon$  is the value given with this keyword.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies:

Magnetic Induction Logical

If set to True, solve the magnetic induction equation.

User Defined Velocity Logical

Controls whether the velocity is given by the user or computed by another solver. Default value is False, which means that velocity solution of Navier-Stokes equations is used.

Navier-Stokes Logical

If set to True, solve also the Navier-Stokes equations. For magnetohydrodynamics, this is done, except when the computational region for the magnetic field is extended beyond the fluid.

Heat Equation Logical

If set to True, solve also the heat equation.

Body Force bf id

The body force section may be used to give additional force terms for the equations.

Lorentz Force Logical

If set true, triggers the magnetic field force for the flow momentum equations.

Joule Heat Logical

If set true, the Joule heating is added in the heat equation.

Magnetic Bodyforce i Real

This keyword can be used to specify explicitly the time dependence of the external field, i.e., the term  $-\partial \vec{B}^e / \partial t$ . This is especially useful for time-harmonic fields, where the time derivative can be calculated and expressed easily.

Initial Condition ic id

The initial condition section may be used to set initial values for the field variables. The following variables are active:

Magnetic Field i Real

For each magnetic flux density component  $i = 1, 2, 3$ .

**Material** *mat id*

The material section is used to give the material parameter values. The following material parameters may be set for the induction equation. They can be a constant or a function of a given variable.

**Magnetic Permeability** *Real*

The magnetic permeability is set with this keyword. For most fluids, the vacuum value for  $\mu_0$  can be used, and the keyword set to `1.25664e-6`.

**Electric Conductivity** *Real*

The value of the electric conductivity is set with the keyword. For example, for polythermal flows the conductivity could be a function of the temperature.

**Applied Magnetic Field** *i Real*

This keyword can be used to specify the external field, or a part of it, and its contribution to the term  $\nabla \times (\vec{v} \times \vec{B}^e)$ . The field may be a function of, e.g., time or position.

**MHD Velocity** *i Real*

The user defined velocity can be given with these keywords with  $i=1, 2, 3$ .

**Boundary Condition** *bc id*

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The ones related to induction equation are

**Magnetic Field** *i Real*

Dirichlet boundary condition for each magnetic flux density component  $i=1, 2, 3$ .

# Model 18

## Electrokinetics

**Module name:** Electrokinetics

**Module subroutines:** helmholtz\_smoluchowski1, helmholtz\_smoluchowski2, helmholtz\_smoluchowski3, helmholtz\_smoluchowski

**Module author:** Thomas Zwinger

**Document author:** Thomas Zwinger

**Document created:** April 13th 2005

### 18.1 Introduction

If dealing with electrolytic fluids constrained to small volumes, surface forces caused by electric surface charges in combination with externally applied electrostatic fields are sufficient strong to affect the fluid volume. If these effects are utilized to attenuate the fluid volume, we talk of *Electrokinetics*. The term *Electroosmotic Flow* (EOF) is used in connection with the attenuation of a net charge inside a originally neutral electrolyte caused by separation induced by a surface charge of a wall.

### 18.2 Theory

Chemical reactions between the contents of a liquid and the wall material may lead to a net charge of the containment at the wall-liquid interface. If the liquid is an electrolyte (i.e., it contains free ions), ions of opposite charge align along the wall creating the *Stern layer*. Adjacent to the Stern layer, a charge separation - called the *diffuse layer* of the initially neutral electrolyte takes place. Due to the two layer structure the whole area of charge separation in the vicinity of a wall is called the *Electric Double layer* (EDL).

#### 18.2.1 Electroosmotic slip velocity

Considering a symmetric electrolyte – i.e., the bulk ion density of ions with opposite valence numbers  $\pm z$  are equal  $n_0^+ = n_0^- = n_0$  – at a certain temperature,  $T$ , the typical width-scale of the EDL is given by the *Debye length* [1]

$$\lambda_D = \left( \frac{\epsilon_f \epsilon_0 k_b T_0}{2 n_0 z^2 e_0^2} \right)^{1/2}. \quad (18.1)$$

Here  $e_0$  stands for the unit charge and  $k_b$  denotes the Boltzmann constant. The relative permittivity of the electrolyte and the permittivity of vacuum are given by  $\epsilon_f$  and  $\epsilon_0$ , respectively.

The potential,  $\Phi$  and the volume charge density,  $\rho_e$ , within the EDL are tightly coupled to each other by the Poisson-Boltzmann equation (20.4) (see chapter 20). In order to exactly resolve the dynamics close to the walls, (20.4) should be solved and the resulting specific electric force then be considered in the equation of motion. Nevertheless, provided the typical length scales of the flow perpendicular to the containment walls,  $H$ , strongly exceed those of the EDL – in other words, we obtain very small values for the non-dimensional

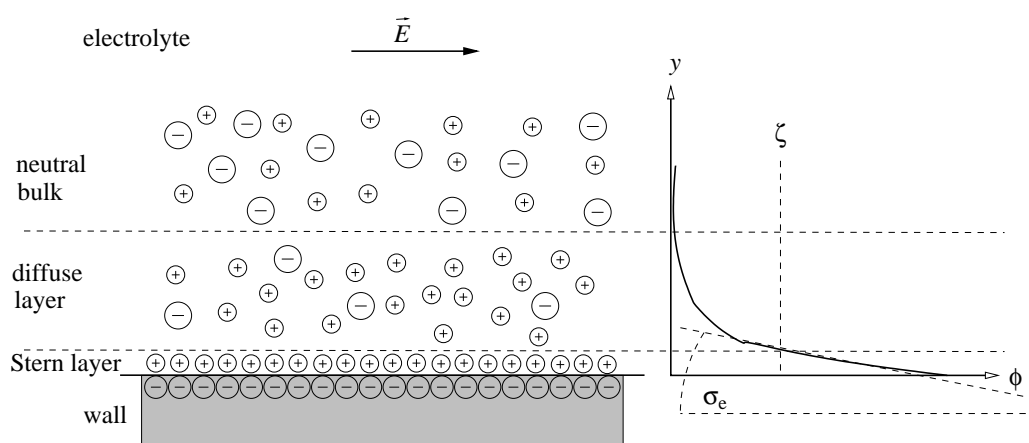


Figure 18.1: Structure of the EDL. The value of the induced potential,  $\Phi$  at the Stern layer usually is referred to as the zeta-potential,  $\zeta$

group  $\mathcal{L} = \lambda_D/H \ll 1$  – the dynamics of the electrolyte inside the EDL does not have to be resolved at all. In this case simple considerations of a force balance between shear stress and electric force lead to a slip condition for the fluid [2]. At the boundary, the tangential velocity is set to the *Helmholtz-Smoluchowski* velocity

$$\vec{u}_{\text{tang.}} = \vec{u}_{\text{H-S}} = \frac{\vec{E}_{\text{tang.}} \epsilon_f \epsilon_0 \zeta}{\mu_f}, \quad (18.2)$$

with  $\mu_f$  standing for the local fluid viscosity. The *zeta potential*,  $\zeta$  – a property depending on the electric properties of the wall material as well as the electrolyte – usually is determined experimentally. From a physical point of view it can be interpreted as the value of the solution obtained by (20.4) at the Stern layer. The tangential component,  $\vec{E}_{\text{tang.}}$ , of the external electric field,  $\vec{E}$ , is evaluated from the outward pointing surface normal  $\vec{n}$ , applying the following relation

$$\vec{E}_{\text{tang.}} = \vec{E} - (\vec{E} \cdot \vec{n}) \vec{n} \quad (18.3)$$

Alternatively, the resulting slip velocity may be related to the tangential field using the *Electroosmotic Mobility*,  $\mu_{\text{EO}}$

$$\vec{u}_{\text{H-S}} = \mu_{\text{EO}} \vec{E}_{\text{tang.}}. \quad (18.4)$$

A combination of (18.2) and (18.4) leads to the following identity

$$\mu_{\text{EO}} = \frac{\epsilon_f \epsilon_0 \zeta}{\mu_f}. \quad (18.5)$$

### 18.3 Limitations

- The Helmholtz-Smoluchowski velocity should not be applied if the non-dimensional group  $\mathcal{L}$  defined in 18.2.1 is of unity order or larger. Then the potential- and charge density distribution as well as the dynamics of the electrolyte inside the EDL has to be resolved.
- In a strict sense, the Helmholtz-Smoluchowski theory applies only to configurations where the normal-component of the external field,  $\vec{E} \cdot \vec{n}$ , is small. If dealing with electric insulating wall materials – as it is usually the case in microfluidic applications – this condition is implicitly complied with.
- The assumption of a Newtonian fluid underlies the derivation of the Helmholtz-Smoluchowski velocity.
- The function `helmholtz_smoluchowski` can only be applied on boundaries of two-dimensional domains, where the tangential direction is uniquely defined.

### 18.4 Keywords

#### Keywords for `helmholtz_smoluchowski`

Constants

Permittivity Of Vacuum Real [8.8542e-12 C<sup>2</sup>/Nm<sup>2</sup>]  
 permittivity of vacuum, only needed if Helmholtz-Smoluchowski velocity is defined using expression (18.2)

Equation `equation id`

Electric Field String [computed, constant]  
 the option for how to evaluate the electric field should be set to one of these values.  
 If set to `computed`, the function will search for Electric Field {1,2,3} in the list of solver variables. If set to `constant`, the function will search for Electric Field {1,2,3} in the section `Material material id`, where `material id` is the id-number associated with the material parameter list of the electrolyte

Material `material id`

If the Helmholtz-Smoluchowski velocity is defined using expression (18.2), then the following keywords have to be provided in this section

Viscosity `Real`  
viscosity of the electrolyte

Density `Real`  
volumetric density of the electrolyte

Relative Permittivity `Real`  
relative permittivity of the electrolyte

Boundary Condition `bc id`

In two-dimensional configurations the Helmholtz-Smoluchowski velocity directly can be assigned to the tangential component of the velocity field

Normal Tangential Velocity `Logical True`

Velocity 2 = Variable `Dummyargument`  
`Real Procedure "Electrokinetics" "helmholtz_smoluchowski"`  
Sets tangential EO slip velocity

The argument `Dummyargument` can be any existing variable, since it is not used to evaluate the velocity.

In three-dimensional configurations (and as an alternative also in two-dimensional), the velocity has to be defined for each component

Normal Tangential Velocity `Logical False`

Velocity 1 = Variable `Dummyargument`  
`Real Procedure "Electrokinetics" "helmholtz_smoluchowski1"`

Velocity 2 = Variable `Dummyargument`  
`Real Procedure "Electrokinetics" "helmholtz_smoluchowski2"`

Velocity 3 = Variable `Dummyargument`  
`Real Procedure "Electrokinetics" "helmholtz_smoluchowski3"`

The argument `Dummyargument` can be any existing variable, since it is not used to evaluate the velocity.

If the Helmholtz-Smoluchowski velocity is defined using expression (18.2), then the zeta potential,  $\zeta$ , for the specific boundary region has to be defined

Zeta Potential `Real`  
Sets the zeta-potential for this boundary

Alternatively, the user can declare the EO-mobility, as explained in (18.5)

EO Mobility `Real`  
Sets EO mobility for this boundary

## Bibliography

- [1] G.E. Karniadakis and A. Beskok. *Micro flows : fundamentals and simulation*. Springer-Verlag, New York, Berlin, Heidelberg, 2001.
- [2] R.-J. Yang, L.-M. Fu, and Y.-C. Lin. Electroosmotic Flow in Microchannels. *J. Colloid and Interface Science*, 239:98–105, November 2001.

## Model 19

# Reduced Dimensional Electrostatics

**Module name:** StatElecBoundary

**Module subroutines:** StatElecBoundaryForce, StatElecBoundaryEnergy,  
StatElecBoundaryCharge, StatElecBoundarySpring

**Module status:** Beta

**Module authors:** Peter Råback

**Document authors:** Peter Råback

**Document created:** 18 Feb 2002

**Document edited:** 2 Jan 2011

## 19.1 Introduction

In some applications the geometry is such that the 3D electrostatics may quite accurately be reduced to a 1D problem. This is the case for nearly aligned planes. If the angle between the planes is  $\varphi$  (in radians) the error of this approximation is roughly  $2\varphi^2/3$ . Therefore we may use an analytical solution that results directly from the distance of the planes that are in different potential. The ideal model may be further developed by taking into account perforated structures and dielectric layers.

## 19.2 Theory

It is assumed here that the electric field is stationary in the time-scale under study. The electric field  $\vec{E}$  may be expressed with an electric scalar potential  $\phi$ ,

$$\vec{E} = \nabla\phi. \quad (19.1)$$

If there are no free charges, the scalar potential may be solved from

$$-\nabla \cdot \epsilon \nabla \phi = 0. \quad (19.2)$$

When one dimension is much smaller than the other two we may assume that the field is one-dimensional. Then the electric field resulting from potential difference  $\Phi = \Delta\phi$  is

$$\vec{E} = E\vec{n} = \frac{\Phi}{d}\vec{n}, \quad (19.3)$$

where  $\vec{n}$  is the unit normal and  $d(\vec{r})$  is the height of the aperture. The energy density per unit area is now,

$$e = \frac{1}{2}\epsilon E^2 d = \frac{\epsilon \Phi^2}{2d}. \quad (19.4)$$



which corresponds to a induced charge density on the surface

$$q = \frac{\varepsilon\Phi}{d}. \quad (19.5)$$

The force is obtained from the derivative of the energy,

$$f = \frac{\partial e}{\partial d} = -\frac{\varepsilon\Phi^2}{2d^2}, \quad (19.6)$$

and the spring constant from the derivative of the force,

$$k = \frac{\partial f}{\partial d} = \frac{\varepsilon\Phi^2}{d^3}, \quad (19.7)$$

The forces and spring constants are always aligned in the direction of the surface normal since any other direction is incompatible with the original assumptions.

### 19.2.1 Electrostatics of perforated structures

If there are holes or other imperfections in the structure they may be homogenized over the whole area. By computing the electric energy and force in the presence and absence of holes we get correction factors

$$e_{holes} = \alpha e_{ideal} \quad (19.8)$$

and

$$f_{holes} = \beta f_{ideal} \quad (19.9)$$

The correction terms may be precalculated for a given geometry. However, if the relative change in the aperture is large the correction terms should be modeled in some manner. we would also like to have similar expressions for the spring constant

$$k_{holes} = \gamma k_{ideal}. \quad (19.10)$$

If we assume that  $e_{holes}$  is proportional to  $1/d$  then the following relations may easily be derived.

$$\beta = \alpha - \alpha' d \quad (19.11)$$

and

$$\gamma = \alpha - \alpha' d + \frac{1}{2} \alpha'' d^2, \quad (19.12)$$

where the derivation is done respect to  $d$ .

Now we are only left with the problem of finding a nice functional approximation for  $\alpha$ . The holes in the membrane may be expressed using three dimensionless variables  $\tilde{d} = d/r$ ,  $\tilde{b} = b/r$  and  $\tilde{R} = R/r$ . Here  $r$  is the hole radius,  $b$  the hole depth,  $d$  the aperture and  $R$  the distance between holes. When  $\tilde{R} \gg 1$  and  $\tilde{b} \gg 1$  the correction depends only on  $\tilde{d}$ .

Numerical computations suggest that the correction  $\alpha(\tilde{d})$  should approach unity as the distance  $\tilde{d}$  approaches unity. On the other hand, it should approach  $1 - q$  for small values of  $d$ . Here  $q$  is the area fraction of the holes.

Numerical calculations suggest that a second order rational polynom gives quite an accurate fit to the computed results,

$$\alpha(d) = 1 - q \frac{1}{1 + a_1 d + a_2 d^2}. \quad (19.13)$$

Fully analytical formulas are now more tedious but the values for  $\beta$  and  $\gamma$  are easily calculated using the derivatives

$$\alpha(d)' = q \frac{a_1 + 2a_2 d}{(1 + a_1 d + a_2 d^2)^2}, \quad (19.14)$$

and

$$\alpha(d)'' = 2q \frac{a_2 - 2a_1^2 - 3a_1 a_2 d - 3a_2^2 d^2}{(1 + a_1 d + a_2 d^2)^3}. \quad (19.15)$$

Least squares fitting to the numerical computations suggest that for cylindrical hole  $a_1 = 4.2523$ ,  $a_2 = 0.4133$ , for a rectangular slot  $a_1 = 2.3198$ ,  $a_2 = 0.2284$  and for a square hole  $a_1 = 3.8434$ ,  $a_2 = 0.3148$ . When fitting the model the suggested constant term diverged up to 4 % from unity but the value one was enforced anyway because it has the nice limiting value properties.

### 19.2.2 Dielectric layer

If the conductor is covered with a dielectric layer we need to modify the equations. We assume that the aperture consists of two materials with permittivities  $\varepsilon_1$  and  $\varepsilon_2$  and thicknesses  $d_1$  and  $d_2$ . Because the flux must be the same this means that the fields are

$$E_1 = \frac{\Phi}{d_1 + \varepsilon_1 d_2 / \varepsilon_2} \quad (19.16)$$

and

$$E_2 = \frac{\Phi}{\varepsilon_2 d_1 / \varepsilon_1 + d_2}. \quad (19.17)$$

Defining  $d_x = d_1 + \varepsilon_1 d_2 / \varepsilon_2$  these become

$$E_1 = \frac{\Phi}{d_x} \quad (19.18)$$

and

$$E_2 = \frac{\varepsilon_1}{\varepsilon_2} \frac{\Phi}{d_x}. \quad (19.19)$$

The total energy density is then

$$e = \frac{1}{2} \varepsilon_1 \Phi^2 \frac{d_1}{d_x^2} + \frac{1}{2} \frac{\varepsilon_1^2}{\varepsilon_2} \Phi^2 \frac{d_2}{d_x^2} = \frac{\varepsilon_1 \Phi^2}{2 d_x}. \quad (19.20)$$

We assume that the resonator moves so that  $d_1$  changes and  $d_2$  remains constant. Then the force density is

$$f = \frac{\partial e}{\partial d_1} = \frac{\partial e}{\partial d_x} \frac{\partial d_x}{\partial d_1} = -\frac{\varepsilon_1 \Phi^2}{2 d_x^2}. \quad (19.21)$$

And similarly the spring constant density

$$k = \frac{\partial f}{\partial d_1} = \frac{\varepsilon_1 \Phi^2}{d_x^3}. \quad (19.22)$$

These expressions may be used inside the integral instead of the constant field values to account for the dielectric layer. It may be noted that the equations are exactly the same as for the case without the layer except that the aperture  $d$  is replaced with the efficient aperture  $d_x = d_1 + \varepsilon_1 d_2 / \varepsilon_2$ .

## 19.3 Implementation issues

This module is not a solver in itself. It only provides boundary conditions for real models. Natural models to combine with these boundary conditions are models describing deformation in solid structures. For plates the conditions are applied to the leading dimension while for generic 3D solids the conditions are applied to the boundaries. Therefore the same subroutines may be applied to either boundary or to material section. There is actually just one subroutine and the value it returns is defined by the name of the routine used to call it.

These routines here were historically developed for MEMS modeling in a different setting and were much later added to the open source publication as a lighter version.

## 19.4 Keywords

Constants

Permittivity Of Vacuum Real [8.8542d-12]

The default is given in SI units. In other units the constant should be changed appropriately.

Boundary Condition bd id

Procedure "StatElecBoundary" "StatElecBoundaryForce"  
Function that returns the nodal force density.

Procedure "StatElecBoundary" "StatElecBoundaryCharge"  
Function that returns the nodal charge density.

Procedure "StatElecBoundary" "StatElecBoundaryEnergy"  
Function that returns the nodal energy density.

Procedure "StatElecBoundary" "StatElecBoundarySpring"  
Function that returns the nodal spring density.

Gap Height Real  
Distance on which the 1D electrostatic model is applied for. May depend on displacement, for example, via MATC functions.

Potential Difference Real  
Potential difference between the plates.

Relative Permittivity Real  
Relative permittivity of the material between the plates.

Layer Thickness Real  
There may be a non-conducting layer on top of the plate. If this keyword is not defined no layer is assumed.

Layer Permittivity Real  
Relative permittivity of the layer.

Hole Type String [slot / round / square]  
The 1D electrostatics can account also for perforated structures if the depth of the hole is large compared to the width of the hole. The different hole geometries are an infinite slot, a round hole and a square hole.

Hole Size Real  
The size of the hole is for a round hole the radius, for a square half the side and for a slot half of the width.

Hole Fraction Real  
The fraction of the holes on the surface.

Hole Depth Real  
The depth of the holes i.e. also the thickness of the perforated plate.

## Model 20

# Poisson-Boltzmann Equation

**Module name:** PoissonBoltzmannSolve

**Module subroutines:** PoissonBoltzmannSolve

**Module authors:** Peter Råback

**Document authors:** Peter Råback

**Document edited:** 10.8.2004

### 20.1 Introduction

The macroscopic electromagnetic theory is governed by the Maxwell's equations. In steady state the electric field may usually be solved from a simple Poisson equation. However, if there are free charges in the domain that are affected by the electric field the equation is no longer valid. Also the contribution of the free charges need to be taken into consideration. If the electrostatic force is the only force affecting the distribution of the electric charges then the potential in the steady-state is given by the Poisson-Boltzmann equation [1]. This equation may find its use in microfluidics and electrochemical applications. Note that if the charge distribution is affected by the flow distribution of the carrier fluid this equation is no longer valid.

### 20.2 Theory

The electrostatic equation for the electric potential  $\phi$  yields,

$$-\nabla \cdot \varepsilon \nabla \phi = \rho, \quad (20.1)$$

where  $\varepsilon$  is the permittivity of the medium and  $\rho$  is the charge density. Assuming that there is a fixed charge density and both positive or negative moving ions the charge may be written as

$$\rho = \rho_0 + e(z^- n^- + z^+ n^+) \quad (20.2)$$

where  $\rho_0$  is interior charge distribution of fixed positions of all solute charges, and  $e$  is the unit charge of a electron, and  $z$  is the charge number of the positive or negative ions, and  $n$  is the corresponding ion density.

The electrochemical potential  $\mu$  of the ions is defined by  $\mu = ez\phi + k_B T \ln n$ , where the first term is the electrostatic contribution and the second term comes from the entropy of the ions at the weak solution limit. In equilibrium  $\mu_i$  is constant over the whole domain and thus the ion density obeys a Boltzmann distribution,

$$n = n_0 e^{-ez\phi/k_B T} \quad (20.3)$$

where  $k_B$  is the Boltzmann constant. Inserting this to the Poisson equation we obtain the Poisson-Boltzmann equation that determines the potential field self-consistently,

$$-\nabla \cdot \varepsilon \nabla \phi = \rho_0 + ez^- n_0^- e^{-ez^- \phi/k_B T} + ez^+ n_0^+ e^{-ez^+ \phi/k_B T}. \quad (20.4)$$

A special case of the equation is obtained if the charge numbers and the concentrations are equal,  $z = -z^- = z^+$  and  $n_0 = n_0^- = n_0^+$ . Then the equation simplifies to

$$-\nabla \cdot \varepsilon \nabla \phi = \rho_0 - 2ezn_0 \sinh(ez\phi/k_B T). \quad (20.5)$$

The Poisson-Boltzmann equation is obviously nonlinear. We will show the iterative procedure only for this case, the generic case is dealt similarly.

### 20.2.1 Iteration scheme

Defining  $\alpha = 2ezn_0$  and  $\beta = ez/k_B T$  the Poisson-Boltzmann equation for a symmetric electrolyte may be written as

$$-\nabla \cdot \varepsilon \nabla \phi = \rho_0 - \alpha \sinh(\beta \phi). \quad (20.6)$$

The straight-forward iterative procedure treats only the left-hand-side of the equation in an implicit manner,

$$-\nabla \cdot \varepsilon \nabla \phi^{(n+1)} = \rho_0 - \alpha \sinh(\beta \phi^{(n)}). \quad (20.7)$$

The convergence of this scheme is, however, quite poor for many cases of practical interest. An improved strategy should linearize also the right-hand-side.

Making a Taylor's expansion we may approximate

$$\sinh(\beta \phi^{(n+1)}) \approx \sinh(\beta \phi^{(n)}) + \beta \cosh(\beta \phi^{(n)})(\phi^{(n+1)} - \phi^{(n)}) \quad (20.8)$$

which results to the Newton iteration scheme

$$\begin{aligned} & \left[ -\nabla \cdot \varepsilon \nabla + \alpha \beta \cosh(\beta \phi^{(n)}) \right] \phi^{(n+1)} \\ &= \rho_0 - \alpha \sinh(\beta \phi^{(n)}) + \alpha \beta \cosh(\beta \phi^{(n)}) \phi^{(n)}. \end{aligned} \quad (20.9)$$

This scheme has good convergence properties and is usually the method of choice.

### 20.2.2 Boundary conditions

For electric potential either Dirichlet or Neumann boundary condition can be used. The Dirichlet boundary condition gives the value of the potential on specified boundaries. The Neumann boundary condition is used to give a flux condition on specified boundaries

$$\sigma = \varepsilon \nabla \phi \cdot \vec{n}, \quad (20.10)$$

where  $\sigma$  is the surface charge density.

### 20.2.3 Derived quantities

When the potential has been solved the electric field may be obtained as a postprocessing step from

$$\vec{E} = -\nabla \phi. \quad (20.11)$$

Charge density may be obtained as the right-hand-side of the Poisson equation,

$$\rho = \rho_0 + ez^- n_0^- e^{-ez^- \phi/k_B T} + ez^+ n_0^+ e^{-ez^+ \phi/k_B T}. \quad (20.12)$$

which in symmetric case yields,

$$\rho = \rho_0 - 2ezn_0 \sinh(ez\phi/k_B T). \quad (20.13)$$

The energy density of the field may be computed from

$$e = \frac{1}{2} \vec{E} \cdot \vec{D} = \frac{1}{2} \varepsilon (\nabla \phi)^2. \quad (20.14)$$

However, in a more generic treatment also the contribution of the concentration should be included in the expression of the energy.

## 20.3 Notes on output control

The user can control which derived quantities (*i.e.* electric field and electric energy) are calculated.

There are also available two choices of visualization types for the derived quantities. The node values can be calculated by taking the average of the derived values on neighboring elements (constant weights). This results often in visually good images. The other possible choice is to weight the average with the size of the elements, which is more accurate and should be used when some other variable depends on these derived values. The latter choice is also the default.

## 20.4 Keywords

Constants

Permittivity Of Vacuum Real [8.8542e-12 C<sup>2</sup>/Nm<sup>2</sup>]

Boltzmann Constant Real [1.3807e-23 J/K]

Unit Charge Real [1.602e-19 C]

Equation equation id

Calculate Electric Energy Logical [False]

Controls whether the electric energy density is written in results files (default False).

Solver solver id

Equation String Poisson Boltzmann Solver

Variable String Potential

This may be of any name as far as it is used consistently also elsewhere.

Variable DOFs Integer 1

Degrees of freedom for the potential.

Procedure File PoissonBoltzmannSolve PoissonBoltzmannSolve

Following are listed three keywords with default values for output control.

Nonlinear System Max Iterations Integer

The maximum number of nonlinear iterations.

Nonlinear System Convergence Tolerance Real

The relative error after which the iteration is terminated.

Nonlinear System Newton After Iterations Integer

The number of iterations after which Newton iteration is turned on. The default is zero which should usually be optimal.

Nonlinear System Newton After Tolerance Real

Optional parameter which gives the tolerance in error after which Newton iteration is turned on.

Calculate Electric Field Logical [True]

Calculate Electric Flux Logical [True]

Constant Weights Logical [True]

Used to turn constant weighting on for the results.

Material mat id

Relative Permittivity Real

The total permittivity is the product of the relative permittivity and the permittivity of vacuum.

Reference Temperature Real

This keyword is used to give the temperature occurring in the Boltzmann factor.

Charge Number Integer

For symmetric cases the charge number. For unsymmetric cases one may give separately Positive Charge Number and Negative Charge Number.

Ion Density Integer

For symmetric cases the original density of ions. For unsymmetric cases one may give separately Positive Ion Density and Negative Ion Density.

An alternative set of parameters are also possible which are particularly suitable for testing purposes. These are limited to the symmetric case where the potential normalized with the Zeta potential is solved. Then the permittivities should be set to unity and only two variables are needed to define the case.

Poisson Boltzmann Beta Real

This keyword gives the ratio of parameter  $\beta$  to the the Zeta potential.

Poisson Boltzmann Alpha Real

This keyword gives the parameter  $\alpha$

Body Force bodyforce id

Charge Density Real

The fixed charge distribution that is not affected by the electric field.

Boundary Condition bc id

Potential Real

Electric Flux BC Logical

Must be set to True if flux BC is used.

Surface Charge Real

Gives the surface charge for the Neumann boundary condition.

## Bibliography

- [1] D. Andelman. *Handbook of Biological Physics*, chapter 12. Electrostatic Properties of Membranes: The Poisson-Boltzmann Theory. Elsevier Science, 1995.

## Model 21

# Reynolds Equation for Thin Film Flow

**Module name:** ReynoldsSolver

**Module subroutines:** ReynoldsSolver, ReynoldsHeatingSolver

**Module authors:** Peter Råback

**Module status:** Alpha

**Document authors:** Peter Råback

**Document created:** 24.10.2007

**Document edited:** 24.10.2007

### 21.1 Introduction

The flow of fluids is in the continuum level usually described by the Navier-Stokes equations. For narrow channels this approach is an overkill and usually not even necessary. Neglecting the inertial forces and assuming fully developed laminar velocity profiles the flow equations may be reduced in dimension resulting to the Reynolds equation.

The current implementation of the Reynolds equation is suitable for incompressible and weakly compressible liquids as well as for isothermal and adiabatic ideal gases. The nonlinear terms for the compressible fluids are accounted for. The fluid is assumed to be newtonian i.e. there is a direct connection between the strain rate and stress. The equation may be solved either in steady state or in a transient mode.

There is an additional solver for postprocessing purposes that computes the local heat generation field using the Galerkin method. It also computes the integrals over the force and heating fields over the whole area.

### 21.2 Theory

The underlying assumption of the Reynolds equation is that the flow in the channel is fully developed and has thus the Hagen-Poiseuille parabolic velocity profile. Accounting also for the movement of the planes and leakage through perforation holes the pressure may be solved from the equation

$$\nabla \cdot \left( \frac{\rho h^3}{12\eta} \nabla p \right) - Y \rho p = \frac{1}{2} \nabla \cdot (\rho h \vec{v}_t) + h \frac{\partial \rho}{\partial t} + \rho v_n, \quad (21.1)$$

where  $\rho$  is the density,  $\eta$  is the viscosity,  $p$  is the pressure and  $h$  is the gap height,  $v_t$  is the tangential velocity, and  $v_n$  is the velocity in direction of the surface normal [1, 5]. Holes may be homogenized using the flow admittance  $Y$  which gives the ratio between pressure drop and mean flow velocity through the hole.

The exact form of the Reynolds equation depends on the material law for density,  $\rho(p)$ . The absolute value of density does not play any role and therefore we may study just the functional forms. For gases we solve for the pressure variation from the reference pressure  $P_0$  rather than for the absolute pressure. The



different functional forms for some idealized material laws are the following:

$$\begin{aligned}\rho &\propto (P_0 + p) && \text{isothermal ideal gas} \\ \rho &\propto (P_0 + p)^{1/\gamma} && \text{adiabatic ideal gas} \\ \rho &\propto 1 && \text{incompressible} \\ \rho &\propto e^{p/\beta} && \text{weakly compressible.}\end{aligned}$$

Here  $\gamma = C_p/C_V$  is the specific heat ratio and  $\beta$  the bulk modulus. In discretization of the equations it is also useful to derive the functional dependencies of the density derivatives in respect to pressure,

$$\begin{aligned}\rho_p &\propto 1 && \text{isothermal ideal gas} \\ \rho_p &\propto (1/\gamma)(P_0 + p)^{1/\gamma-1} && \text{adiabatic ideal gas} \\ \rho_p &\propto 0 && \text{incompressible} \\ \rho_p &\propto \rho/\beta && \text{weakly compressible.}\end{aligned}$$

In order to improve convergence of the iteration of the nonlinear system some terms including differentials of density may be expressed implicitly using pressure. This way equation (21.1) may be written in the following form:

$$\nabla \cdot \left( \frac{\rho h^3}{12\eta} \nabla p \right) - Y \rho p - \rho_p h \frac{\partial p}{\partial t} - \frac{1}{2} \rho_p h \vec{v}_t \cdot \nabla p = \frac{1}{2} \rho \nabla \cdot (h \vec{v}_t) + \rho v_n. \quad (21.2)$$

The surface velocity  $\vec{v}$  may also be given in normal cartesian coordinate system. Then the normal and tangential components may easily be obtained from

$$\begin{aligned}v_n &= \vec{v} \cdot \vec{n} \\ \vec{v}_t &= \vec{v} - v_n \vec{n}.\end{aligned}$$

The normal velocity and gap height are naturally related by

$$v_n = \frac{\partial h}{\partial t}. \quad (21.3)$$

In transient case the user should make sure that this relationship is honored.

### 21.2.1 Flow admittances of simple geometries

The flow admittance,  $Y$ , occurring in the Reynolds equation may sometimes be solved analytically for simple hole geometries from the steady-state Stokes equation. Generally  $Y$  depends on the history but here we assume that it presents the steady-state situation of the flow [2, 5]. This means that inertial and compressibility effects are not accounted for. For cylindrical holes the admittance then yields,

$$Y = \frac{D^2}{32\eta b}, \quad (21.4)$$

where  $D$  is the diameter of the holes and  $b$  is the length of the hole. In case of a narrow slot with width  $W$  the admittance is given by

$$Y = \frac{W^2}{12b\eta}. \quad (21.5)$$

### 21.2.2 Gas rarefaction effects

Generally the Reynolds equation could also be used to model nonnewtonian material laws. The current implementation is limited to the special case of rarefied gases. The goodness of the continuum assumption  $\eta$  depends on the Knudsen number,  $K_n$ , which is defined by

$$K_n = \frac{\lambda}{h}, \quad (21.6)$$

where  $\lambda$  is the mean free path of the molecules and  $h$  is the characteristic scale (here the gap height). In this solver only the dependence with pressure is taken into account from the formula

$$\lambda = \frac{1}{1 + p/P_0} \lambda_0. \quad (21.7)$$

When the Knudsen number is very small ( $K_n \ll 1$ ) the gas may be considered as a continuous medium. When the Knudsen number is in the transition regime ( $K_n \approx 1$ ) we may take the gas rarefaction effect into account by an effective viscosity. This accounts for the slip conditions of the flow in the channel by decreasing the viscosity value. An approximation given by Veijola [4] is

$$\eta = \frac{\eta_0}{1 + 9.638 K_n^{1.159}}. \quad (21.8)$$

Its relative accuracy is 5 % in the interval  $0 < K_n < 880$ .

### 21.2.3 Boundary conditions for the Reynolds equation

The Reynolds equation may have different boundary conditions. The natural boundary condition that is obtained by default is

$$\frac{\partial p}{\partial n} = 0. \quad (21.9)$$

This condition may be used at symmetry and closed boundaries.

If the aspect ratio of the resonator is large then the pressure variation at the open sides is small compared to the values far from boundaries. Then may set Dirichlet boundary conditions ( $p = 0$ ) for the pressure. However, if the aspect ratio is relatively small the open side effects should be taken into account. The pressure variation at the side is not exactly zero while also the open space has a flow resistance. The pressure derivative at the boundary is approximated by

$$\frac{\partial p}{\partial n} = \frac{p}{L}, \quad (21.10)$$

where  $L$  is the effective added length of the open sides [3]. If gas rarefaction is not accounted for then  $L = 0.8488h$ , otherwise

$$L = 0.8488(1.0 + 2.676 K_n^{0.659})h. \quad (21.11)$$

### 21.2.4 Postprocessing

When the equation has been solved the solution may be used to compute some data for postprocessing purposes. The local volume flux in the lateral direction may be obtained from

$$\vec{q} = -\frac{h^3}{12\eta} \nabla p + h \vec{v}_t. \quad (21.12)$$

The total force acting on the surface is

$$\vec{F} = \int_A \left( p \vec{n} + \frac{\eta}{h} \vec{v}_t \right) dA, \quad (21.13)$$

where the first term is due to pressure driven flow and the second one due to sliding driven flow. Also the heating effect may be computed. It consist of two parts: pressure driven flow and sliding flow. The local form of this is

$$h = \frac{h^3}{12\eta} |\nabla p|^2 + \frac{\eta}{h} |\vec{v}_t|^2. \quad (21.14)$$

Therefore the total heating power of the system is

$$Q = \int_A q dA. \quad (21.15)$$

It should be noted that if the velocity field  $\vec{v}$  is constant then the integral quantities should fulfill the condition  $Q = \vec{F} \cdot \vec{v}$ .

Note that the above implementation does not take into account the leakage through perforation holes nor the compressibility effects of the fluids.

## 21.3 Keywords

The module includes two different solvers. `ReynoldsSolver` solves the differential equation (21.2) while `ReynoldsHeatingSolver` solves the equation (21.14) and computes the integrals. The second solver only makes sense when the pressure field has already been computed with the first one. The second solver uses the same material parameters as the first one.

### Keywords for ReynoldsSolver

`Solver solver id`

`Equation String ReynoldsSolver`

A describing name for the solver. This can be changes as long as it is used consistently.

`Procedure File "ReynoldsSolver" "ReynoldsSolver"`

Name of the solver subroutine.

`Variable String FilmPressure`

The name of the variable may be freely chosen as far as it is used consistently also elsewhere.

`Variable DOFs Integer 1`

Degrees of freedom for the pressure. This should be 1 which is also the default value.

`Procedure File "ReynoldsSolver" "ReynoldsSolver"`

The name of the module and procedure. These are fixed.

`Apply Limiter Logical`

The generic soft limiters may be applied for the Reynolds equation in order to mimic the effects of cavitation. With this flag active the minimum and maximum limiters are accounted.

`Nonlinear System Convergence Tolerance Real`

The transient equation is nonlinear if the relative displacement or pressure deviation is high. The iteration is continued till the relative change in the norm falls under the value given by this keyword.

`Nonlinear System Max Iterations Integer`

This parameter gives the maximum number of nonlinear iterations required in the solution. This may be set higher than the typical number of iterations required as the iteration procedure should rather be controlled by the convergence tolerance.

`Material mat id`

`Gap Height Real`

Height of the gap where the fluid is trapped. If the case is transient the user should herself make sure that also this variable has the correct dependence on time.

`Surface Velocity i Real`

The velocity of the moving body may be given in either cartesian coordinates, or in ones that are already separated to normal and tangential directions. In the first case the velocity components are given with this keyword with  $i=1, 2, 3$ .

`Tangent Velocity i Real`

For setting the tangential velocity (i.e. sliding velocity) use this keyword with  $i=1, 2, 3$ .

`Normal Velocity Real`

Normal velocity is the velocity in the direction of the surface normal. Typically a negative value means contraction.

`Viscosity Real`

Viscosity of the gas.

`Viscosity Model String`

The choices are `newtonian` and `rarefied`. The first one is also the default.

Compressibility Model `String`

The choices are `incompressible`, `weakly compressible`, `isothermal ideal gas`, and `adiabatic ideal gas`.

Reference Pressure `Real`

Reference pressure is required only for the ideal gas laws.

Specific Heat Ratio `Real`

This parameter is only required for adiabatic processes. For ideal monoatomic gases the ratio is  $5/3$ . Only required for the adiabatic compressibility model.

Bulk Modulus `Real`

The parameter  $\beta$  in the weakly compressible material model.

Mean Free Path `Real`

If the viscosity model assumes rarefied gases the mean free path of the gas molecules in the reference pressure must be given.

Flow Admittance `Real`

The steady-state flow admittance resulting from perforation, for example.

Body Force `bf id`

FilmPressure Lower Limit `Real`

The lower limit for the pressure that will be iteratively be enforced when the soft limiters are active.

Boundary Condition `bc id`

FilmPressure `Real`

Sets the boundary conditions for the pressure. Usually the deviation from reference pressure is zero at the boundaries.

Open Side `Logical`

The open end effect may be taken into account by setting this keyword `True`.

## Keywords for ReynoldsPostprocess

This solver uses largely the same keywords that are already defined above. Only the Solver section has its own keyword settings. This solvers should be active in the same bodies than the `ReynoldsSolver`.

Solver `solver id`

Equation `String ReynoldsPostprocess`

A describing name for the solver. This can be changes as long as it is used consistently.

Procedure `File "ReynoldsSolver" "ReynoldsSolver"`

Name of the solver subroutine.

Reynolds Pressure Variable Name `String`

The name of the field that is assumed to provide the pressure field. The default is `FilmPressure`. Note that the `Variable` of this equation need not to be defined since it is automatically set when any of the field computation is requested.

Calculate Force `Logical`

Calculate the forces resulting from the pressure distribution computed with the Reynolds equation. The name of the field is obtained by adding the suffix `Force`.

Calculate Flux `Logical`

Calculate the fluxes resulting from the pressure distribution computed with the Reynolds equation. The name of the field is obtained by adding the suffix `Flux`.

Calculate Heating `Logical`

Calculate the heating efficiency from the pressure distribution computed with the Reynolds equation. The name of the field is obtained by adding the suffix `Heating`.

#### Calculate Force Dim Integer

By default the dimension of the force field is the mesh dimension plus one. Sometimes the pressure lives on a 1D line of a 2D mesh. Then this keyword may be used to suppress the dimension of force to two.

#### Calculate Flux Dim Integer

As the previous keyword but for the flux.

## Bibliography

- [1] B.J. Hamrock, S.R. Schmid, and B.O. Jacobson. *Fundamentals of fluid film lubrication*. Marcel Dekker, second edition, 2004.
- [2] P. Råback, A. Pursula, V. Junttila, and T. Veijola. Hierarchical finite element simulation of perforated plates with arbitrary hole geometries. In *NANOTECH 2003, San Francisco, 23-27 February 2003*, volume 1, pages 194–197.
- [3] T. Veijola. *APLAC 7.60 Reference Manual*, January 2002. Electromechanical Macro Models.
- [4] T. Veijola, H. Kuisma, J. Lahdenperä, and T. Ryhänen. Equivalent-circuit model of the squeezed gas film in a silicon accelerometer. *Sensors and Actuators A*, pages 239–248, 1995.
- [5] T. Veijola and P. Råback. A method for solving arbitrary mems perforation problems with rare gas effects. In *NANOTECH 2005, Anaheim, May 8-12, 2005*, volume 3, pages 561–564.

## Model 22

# Richards equation for variably saturated porous flow

**Module name:** RichardsSolver

**Module subroutines:** RichardsSolver, RichardsFlux

**Module authors:** Peter Råback

**Module status:** Alpha

**Document authors:** Serge-Étienne Parent and Peter Råback

**Document created:** 22.12.2010

**Document edited:** 22.12.2010

## 22.1 Introduction

Richards equation is a non-linear partial differential equation that represents the movement of fluids through porous media.

The current implementation of the Richards equation uses normal Lagrange elements and therefore the conservation of flux cannot be guaranteed. Dense meshes are required if the variations in the permeability are high.

This version should not yet be considered a production version. However, it provides a suitable starting case for more serious testing and further development.

## 22.2 Theory

The transient, incompressible, variably saturated, isotropic flow of water in non-swelling porous media is expressed by the combination of Darcy's law and the continuity equation, i.e. Richards equation. The modern form of Darcy's law can be written as

$$\vec{q} = -k_w \nabla H \quad (22.1)$$

where  $\vec{q}$  is the unit flux, or Darcy velocity (L/T),  $k_w$  is the fluid hydraulic conductivity of water (L/T), and  $H$  is the total head (L). Since the velocity component of total head can be treated as negligible in porous media, and air pressure can be considered as constant, total head can be expressed as  $H = p + z$  where  $p$  is pressure (F/L<sup>2</sup>) (note that  $p = -\psi = u_a - u_w$ ),  $\psi$  is matric suction (F/L<sup>2</sup>),  $u_w$  is the water pressure in pores (F/L<sup>2</sup>),  $u_a$  is the air pressure in pores (F/L<sup>2</sup>),  $z$  is elevation from a datum (depth coordinate of the geometry).

The continuity equation is expressed as

$$\frac{\partial \theta}{\partial t} = -\nabla \cdot \vec{q} + S_w, \quad (22.2)$$

where  $\theta$  is the volumetric water content (L/L),  $t$  is time (T),  $S_w$  is a source/sink term (L/T). Richards equation may now be written as,

$$\frac{\partial \theta}{\partial t} = -\nabla \cdot (k_w \nabla H) + S_w, \quad (22.3)$$

since  $\theta = f(\psi)$  and  $k_w = f(\psi)$  the latter equation can be expressed using a pressure form,

$$\frac{\partial \theta}{\partial \psi} \frac{\partial \psi}{\partial t} = -\nabla \cdot (k_w \nabla H) + S_w, \quad (22.4)$$

Or, developing total head,

$$\frac{\partial \theta}{\partial \psi} \frac{\partial \psi}{\partial t} = -\nabla \cdot (k_w \nabla (-\psi + z)) + S_w, \quad (22.5)$$

The volumetric water content and the hydraulic conductivity are non-linear functions related to pressure head. Both are commonly expressed by van Genuchten (1980)'s equations. Volumetric water content function yields

$$\theta(\psi) = \begin{cases} \theta_s + \frac{\theta_s - \theta_r}{(1 + \alpha_{vG} \psi)^{m_{vG}}}, & \text{if } \psi > 0 \\ \theta_r, & \text{if } \psi < 0. \end{cases} \quad (22.6)$$

And the hydraulic conductivity function is

$$k_w(\psi) = \begin{cases} k_{w,sat} \frac{(1 - (\alpha_{vG} \psi)^{n_{vG}})^{m_{vG}} (1 + (\alpha_{vG} \psi)^{n_{vG}})^{m_{vG}}}{(1 + \alpha_{vG} \psi)^{m_{vG}/2}}, & \text{if } \psi > 0 \\ k_{w,sat}, & \text{if } \psi < 0. \end{cases} \quad (22.7)$$

where  $\theta$  is the volumetric water content (L/L),  $\theta_r$  is the residual volumetric water content (L/L),  $\theta_s$  is the saturated volumetric water content, equal to the porosity (L/L),  $\alpha_{vG}$ ,  $n_{vG}$ ,  $m_{vG}$  are fitting parameters without any units.

## 22.3 Implementation issues

The current implementation is carried out for the total head,  $H$ . This results to a weak form where the fluxes occur naturally. The total head is intuitive since it gives directly the ground water level. Since the time derivative of the elevation is zero, we may use the following equation to solve the total head,

$$\theta_\psi \frac{\partial H}{\partial t} + \nabla \cdot (k_w \nabla H) = S_w. \quad (22.8)$$

From the total head the matric suction will be automatically computed,  $\psi = z - H$ . This makes it possible to have material laws that depend on it.

For transient problems the first term requires special attention. In the current version the sensitivity of  $\theta$  to  $\psi$  is computed from

$$\theta_\psi = \begin{cases} \frac{\theta(\psi(t_i)) - \theta(\psi(t_{i-1}))}{\psi(t_i) - \psi(t_{i-1})} & \text{if } |\psi(t_i) - \psi(t_{i-1})| > \epsilon \\ \frac{\theta(\psi(t_i)) - \theta(\psi(t_i) - \epsilon)}{\epsilon} & \text{otherwise.} \end{cases} \quad (22.9)$$

This way the effective sensitivity is smeared over the whole timestep,  $dt = t_i - t_{i-1}$ .

The values of the material parameters in the Richards equation vary a great deal depending on the saturation level and type of medium. Therefore it is important to evaluate the water content and hydraulic conductivity at the Gaussian integration points using the relevant formulas, rather than computing them at nodal points and thereafter evaluating the values at the Gaussian integration points using a weighted sum over the nodal values.

## 22.4 Keywords

The module includes two different solvers. `RichardsSolver` solves the primary differential equation while `RichardsFlux` solves the resulting flux from the computed solution. The second solver only makes sense when the pressure field has already been computed with the first one. The second solver uses the same material parameters as the first one.

## Keywords for RichardsSolver

Solver solver id

Equation String RichardsSolver

A describing name for the solver. This can be changes as long as it is used consistently.

Procedure File "RichardsSolver" "RichardsSolver"

Name of the solver subroutine.

Variable String TotalHead

The name of the variable may be freely chosen as far as it is used consistently also elsewhere.

Variable DOFs Integer 1

Degrees of freedom for the pressure. This should be 1 which is also the default value.

Saturated Initial Guess Logical

Use saturated material parameters when computing the first equation for the total head.

Active Coordinate Integer

The coordinate corresponding to the depth  $z$  in the Richards equation. By default the last coordinate is the active one.

Calculate Matrix Suction Logical

Whether to compute the matric suction from the total head.

Bubbles Logical

Use stabilization by residual free bubbles.

Nonlinear System Convergence Tolerance Real

The Richards equation is always nonlinear and hence keywords related to the nonlinear system control are needed. The iteration of the nonlinear system is continued till the relative change in the norm falls under the value given by this keyword.

Nonlinear System Max Iterations Integer

This parameter gives the maximum number of nonlinear iterations required in the solution. This may be set higher than the typical number of iterations required as the iteration procedure should rather be controlled by the convergence tolerance.

Nonlinear System Relaxation Factor Real

Keyword related to the relaxation of the nonlinear system.

Material mat id

Porosity Model String

Currently the choices are van Genuchten and Default. The latter does not estimate the functional forms on gaussian points and hence may have enferior accuracy. Also, currently the computation of water content derivative is not supported for it limiting its usability to steady state problems.

Saturated Hydraulic Conductivity Real

Saturated Water Content Real

Residual Water Content Real

van Genuchten Alpha Real

van Genuchten N Real

van Genuchten M Real

The parameters above are the material parameters of the van Genuchten material law that are used to compute the hudraulic conductivity and water content.

Hydraulic Conductivity Real

Water Content Real

In case the porosity model is constant then the hydraulic conductivity and water content are given with this keyword.



Body Force `bf id`

Richards Source `Real`

The source term,  $S_w$ , of the equation.

Boundary Condition `bc id`

Richards Flux `Real`

The given flux at the boundary.

### Keywords for RichardsPostprocess

This solver uses largely the same keywords that are already defined above. Only the Solver section has its own keyword settings. This solvers should be active in the same bodies than the RichardsSolver.

Solver `solver id`

Equation `String RichardsPostprocess`

A describing name for the solver. This can be changes as long as it is used consistently.

Procedure `File "RichardsSolver" "RichardsPostprocess"`

Name of the solver subroutine.

Target Variable `String`

The name of the total head field solved by the Richards equation. The default name is Total head.

## Model 23

# BEM Solver for Poisson Equation

**Module name:** PoissonBEM

**Module subroutines:** PoissonBEMSolver

**Module authors:** Juha Ruokolainen

**Document authors:** Juha Ruokolainen

**Document edited:** May 27th 2003

### 23.1 Introduction

This module solves the Laplace equation by boundary element method (BEM), where the differential equation is transformed to integral equation along the boundaries. On the boundaries either potential or normal flux may be defined. A source term may be included (Poisson equation), but the source term remains a volume integral.

### 23.2 Theory

The Poisson equation is mathematically described as

$$-\Delta\Phi - f = 0, \text{ in } \Omega, \quad (23.1)$$

where  $f$  is the given source.

In BEM we transform this equation to integral equation over boundaries. We start by multiplying the equation by a weight function and integrating over the volume, and integrating by parts

$$-\int_{\Omega} \Delta\Phi w \, d\Omega = \int_{\Omega} \nabla\Phi \cdot \nabla w \, d\Omega - \int_{\Gamma} \frac{\partial\Phi}{\partial n} w \, d\Gamma. \quad (23.2)$$

Similarly we may write an equation reversing the roles of  $\Phi$  and  $w$

$$-\int_{\Omega} \Delta w \Phi \, d\Omega = \int_{\Omega} \nabla w \cdot \nabla\Phi \, d\Omega - \int_{\Gamma} \frac{\partial w}{\partial n} \Phi \, d\Gamma. \quad (23.3)$$

Subtracting the two equations we have

$$-\int_{\Omega} \Delta\Phi w \, d\Omega = -\int_{\Omega} \Delta w \Phi \, d\Omega - \int_{\Gamma} \frac{\partial\Phi}{\partial n} w \, d\Gamma + \int_{\Gamma} \frac{\partial w}{\partial n} \Phi \, d\Gamma \quad (23.4)$$

Next we choose the weight  $w$  as follows:

$$-\Delta w = \delta_r(r'), \quad (23.5)$$

so that

$$-\int_{\Omega} \Delta w \Phi \, d\Omega = \Phi(r), \quad (23.6)$$

The weight  $w$  chosen this way is the Green's function for the Laplace operator, i.e.

$$w(r, r') = \frac{\log(r - r')}{2\pi} \text{ in 2d}, w(r, r') = \frac{1}{4\pi(r - r')} \text{ in 3d}. \quad (23.7)$$

Finally we add the source term, and we have the equation

$$\Phi(r) - \int_{\Gamma} \frac{\partial \Phi}{\partial n} w \, d\Gamma + \int_{\Gamma} \frac{\partial w}{\partial n} \Phi \, d\Gamma - \int_{\Omega} f w \, d\Omega = 0. \quad (23.8)$$

Only the source term is now integrated over the volume. This equation may now be discretized by standard methods.

### 23.2.1 Boundary Conditions

Boundary conditions may be set for either potential

$$\Phi = \Phi_{\Gamma} \text{ on } \Gamma, \quad (23.9)$$

or normal flux

$$-\frac{\partial \Phi}{\partial n} = g \text{ on } \Gamma. \quad (23.10)$$

## 23.3 Keywords

`Solver solver id`

Note that all the keywords related to linear solver (starting with `Linear System`) may be used in this solver as well. They are defined elsewhere. Note also that the BEM discretization results to a full linear system in contrast to FEM discretizations and the ILU preconditioning settings are not available.

`Equation String [PoissonBEM]`

The name of the equation.

`Procedure File ["PoissonBEM" "PoissonBEMSolver"]`

This keyword is used to give the Elmer solver the place where to search for the equation solver.

`Variable String [Potential]`

Give a name to the field variable.

`Variable DOFs Integer [1]`

This keyword must be present, and *must* be set to the value 1.

`Exported Variable 1 String Flux`

If this keyword is given, the output will include the normal flux at boundaries, the name must be exactly as given.

`Exported Variable 1 DOFs Integer [1]`

This keyword must be present if Flux values are to be computed, and *must* be set to the value 1.

`Equation eq id`

The equation section is used to define a set of equations for a body or set of bodies:

`PoissonBEM Logical`

if set to True, solve the Poisson equation, the name of this parameter must match the `Equation` setting in the `Solver` section.

If the mesh has any volume elements with a body id that corresponds to a body where the Poisson equation is activated, the value of the potential is computed for these elements as a postprocessing step. Note that the computation of potential is not a trivial task, so large number of volume elements may result to long execution time.

Boundary Condition `bc id`

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Poisson (BEM) equation are

Body Id `Integer`

Give body identification number for this boundary, used to reference body definitions in .sif file. This parameter must be set so that the ElmerSolver knows at which boundaries to solve the corresponding equation.

Potential `Real`

Known potential value at boundary.

Flux `Real`

Known normal flux at boundary.

Normal Target Body `Integer`

The direction of boundary normals are important for the success of the computation. They should point consistently outward from the boundaries. This is accomplished either if the mesh generator automatically orients the boundary elements consistently, or including in the mesh the parent (volume) elements of the boundaries and using this keyword. The value -1 of this parameter points to the side where there are no volume elements. If the parameter gets the value of the body id of the volume elements, the normal will point to that direction.

Body Force `bf id`

The source term for the Poisson equation may be given here. The volume integral is computed on a body with a volume mesh and the PoissonBEM equation set to true.

Source `Real`

The source term for the Poisson equation.

## Model 24

# BEM Solver for Helmholtz Equation

**Module name:** HelmholtzBEM

**Module subroutines:** HelmholtzBEMSolver

**Module authors:** Juha Ruokolainen

**Document authors:** Juha Ruokolainen

**Document edited:** May 27th 2003

### 24.1 Introduction

This module solves the Helmholtz equation by boundary element method (BEM), where the differential equation is transformed to integral equation along the boundaries. On the boundaries either pressure or normal flux may be defined.

### 24.2 Theory

The Helmholtz equation is mathematically described as

$$(k^2 + \Delta)\Phi = 0, \text{ in } \Omega. \quad (24.1)$$

In BEM we transform this equation to integral equation over boundaries. We start by multiplying the equation by a weight function and integrating over the volume, and integrating by parts

$$\int_{\Omega} (k^2 + \Delta)\Phi w \, d\Omega = \int_{\Omega} k^2 w \Phi \, d\Omega - \int_{\Omega} \nabla \Phi \cdot \nabla w \, d\Omega + \int_{\Gamma} \frac{\partial \Phi}{\partial n} w \, d\Gamma. \quad (24.2)$$

Similarly we may write an equation reversing the roles of  $\Phi$  and  $w$

$$\int_{\Omega} (k^2 + \Delta)w \Phi \, d\Omega = \int_{\Omega} k^2 w \Phi \, d\Omega - \int_{\Omega} \nabla w \cdot \nabla \Phi \, d\Omega + \int_{\Gamma} \frac{\partial w}{\partial n} \Phi \, d\Gamma. \quad (24.3)$$

Subtracting the two equations we have

$$\int_{\Omega} (k^2 + \Delta)\Phi w \, d\Omega = \int_{\Omega} (k^2 + \Delta)w \Phi \, d\Omega - \int_{\Gamma} \frac{\partial \Phi}{\partial n} w \, d\Gamma + \int_{\Gamma} \frac{\partial w}{\partial n} \Phi \, d\Gamma \quad (24.4)$$

Next we choose the weight  $w$  as follows:

$$(k^2 + \Delta)w = \delta_r(r'), \quad (24.5)$$

so that

$$\int_{\Omega} (k^2 + \Delta)w \Phi \, d\Omega = \Phi(r), \quad (24.6)$$

The weight  $w$  chosen this way is the Green's function for the Helmholtz operator, i.e.

$$w(r, r') = \frac{1}{i4} H_0(k(r - r')) \text{ in 2d, } w(r, r') = \frac{1}{4\pi} \exp^{-ik(r-r')} \text{ in 3d,} \quad (24.7)$$

where  $H_0$  is the Hankel function.

Finally we have the equation

$$\Phi(r) - \int_{\Gamma} \frac{\partial \Phi}{\partial n} w \, d\Gamma + \int_{\Gamma} \frac{\partial w}{\partial n} \Phi \, d\Gamma = 0. \quad (24.8)$$

### 24.2.1 Boundary Conditions

Boundary conditions may be set for either pressure

$$\Phi = \Phi_{\Gamma} \text{ on } \Gamma, \quad (24.9)$$

or normal flux

$$-\frac{\partial \Phi}{\partial n} = g \text{ on } \Gamma. \quad (24.10)$$

## 24.3 Keywords

Simulation

Angular Frequency Real

Give the value of the angular frequency for the simulation.

Solver solver id

Note that all the keywords related to linear solver (starting with Linear System) may be used in this solver as well. They are defined elsewhere. Note also that the BEM discretization results to a full linear system in contrast to FEM discretizations and the ILU preconditioning settings are not available.

Equation String [HelmholtzBEM]

The name of the equation.

Procedure File ["HelmholtzBEM" "HelmholtzBEMSolver"]

This keyword is used to give the Elmer solver the place where to search for the equation solver.

Variable String [Pressure]

Give a name to the field variable.

Variable DOFs Integer [2]

This keyword must be present, and *must* be set to the value 2.

Exported Variable 1 String Flux

If this keyword is given, the output will include the normal flux at boundaries, the name must be exactly as given.

Exported Variable 1 DOFs Integer [2]

This keyword must be present if Flux values are to be computed, and *must* be set to the value 2.

Equation eq id

The equation section is used to define a set of equations for a body or set of bodies:

HelmholtzBEM Logical

if set to True, solve the Helmholtz equation, the name of this parameter must match the Equation setting in the Solver section.

If the mesh has any volume elements with a body id that corresponds to a body where the Helmholtz equation is activated, the value of the pressure is computed for these elements as a postprocessing step. Note that the computation of potential is not a trivial task, so large number of volume elements may result to long execution time.

Boundary Condition `bc id`

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Helmholtz (BEM) equation are

Body Id `Integer`

Give body identification number for this boundary, used to reference body definitions in .sif file. This parameter must be set so that the ElmerSolver knows at which boundaries to solve the corresponding equation.

Pressure 1 `Real`

Known real part of pressure at boundary.

Pressure 2 `Real`

Known imaginary part of pressure at boundary.

Flux 1 `Real`

Known real part of normal flux at boundary.

Flux 2 `Real`

Known real part of normal flux at boundary.

Normal Target Body `Integer`

The direction of boundary normals are important for the success of the computation. They should point consistently outward from the boundaries. This is accomplished either if the mesh generator automatically orients the boundary elements consistently, or including in the mesh the parent (volume) elements of the boundaries and using this keyword. The value -1 of this parameter points to the side where there are no volume elements. If the parameter gets the value of the body id of the volume elements, the normal will point to that direction.

## Model 25

# Kinematic Free Surface Equation with Limiters

**Module name:** FreeSurfaceSolver

**Module subroutines:** FreeSurfaceSolver

**Module authors:** Thomas Zwinger, Peter Råback, Juha Ruokolainen, Mikko Lyly

**Document authors:** Thomas Zwinger

**Document edited:** November 12th 2010

### 25.1 Introduction

Flows with a free surface are to be found in geophysical as well as technical applications. On large scale flows the free surface usually is governed by a kinematic boundary condition given as a partial differential equation. This equation then is solved on the specific boundary in combination with the (Navier)-Stokes equation and the mesh update solver.

### 25.2 Theory

The implicit equation describing the free surface is given by

$$F(\vec{x}, t) = z - h(x, y, t), \quad (25.1)$$

with the explicit position of the free surface  $h(x, y, t)$ . Mass conservation implies that, with respect to the velocity of the surface,  $\vec{u}_m$ ,  $F$  has to define a substantial surface, i.e.,

$$\frac{\partial F}{\partial t} + \vec{u}_m \nabla F = 0. \quad (25.2)$$

The net volume flux through the free surface then is given by the projection of the difference between the fluid velocity at the free surface,  $\vec{u}$  and the velocity of the free surface with respect to the surface normal

$$a_{\perp} = (\vec{u}_m - \vec{u}) \cdot \vec{n}. \quad (25.3)$$

In Geophysical context (e.g., Glaciology),  $a_{\perp}$  often is referred to as the net accumulation. With the surface unit normal defined as

$$\vec{n} = \frac{\nabla F}{\|\nabla F\|}, \quad (25.4)$$

this leads to

$$\frac{\partial F}{\partial t} + \vec{u} \nabla F = -\|\nabla F\| a_{\perp}. \quad (25.5)$$



Using the definition in (25.1), (25.5) can be rewritten in its explicit form

$$\frac{\partial h}{\partial t} + u \frac{\partial h}{\partial x} + v \frac{\partial h}{\partial y} - w = \left[ 1 + \left( \frac{\partial h}{\partial x} \right)^2 + \left( \frac{\partial h}{\partial y} \right)^2 \right]^{1/2} a_{\perp}, \quad (25.6)$$

with the components of fluid velocity vector at the free surface given as  $\vec{u} = (u, v, w)^T$ . The variational formulation of (25.6) reads as

$$\int_{\Omega} \left( \frac{\partial h}{\partial t} + u \frac{\partial h}{\partial x} + v \frac{\partial h}{\partial y} \right) \varphi dV = \int_{\Omega} \left\{ w + \left[ 1 + \left( \frac{\partial h}{\partial x} \right)^2 + \left( \frac{\partial h}{\partial y} \right)^2 \right]^{1/2} a_{\perp} \right\} \varphi dV, \quad (25.7)$$

where the occurrence of  $h$  in the right hand side is inserted from the previous time-step/non-linear iteration, hence linearizing the equation. In case of a horizontally moving mesh, the contribution in form of an arbitrary Lagrangian-Eulerian (ALE) formulation has to be included (by default is omitted). With the horizontal mesh velocity components,  $u_{\text{mesh}}$  and  $v_{\text{mesh}}$ , the ALE version of equation (25.6) then reads

$$\frac{\partial h}{\partial t} + (u - u_{\text{mesh}}) \frac{\partial h}{\partial x} + (v - v_{\text{mesh}}) \frac{\partial h}{\partial y} - w = \left[ 1 + \left( \frac{\partial h}{\partial x} \right)^2 + \left( \frac{\partial h}{\partial y} \right)^2 \right]^{1/2} a_{\perp}, \quad (25.8)$$

### 25.2.1 Limiters

In certain cases the free surface is constrained by an upper  $h_{\text{max}}(x, y, t)$  and/or a lower  $h_{\text{min}}(x, y, t)$  limit. For instance, the free surface of a fluid contained in a vessel cannot penetrate the vessel's walls. This adds the constraint

$$h_{\text{min}} \leq h \leq h_{\text{max}} \quad (25.9)$$

to (25.7) converting the variational formulation into a variational inequality. In order to obtain a consistent solution a method using Dirichlet constraints within the domain is applied. The exact procedure is the following:

1. construct the linear system:  $\mathbf{A}\vec{h} = \vec{f}$ , with the system matrix  $\mathbf{A}$  and the solution vector  $\vec{h}$  on the left-hand side and the force vector  $\vec{f}$  on the right hand side
2. set nodes as *active* if (25.9) is violated
3. for *active* nodes the matrix and force vector are manipulated such that effectively a Dirichlet condition  $h = h_{\text{max/min}}$  is applied
4. the manipulated system is solved:  $\tilde{\mathbf{A}}\vec{h} = \tilde{\vec{f}}$
5. a residual is obtained from the un-manipulated system:  $\vec{R} = \mathbf{A}\vec{h} - \vec{f}$
6. an *active* node is reset if the residual is  $R < 0$  (for lower limit) and  $R > 0$  (for upper limit)

The whole algorithm is iterated (within the non-linear iteration loop) until the limit given in `Nonlinear System Convergence Tolerance` is reached. In the converged solution the residual represents the needed accumulation/volume flux (on matrix level, hence not in physical units) needed in order to obtain the limited solution. Consequently, the system not necessarily is volume conserving if the Dirichlet method is applied. As the solver in principle works with second order elements, the limitation procedure only converges with only the between elements shared nodes being subject to the algorithm described in this section. This is done automatically by the code.

## 25.3 Constraints

The code only works in Cartesian coordinates and – by the nature of the differential equation – effectively converges only in a transient simulation. Although, technically, it also can be run in steady state simulations.

## 25.4 Keywords

Solver solver id

Equation String "Free Surface Limited"

Variable String Varname

The change in the free surface coordinate. This may be of any name as far as it is used consistently also elsewhere, as Varname is used as a preceding keyword for the exported variable of the residual, as well as for the accumulation

Variable DOFs Integer 1

Degrees of freedom for the free surface coordinate.

Procedure File "FreeSurfaceSolver" "FreeSurfaceSolver"

The following four keywords are used for output control.

Velocity Implicitness Real

Determines the level of implicitness in the velocity field. Values shall be in the interval  $c_v \in [0, 1]$ . The velocity is interpolated between the current and the previous time level such that  $u = (1 - c_v) u^{n-1} + c_v u^n$ . Thus, unity corresponds to complete implicitness (default).

Maximum Displacement Real

This limits the maximal local displacement in a time-step. If exceeded, relaxation automatically is applied in order to limit the displacement.

Apply Dirichlet Logical

Takes the variational inequality method (here referred to as Dirichlet method) into use. The user should be aware that if the method is applied (value True) this implies setting the Nonlinear Max Iterations to a value large enough for the method to converge. The default value is False.

ALE Formulation Logical

If set to True, the mesh horizontal mesh velocity is taken into account in the convection term. The default value is False.

Relaxation Factor Real

The changes in the free surface may be relaxed. The default is no relaxation or value 1.0

Stabilization Method String

Sets stabilization method. Either Stabilized or Bubbles can be set.

Nonlinear System Convergence Tolerance Real

This keyword gives a criterion to terminate the nonlinear iteration after the maximum change in the free surface coordinate is small enough

$$\max ||dR/(R - R_0)|| < \epsilon$$

where  $\epsilon$  is the value given with this keyword.

Exported Variable 1 String

The residual, which is the essential property in solving the variational inequality has to be given as an exported variable. The name is fixed by the variable name Varname given in the Solver section plus Residual. For instance, if the variable is named FreeSurf, the exported variable is expected to be FreeSurf Residual.

Exported Variable 1 DOFs Integer

As the free surface is a scalar, the value has to be set to 1.

Use Linear Elements Logical

If set to true, forces usage of linear element types despite the order of the mesh. Mind, that in case of limited elements, by default linear elements are used. The default value is False.

Equation eq id

Convection String

The type of convection to be used: None (default), Computed, Constant. In the last case, the keyword Convection Velocity is expected to be found in the Material section.

Body Force bf id

Varname Accumulation Real

sets the value for the normal accumulation/volume flux,  $a_{\perp}$  for the variable name varname. If this keyword is set, the following keyword Varname Accumulation Flux is ignored (as those are excluding)

Varname Accumulation Flux i Real

sets the accumulation flux in Cartesian components ( $i = 1,2,3$  in 3-dimensional problem). The resulting vertical flux then is evaluated using the surface normal.

Initial Condition ic id

Varname Real

Initiation of the free surface variable (sets initial shape of surface)

Boundary Condition bc id

Body ID Integer

usually, the solver is run on a lower dimensional boundary of the model. Then a separate body-id has to be defined and all component of the solver (Equation, Body Force, Equation, Initial Condition and Material) defined accordingly.

Varname Real

Dirichlet condition of the free surface variable (makes really sense only on dimension - 2 boundaries, e.g. lines in case of a three dimensional run)

Mesh Update i Real

usually, the free surface evolution should have a feedback on the domain's geometry. This usually is achieved by running the MeshUpdate Solver and linking the variable of the free surface with the corresponding component of the Mesh Update ( $i=1,2,3$ ). For instance, in a 3-dimensional case with the variable name FreeSurf this could read as: Mesh Update 3 = Equals FreeSurf

## Model 26

# Free Surface with Constant Flux

**Module name:** FreeSurfaceReduced

**Module subroutines:** FreeSurfaceReduced

**Module authors:** Peter Råback

**Document authors:** Peter Råback

**Document edited:** August 5th 2002

### 26.1 Introduction

The determination of free surface is often an essential part of solving a fluid dynamics problem. Usually the surface is found by solving a free surface equation resulting from force balance, or by finding the free surface from zero flux condition. In some extreme cases both of these methods were found to fail and therefore an alternative approach was taken. The method can only be applied to stationary 2D or axisymmetric flows where the total flux is conserved. This is the case, for example, in many coating and drawing processes.

### 26.2 Theory

The determination of the free surface takes use of the conservation of mass. If the flow is stationary the mass flux through all planes cutting the flow must be same. In the following we concentrate on the axisymmetric case which has more applications than the 2D case.

In the axisymmetric case the mass flux is obtained from

$$f(R, z) = \int_{R_0}^R (\vec{u} \cdot \vec{n}) r ds. \quad (26.1)$$

The free surface is set by finding a surface profile  $R(z)$  such that the integral is constant for all nodes on the surface, or

$$f(R, z_j) = f(R_1, z_1) \quad \forall j \in [1, M]. \quad (26.2)$$

Note that the factor  $2\pi$  has been consistently omitted since it has no bearing to the shape of the free surface.

The subroutine uses simple heuristics to determine the direction of the flow on the free surface. The first upwind node  $z_1$  on the free surface is assumed to be fixed and the corresponding flux is  $f_1$ . The new radius is set approximately by assuming that the added or removed flow has the same velocity as the velocity on the surface. Then the corrected radius is found from

$$u_n R^{(m)} dR^m = f(R^{(m)}, z) - f(R_1, z_1) \quad (26.3)$$

or

$$R^{(m+1)} = R^{(m)} + \frac{f(R^{(m)}, z) - f(R_1, z_1)}{u_n R^{(m)}}. \quad (26.4)$$

After the new profile is being found the element nodes are moved to the new positions. The nodes that are not on the surface may be mapped in many different ways. The straight-forward strategy is to use linear 1D mapping. Also more generic 2D mapping may be used.

The free surface and the fluid flow must be consistent and therefore the system must be solved iteratively. When convergence of the coupled system has been obtained the suggested  $dR$  vanishes and the free surface solver does not affect the solution.

Sometimes the free surface solver overshoots and therefore it may be necessary to use relaxation to suppress the large changes of the solution.

Note that the free surface solver is simple based on mass conservation. No forces are applied on the free surface. If surface tension needs to be taken into account it may be done while solving the Navier-Stoke equation.

## 26.3 Applicable cases and limitations

The method has some limitations which are inherent of the method:

- Limited to steady-state simulations.
- Limited to 2D and axisymmetric cases.
- If there is back-flow within the free surface flow the correctness of the solution is not guaranteed.

Some limitations result from the current implementation:

- The free surface must be oriented so that the flow is on its negative side.
- There may be several free surfaces of this type but they must be directed the same way.
- The line integral from  $R_0$  to  $R$  may cause some difficulties in unstructured meshes. Therefore structured meshes are favored.
- At the moment density is assumed to be constant and therefore only incompressible fluids may be considered.

## 26.4 Keywords

Solver `solver id`

Equation `String "Free Surface Reduced"`

Variable `String dx`

The change in the free surface coordinate. This may be of any name as far as it is used consistently also elsewhere.

Variable DOFs `Integer 1`

Degrees of freedom for the free surface coordinate.

Procedure `File "FreeSurfaceReduced" "FreeSurfaceReduced"`

The following four keywords are used for output control.

Perform Mapping `Logical`

If this keyword is `True` the coordinate mapping is done locally by using linear 1D mapping. This is also the default. Also 2D mapping is possible by using a separate mesh update solver. Then the keyword should be set to `False`.

Nonlinear System Relaxation Factor `Real`

The changes in the free surface may be relaxed. The default is no relaxation or value 1.0

Nonlinear System Convergence Tolerance Real

This keyword gives a criterion to terminate the nonlinear iteration after the maximum change in the free surface coordinate is small enough

$$\max ||dR/(R - R_0)|| < \epsilon$$

where  $\epsilon$  is the value given with this keyword.

Boundary Condition bc id

Free Surface Reduced Logical

Must be set to True for the free surface when the solver is used. The boundary must be simply continuous.

Free Surface Number Integer

If more than one free surface of the reduced type is present simultaneously they must somehow be separated. This keyword is for that purpose. The surfaces should be ordered from 1 to the number of free surfaces. Value 1 is also the default if the surface is active. Note that free surfaces with different numbers should be aligned the same way and should not touch each other.

Free Surface Bottom Logical

If this flag is free it sets the lower boundaries of integration when solving for the free surface. Note that this surface should not touch any of the free surfaces. A free surface is automatically a lower boundary for another free surface.

If mapping is not performed within the solver also boundary conditions for the mapping are required. Surface tension may be taken into account while solving the Navier-Stokes equation. The proper keywords for activating the surface tension are explained in the manual of the Navier-Stokes solver.

## Model 27

# Transient Phase Change Solver

**Module name:** PhaseChangeSolve

**Module subroutines:** TransientPhaseChange

**Module authors:** Peter Råback

**Document authors:** Peter Råback

**Document created:** 22.10.2004

**Document edited:** 14.12.2009

### 27.1 Introduction

There are many phenomena that involve an interface between liquid and solid phase. Such problems occur, for example, in crystal growth and casting processes. This subroutine defines the position of the phase change boundary in a transient case using an Lagrangian approach.

For Lagrangian steady state phase change algorithm look at the next chapter. For Eulerian phase change algorithm look at the enthalpy method in the heat solver. Generally Lagrangian approaches are more accurate but their use is limited to rather smooth interfaces with moderate displacements.

### 27.2 Theory

#### General theory

The phase change from solid to liquid occurs at the melting point  $T_m$ . At the boundary the temperatures of the liquid and solid are therefore equal to that. The phase change results to a change in the internal energy known as the latent heat  $L$ .

The latent heat makes the diffusive heat flux over the boundary discontinuous and results to the so called Stefan condition

$$L\rho\vec{v} \cdot \vec{n} = (\kappa_s \nabla T_s - \kappa_l \nabla T_l) \cdot \vec{n}, \quad (27.1)$$

where  $\vec{n}$  is the normal of the phase change boundary,  $\vec{v}$  is the velocity of the phase change boundary,  $\rho$  is the density of the solid and  $T_s$  and  $T_l$  are the temperatures of the solid and liquid phases, and  $\kappa_s$  and  $\kappa_l$  are the thermal conductivities, respectively.

In steady state pulling and drawing processes the velocity of the phase change boundary should be equal to pull velocity,  $\vec{v} = \vec{V}$  (bulk velocity of the solid phase).

#### Transient algorithm

In transient phase change problems the interface temperature is set to be at the melting point when solving the heat equation. From the solution a heat flux is then obtained from

$$\vec{q} = \kappa_s \nabla T_s - \kappa_l \nabla T_l. \quad (27.2)$$

Now this heat flux is assumed to be used for the melting of the solid phase into liquid phase. Assuming that the phase change boundary is mapped to the new position moving it only in the  $y$ -direction we get from equation (27.1) the velocity in the  $y$ -direction,

$$\rho L n_y (v_y - D_v \nabla^2 v_y) = \vec{q} \cdot \vec{n}. \quad (27.3)$$

Here an artificial diffusion  $D_v$  has been added since the algorithm otherwise is prone to numerical oscillations. In order for the diffusion not to affect the results significantly it must fulfil the condition  $D_v \ll h^2$  where  $h$  is the size of the 1D elements.

The corresponding displacement is easily obtained from multiplication  $u_y = v_y dt$ , where  $dt$  is the timestep. However, in the current formulation may also be done using the Galerkin method to include the possibility of an additional diffusion factor. Therefore the equation is of the form,

$$\frac{\partial u_y}{\partial t} - D_u \nabla^2 u_y = v_y. \quad (27.4)$$

In continuous processes the triple point may be used to define the pull velocity so that at the point the solution of the equation vanishes. In case the pull occurs in the  $y$ -direction this means that  $V_y = v_y$ .

The algorithm is ideally suited for relatively small time-steps where the change in the position is small compared to the other dimensions of the problem. Otherwise the transient algorithm may result to spurious oscillations. However, often the timestep size is most severely limited by the flow computations. Therefore it may be possible to boost the convergence towards the true operation regime by multiplying the suggested change by a constant factor.

## 27.3 Applicable cases and limitations

The method has some limitations which are described below

- Phase change surface must be nearly aligned with either of the main axis. To be more precise the boundary must in all instances be such that for each coordinate there is only one point on the boundary.
- Applicable in 2D and 3D cases
- Melting point and density over the interface may vary is assumed to be constant over the whole interface.
- The convection velocity of the interface should be constant.
- It should be noted that the solver only gives the position of the phase change boundary. In order to modify the whole geometry a mesh update solver must be applied.

## 27.4 Keywords

Solver `solver id`

Equation `String "Transient Phase Change"`

Procedure `File "TransientPhaseChange" "TransientPhaseChange"`

The subroutine that performs the phase change analysis.

Variable `String PhaseSurface`

The variable for the PhaseSurface coordinate. This may be of any name as far as it is used consistently also elsewhere.

Variable DOFs `Integer 1`

Degrees of freedom for the free surface coordinate, the default.

Phase Change Variable `String`

By default the phase change analysis uses `Temperature` as the active variable. The analysis may be performed also to any other scalar variable given by this keyword



Use Nodal Loads Logical

The most accurate method of computing the heat fluxes is to use the residual of the matrix equation. This is activated by the keyword `Calculate Loads` in the heat equation and it results to a variable named `Temperature Loads` that may be used directly to give the melting heat over the interface nodes.

Normal Variable String

The normal of an element may be computed directly from each element segment, or it may be computed using Galerkin method in the `NormalSolver`. In the latter case the name of the normal field variable may be given by this keyword.

Triple Point Fixed Logical

This keyword enforces the triple point to be fixed. Depending on the type of algorithm this may mean different things. In the transient algorithm this means that the interface velocity is tuned so that the velocity at the triple point is zero. Only applicable in 2D where the triple point is unique.

Pull Rate Control Logical

The pull rate may be set so that the triple point remains at a fixed position. The feature is activated setting this keyword `True`.

Velocity Relaxation Factor Real

The relaxation factor for the interface velocity field.

Velocity Smoothing Factor Real

The velocity diffusion factor of the interface,  $D_v$ .

Transient Speedup Real

The factor at which the change in the boundary position is changed in the transient case. This may be used to speedup the transient convergence.

Nonlinear System Max Iterations Integer

In case the pull-rate control is used the phase change algorithm may have to be solved several times in order to define the consistent pull-rate. This keyword gives the maximum number of iterations.

Nonlinear System Convergence Tolerance Real

The tolerance for terminating the transient algorithm.

Body body id

Solid Logical

Liquid Logical

The solver requires information on which of the materials in the system is solid and which is liquid. Currently the solver assumes that both the liquid and solid is uniquely defined.

Material mat id

Heat Conductivity Real

In a transient case the heat conductivities of the both materials must be given.

Density Real

Density is needed to obtain the latent heat in units of energy per volume.

Latent Heat Real

The latent heat is the specific internal energy related to the phase change. The latent heat may also be a variable.

Convection Velocity i Real

For the transient algorithm the pull velocity of the boundary may be given with this keyword.

Boundary Condition bc id

Body Id Integer

The phase change solver operates usually on a boundary of a two-dimensional domain. Technically the equation on the boundary is treated in a normal finite element manner and therefore the boundary must be defined to be the body where the equation is to be solved. Usually this would be the next free integer in the list of bodies.

Phase Change Side Logical

This keyword is used for the boundaries that define the edges of the phase change interface. The diffusive operators used for smoothing create a weak term in the Galerkin formulation that must be cancelled. When this flag is active the weak terms are not assembled at all for the boundary thus eliminating the need to cancel them.

## Model 28

# Steady State Phase Change Solver

**Module name:** PhaseChangeSolve

**Module subroutines:** SteadyPhaseChange

**Module authors:** Peter Råback and Juha Ruokolainen

**Document authors:** Peter Råback

**Document created:** 22.10.2004

**Document edited:** 14.12.2009

## 28.1 Introduction

There are many phenomena that involve an interface between liquid and solid phase. Such problems occur, for example, in crystal growth and casting processes. This subroutine defines the position of the phase change boundary by finding the correct isotherm in a steady state simulation. The mesh is the correspondingly mapped i.e. this is a Lagrangian approach.

For transient phase change algorithms look at the next chapter. For Eulerian phase change algorithm no additional solver is required as the phase change is implemented within the heat equation of Elmer by using the enthalpy method. Generally Lagrangian approaches are more accurate but their use is limited to rather smooth interfaces with moderate displacements.

## 28.2 Theory

For the general theory on phase change look at the Theory section of the previous chapter.

### Steady state algorithm

In steady state the algorithm is based mainly on geometrical ideas. First the heat equation for temperature  $T$  is solved by using a flux condition for the interface

$$q = L\rho\vec{V} \cdot \vec{n}. \quad (28.1)$$

Thereafter the next approximation for the phase change surface may be found by going through each element and creating a list of line segments  $E_j$  on the isosurface. This is basically the zero level-set of the field  $T - T_m$ . Each line segment is defined by two coordinate  $\vec{x}_{j,1}$  and  $\vec{x}_{j,2}$ . The surface is then updated by mapping the current phase change surface to the line segments. For the moment a  $N^2$  algorithm is used for the mapping. For larger cases a more robust search algorithm might be implemented.

For example, if a free surface is almost aligned along the x-axis, then for a node  $(x_i, y_i)$  on the boundary the proposed change of the point  $i$  in the y-direction is

$$s_y = (y_{j,1} - y_i) + (x_i - x_{j,1}) \frac{y_{j,2} - y_{i,1}}{x_{j,2} - x_{j,1}} \quad (28.2)$$

assuming that  $x_i \in [x_{j,1}, x_{j,2}]$  while  $s_x = 0$ .

### Speeding up the convergence

In many cases the simple geometrical search algorithm converges very slowly. The reason is the explicit character of the algorithm that fails to account for the change in the temperature field caused by the moving phase change boundary. This limitation may be partially overcome using suitable under- or over-relaxation. This relaxation parameter may also be tuned during the iteration using lumped quantities such as the proposed change in the volume of the phases that may be expressed as

$$U = \int_A \vec{s} \cdot \vec{n} dA. \quad (28.3)$$

The proposed volume changes form a series,  $U^{(0)}, U^{(1)}, \dots, U^{(m-1)}, U^{(m)}$ . Assuming that the series is a geometric one we may estimate the required relaxation factor that would give the correct phase change boundary at just one iteration,

$$c^{(m)} = c^{(m-1)} \frac{U^{(m-1)}}{U^{(m-1)} - U^{(m)}}. \quad (28.4)$$

In numerical tests this formula was found occasionally to overshoot and therefore a less aggressive version is used instead,

$$c^{(m)} = c^{(m-1)} \frac{1}{2} \frac{U^{(m-1)} + U^{(m)}}{U^{(m-1)} - U^{(m)}}. \quad (28.5)$$

The use of the lumped model requires that the temperature field is described accurately enough. To ensure numerical stability the factor  $c$  should have an upper and lower limits. After the factor has been defined the suggested displacements are simply scaled with it,  $\vec{s}' = c\vec{s}$ .

It is also possible to accelerate the solution locally using a Newton kind of iteration. If the basic algorithm has already been applied at least twice we may estimate the sensitivity of the local temperature to the moving interface and using this information to estimate a new change,

$$s^{(m)} = \frac{T_m - T^{(m)}}{T^{(m)} - T^{(m-1)}} s^{(m-1)}. \quad (28.6)$$

This algorithm might be a better option if the phase change surface is such that there is not much correlation between the displacements at the extreme ends. However, the algorithm may be singular if the isotherms of consecutive iterations cross. Any point  $i$  where  $T_i^{(m-1)} \approx T^{(m)}$  leads to problems that may be difficult to manage. This handicap may rarely limit the usability of the otherwise robust and effective scheme.

## 28.3 Applicable cases and limitations

The method has some limitations which are described below

- Limited to steady state cases
- Limited to 2D and axisymmetric cases.
- Phase change surface must be nearly aligned with either of the main axis. To be more precise the boundary must in all instances be such that for each coordinate there is only one point on the boundary.
- Melting point is assumed to be constant over boundary (not concentration dependent, for example).
- It should be noted that the solver only gives the position of the phase change boundary.
- When internal mesh update is used the mesh is distorted only in one coordinate direction.

## 28.4 Keywords

**Solver** `solver id`

It is worth noting that for this solver the problem is, or at least could be, solved accurately. All the nonlinearities of the problem reside in the coupling with the heat equation. Hence, there is no point in giving criteria on the nonlinear system level. Only the coupled level tells whether the system has truly converged.

**Equation** `String "Steady Phase Change"`

**Procedure** `File "SteadyPhaseChange" "SteadyPhaseChange"`

The subroutine that performs the phase change analysis.

**Variable** `String Surface`

The variable for the PhaseSurface coordinate. This may be of any name as far as it is used consistently also elsewhere.

**Variable DOFs** `Integer 1`

Degrees of freedom for the free surface coordinate, the default.

**Phase Change Variable** `String`

By default the phase change analysis uses `Temperature` as the active variable. The analysis may be performed also to any other scalar variable given by this keyword

**Nonlinear System Relaxation Factor** `Real`

Giving this keyword triggers the use of relaxation in the phase change solver. Using a factor below unity may sometimes be required to achieve convergence. Relaxed phase change variable is defined as follows:

$$u'_i = u_i + \lambda s_{i-1},$$

where  $\lambda$  is the factor given with this keyword. The default value for the relaxation factor is unity. If using the lumped model to accelerate the solution the final relaxation factor will be the product of the two.

**Nonlinear System Newton After Iterations** `Integer`

The local Newton type of iteration may be set active after a number of iterations given by this keyword.

**Nonlinear System Newton After Tolerance** `Real`

The Newton type of iteration may also be activated after a sufficiently small change in the norm. This keyword gives the limit after which Newton iteration is triggered on.

**Lumped Acceleration After Iterations** `Integer`

The phase change solver may be accelerated pointwise, or by using a lumped model to determine an optimal relaxation factor for the whole solution. This keyword activates the lumped model procedure.

**Lumped Acceleration Mode** `Integer`

This helps to toggle between different versions of the lumped acceleration. The options include values 0,1,2,3 where 0 is also the default.

**Lumped Acceleration Limit** `Real`

The lumped approach sometimes gives too high or too small relaxation factors. This may happen particularly at the very vicinity of the solution where the approximation errors have a greater effect.

**Triple Point Fixed** `Logical`

This keyword enforces the triple point to be fixed. This means that the temperature used for finding the isotherm is set to be the temperature of the triple point. This freezes the position by construction. Typically this should be combined with a temperature control that at convergence results to the triple point being at melting point.

Internal Mesh Movement Logical

The mesh around the growth interface may be moved in two ways: using the mesh update solver based on the linear elasticity, or using the simple 1D mapping built in the solver. If this flag is set active the internal mesh movement is used.

Passive Steps Integer

If for some reason we want to omit that the solved phase change position is updated to the mesh we may use this flag which for the given number of rounds does not apply the mesh update.

Body body id

Solid Logical

Liquid Logical

The solver requires information on which of the materials in the system is solid and which is liquid. Currently the solver assumes that both the liquid and solid is uniquely defined.

Material mat id

Melting Point Real

The melting point is the temperature at which the transition from solid to liquid occurs. The melting point is assumed to be constant. If the triple point is fixed the value of the melting point is not used in finding the levelset.

Density Real

Density may be needed in the computation of the surface normals. By default, the normals point out from the denser of the two materials. Also the density is needed for the computation of latent heat release.

Latent Heat Real

The latent heat is the specific internal energy related to the phase change. The latent heat may also be a variable. It is actually not needed by the phase change solver but must be provided for the heat solver.

Boundary Condition bc id

Phase Change Logical

The interface of the phase change is determined by this special flag.

Phase Velocity i Real

For the steady state case the heat equation often requires the heat flux as a boundary condition. For this reason the phase velocity for each component may be determined. The keyword is not needed by the current solver.

## Model 29

# Particle Dynamics

**Module name:** ParticleDynamics

**Module subroutines:** ParticleDynamics

**Module authors:** Peter Råback, Juha Ruokolainen

**Module status:** Alpha

**Document authors:** Peter Råback

**Document created:** 16.10.2010

**Document edited:** 17.10.2010

### 29.1 Introduction

Note: this is an initial version of the dynamic particle tracker. For real applications it probably requires some additional effort.

The ability to follow single or statistical particles within a finite element can be used in a variety of applications. A common application is to follow particles along streamlines for the purpose of flow visualization. Accounting for electrostatic forces opens the field to microfluidics and accounting for the gravitational force enables applications in sedimentation, for example. If also particle-particle interaction is accounted for also granular flow phenomena may be studied.

This module depends on the many library routines related to particle transport in Elmer. In this module it is assumed that there may be particle-particle interactions. This choice fixes the time-stepping strategies of the different particles together, at least without heroic timestepping schemes. In other words, the same timestep size is applied to the whole particle set.

The particles are located in the finite element mesh using a marching routine where intersections with element boundaries are checked for. The nearest boundary on the way is crossed until there is no boundary to cross. Then the right element has been reached. The algorithm is fast when the stepsize with respect to elementsize is smaller or of the same order. Therefore for the initialization the octree-based search may be more economical and also more robust regarding geometric shapes.

The particle-particle interaction is based on the knowledge of nearest neighbours. Currently the neighbours are determined using the closeness to the nodes of the parent element. This means that the interaction distance needs to be smaller than  $h/2$  where  $h$  is the mesh parameter. Further, it means that the mesh must be rather uniform.

As the name implies, this module assumes the particles to be dynamic i.e. they have an acceleration. However, the user may also use the module neglecting the inertial forces and requiring a force balance between the drag force and external forces.

## 29.2 Theory

### Forces acting on the particle

Assume that we have a particle in position  $\vec{r}$ . The corresponding velocity is

$$\vec{v} = \frac{d\vec{r}}{dt} \quad (29.1)$$

Newton's second law yields

$$m \frac{d\vec{v}}{dt} = \Sigma f(\vec{r}, \vec{v}, \dots) \quad (29.2)$$

where a number of different forces may be considered.

The gravity force acting on the particle is

$$\vec{f} = m\vec{g}, \quad (29.3)$$

where  $\vec{g}$  is the acceleration due to gravity. The electrostatic force is simply proportional to the electric field

$$\vec{f}_e = q\vec{E} = q\nabla\phi \quad (29.4)$$

where  $q$  is the electric charge.

The viscous fluids cause also a force that acts on the particle

$$\vec{f}_S = -b(\vec{v} - \vec{v}_0) \quad (29.5)$$

where  $\vec{v}_0$  is the velocity of the fluid. If the change is estimated to be  $d\vec{r}$  then the estimate may be improved by the gradient of velocity, i.e.  $\nabla\vec{v}_0 \cdot d\vec{r}$ . For Stokes flow the proportionality coefficient scales with viscosity, for example for spheres  $b = 6\pi\eta d$  where  $\eta$  is the fluid viscosity and  $d$  the radius of the sphere.

### Collision model

Two particles may collide with one-another. Assume that the initial particle positions are  $\vec{r}_1$  and  $\vec{r}_2$ . Velocity vectors are  $\vec{v}_1$  and  $\vec{v}_2$  and let's define  $\delta\vec{r} = \vec{r}_1 - \vec{r}_2$  and  $\delta\vec{v} = \vec{v}_1 - \vec{v}_2$ . Now the condition for a collision is

$$|\delta\vec{r} + \delta\vec{v} dt| = R_1 + R_2. \quad (29.6)$$

This leads to condition for the timestep

$$dt = \frac{-b - \sqrt{b^2 - ac}}{a} \quad (29.7)$$

where  $b = \delta\vec{r} \cdot \delta\vec{v}$ ,  $a = \delta\vec{v} \cdot \delta\vec{v}$ , and  $c = \delta\vec{r} \cdot \delta\vec{r} - (R_1 + R_2)^2$ . Collision happens if  $0 < dt < Dt$ .

The collision only affects the normal component. The normal vector is aligned with  $\delta\vec{r}' = \delta\vec{r} + dt \delta\vec{v}$  i.e.  $\vec{n}_r = \delta\vec{r}' / |\delta\vec{r}'|$ . Now the normal velocity components are  $v_{i,n} = \vec{v}_i \cdot \vec{n}_r$ . After the collision the normal velocity component is

$$v'_{1,n} = \frac{cM_2(v_{2,n} - v_{1,n}) + M_1v_{1,n} + M_2v_{2,n}}{M_1 + M_2} \quad (29.8)$$

and likewise for  $v'_{2,n}$ . Here the parameter  $c$  is called bounciness and it varies between zero, for fully inelastic collision, to one, for fully elastic collisions. The new velocity is now

$$\vec{v}'_i = \vec{v}_i + (v'_{i,n} - v_{i,n})\vec{n}_r \quad (29.9)$$

and the new position,

$$\vec{r}'_i = \vec{r}_i + \vec{v}_i dt + \vec{v}'_i dt' \quad (29.10)$$

where  $dt' = Dt - dt$ .

Collisions with the wall are governed with the same equations assuming that mass of the wall is infinite.

The change in the velocity and coordinate position may be mutated to a change in velocity and force. This way the collision model is better additive with the other type of models present in the system.



## Contact model

In general the contact between particles depends on their relative position, relative velocity, and relative angular velocity. Generally the contacts should include some damping (negative feedback from velocity) since otherwise the system is prone to flow up. In molecular dynamics, for example, also interaction with more than two particles should be considered. The current treatment is quite limited and we here assume that the contact results just to a spring force in the form

$$\vec{f}_k = k \max(R_1 + R_2 - |d\vec{r}|, 0) \vec{n}_r, \quad (29.11)$$

where  $k$  is the spring coefficient.

A similar particle contact model may be present with the wall but possibly with different value for the spring coefficient.

## Periodic boundary conditions

It is relatively straight-forward to implement periodic boundary conditions for rectangular and hexahedral type of geometries. And for different geometries the periodic conditions seems more unlikely.

## Time evolution

For particles with mass the basic update sequence of velocity and position is

$$\vec{v}_{i+1} = \vec{v} + \frac{dt}{m} \Sigma f \quad (29.12)$$

$$\vec{r}_{i+1} = \vec{r} + dt \vec{v}_{i+1} \quad (29.13)$$

while for massless particles it is assumed that the particle drag is in balance with the other forces given explicitly

$$\vec{v}_{i+1} = \frac{1}{b} \Sigma f \quad (29.14)$$

$$\vec{r}_{i+1} = \vec{r} + dt \vec{v}_{i+1} \quad (29.15)$$

The timestep  $dt$  may be given explicitly, or it may be defined from the characteristic velocity  $V$ . If the change in distance  $dS$  is given then

$$dt = \frac{dS}{V}, \quad (29.16)$$

and when the Courant number  $C$  is given

$$dt = C \frac{h}{V}, \quad (29.17)$$

where  $V$  is either the maximum absolute velocity, or the mean absolute velocity.

Also other timestepping schemes could be used but that's something for later.

### 29.2.1 Postprocessing

The possibility to use each particle as an integration point in data fitting problem makes it possible to couple the particles back to a continuous field. The following kinds of information could be abstracted from the particles, for example.

Kinetic energy of particles

$$E_k = \frac{1}{2} m v^2. \quad (29.18)$$

Potential energy associated to gravity field

$$E_g = m \vec{g} \cdot \vec{r}. \quad (29.19)$$

Potential energy associated to electrostatic field The corresponding potential energy is

$$E_e = q\phi. \quad (29.20)$$

Etc. In practice sufficient amount of data may not be present at every node if the data is used only after appropriate smoothing. !and hence some regularization may be applied to the fitting problem. !In practice this means adding some diffusion to the fitting problem.

## 29.3 Keywords

Solver `solver id`

Equation `String [ParticleDynamics]`  
The name of the equation.

Procedure `File "ParticleDynamics" "ParticleDynamics"`  
The name of the procedure.

Keywords related to the allocation and initialization of the particles.

Number of Particles `Integer`

Number of particles to be sent. The number may be given by this keyword as an absolute number. Often a relative number, particularly in parallel computation, may be favorable.

Particle Node Fraction `Real`

The relative fraction of particles to nodes. The nodes may also be masked ones.

Particle Element Fraction `Real`

The relative fraction of particles to elements. The elements may also be masked ones.

Coordinate Initialization Method `String`

Initialization method for the coordinates. The options include `nodal ordered`, `elemental ordered`, `sphere random`, `box random`, `box random cubic` with their own initialization strategy.

Initial Coordinate `Size n, dim; Real`

The default initialization methods for coordinates.

Initialization Condition Variable `String`

If this is given then the particles are initialized only where this has a nonzero permutation vector.

Initialization Mask Variable `String`

If this is given then the particles are initialized only in elements or nodes where the variable has a positive value.

Min Initial Coordinate `i Real`

Max Initial Coordinate `i Real`

For box initialization methods set the bounding box for doing initialization.

Particle Cell Radius `Real`

If the initialization method is `box random cubic` then the particle is always put to a unit cell located in the given bounding box.

Particle Cell Fraction `Real`

If the initialization method is `box random cubic` then this keyword gives the fraction of filled cells in the initial configuration.

Initial Sphere Radius `Real`

If the initialization method is `sphere random` then this set the radius of the sphere.

Initial Sphere Center `Size 3; Real`

Sets the size of the initial sphere center.

Velocity Initialization Method String

There are many ways to initialize the velocities of the particles: thermal random, even random, constant random.

Initial Velocity Size  $n$ , dim; Real

The particle velocities may be also initialized only by this keyword, or this may be used to give a bulk component to the otherwise random velocity field.

Initial Velocity Amplitude Real

In many velocity initialization methods an initial velocity amplitude is needed.

Initial Velocity Time Real

When initializing the velocity also the initial coordinates may be affected by determining a offset for the time used to advance the particles. This could be used, for example, to distribute the particles from an initial point using the random velocity field.

Initial Coordinate Search Logical

After the initialization is done do an initial octree-based search for the initial coordinate positions. This is applicable only to serial problems.

Reinitialize Particles Logical

Reinitialize the particles in the start of each time when the subroutine is called. This would make sense in some kind of scanning mode. The default is False.

Particle Release Number Integer

If not all particles are sent at the same time. This is the absolute number of particles sent at the start of the subroutine call.

Particle Release Fraction Real

If not all particles are sent at the same time. This is the fraction of particles sent at the start of the subroutine call.

Delete Wall Particles Logical

Currently a hack which is used to remove particles sitting on the wall which otherwise seem to get stuck.

Keywords related to the timestepping strategy.

Timestep Size Real

The internal timestep size.

Max Timestep Size Real

The lower limit of the internal timestep size.

Min Timestep Size Real

The upper limit of the internal timestep size.

Timestep Distance Real

The distance that is travelled within one timestep based on the characteristic velocity.

Timestep Courant Number Real

The desired courant number resulting from the timestep based on the characteristic velocity. Note that currently just one element is used to compute the parameter  $h$ . A global definition of the courant number would result to a significant increase in the computational cost.

Max Characteristic Speed Logical

When computing characteristic velocity use the max norm.

Max Timestep Intervals Integer

Maximum number of internal timesteps.

Max Cumulative Time Real

Maximum cumulative time within one call.

Simulation Timestep Sizes Logical

Alternatively, one may use the timesteps as defined by the Timestep Sizes of the Simulation section.

Keywords related to the actual physical interaction models chosen within the particles and with particles and walls.

Particle Particle Collision Logical

Is there some collisions between particles.

Particle Particle Contact Logical

Is there contact between particles resulting to additional forces.

Box Particle Periodic Logical

Is the system periodic.

Box Periodic Directions Integer

If not all directions require the periodic model this may be used to define the active directions.

Box Particle Collision Logical

Is there collisions between particles and 2D or 3D box. This provided for a cheaper treatment of BCs than the generic way.

Box Particle Contact Logical

Is there contact between particles and walls resulting to additional force.

Box Contact Directions Integer

If not all directions require the contact model this may be used to define the active directions.

Velocity Variable Name String

Name of the variable if velocity drag is present.

Velocity Gradient Correction Logical

When using the drag model evaluate the drag forces using correction from the velocity gradient.

Potential Variable Name String

Name of the variable if electrostatic potential is present.

Velocity Condition Variable Name String

Name of the field which determines the fixed velocity conditions of the particles.

Coordinate Condition Variable Name String

Name of the field which determines the fixed coordinate conditions of the particles.

Keywords related to the physical properties of the particle and to the joint physical properties of the particle-particle and particle-wall contacts.

Particle Mass Real

There are a number of particle properties needed in different interaction models and particle mass is one of them. In principle these could be altered to be variables but currently they are assumed to be the same for all particles.

Particle Radius Real

The particle radius used in particle-particle interaction, and in evaluating the density of the particle.

Particle Gravity Logical

Should gravity be accounted for. If yes, use the gravity defined in the

Particle Lift Logical

The background fluid has a density that results to a lift (bouancy) that may be accounted for. Should gravity be accounted for. If yes, use the gravity defined in the Constants section.

Particle Damping Real

Particle damping proportional to velocity only.

Particle Drag Coefficient Real  
Particle drag coefficient in fluid field.

Particle Bounciness Real  
Defines, when particles collide is the collision totally elastic or totally inelastic. Corresponding extreme values are 1 and 0. This relates only to collision models.

Particle Spring Real  
Spring constant in the force model between particles. This relates only to contact models.

Particle Charge Real  
The electric charge of the particle.

Particle Decay Distance Real  
The decay of the particle effect.

Wall Particle Radius Real  
In interaction with the walls different properties are given as the interaction with the wall is quite different regarding, for example, the contact shape.

Wall Particle Spring Real  
Spring constant in interaction with wall.

Wall Particle Bounciness Real  
Elasticity of collision with interaction with the wall.

Keywords related to the generation of fields from the particle data.

Particle To Field Logical  
Is there any coupling from particles to field needed? This leads to the need of finite element machinery. To opposite is always assumed to be true i.e. the particles are always assumed to be located in the FE mesh.

Reinitialize Field Logical  
When revisiting the solver should the particle field be initialized at the start.

Particle To Field Mode Integer  
If a field is generated from the particles, what actually should be computed.

Particle Decay Time Real  
This is an optional parameter that represents the characteristic time that is used to forget history data from the particle to field representation.

Particle Decay Distance Real  
This is an optional parameter that represents the characteristic distance that is used to forget history data from the particle to field representation.

Keywords related to saving and echoing information. No effect to the actual computations.

Output Interval Integer  
The internal output interval of the solver. If not given the no particle data will be saved within the solver. The alternative is to save particle data with an external solver.

Output Format String  
Output format which may be either table or vtu.

Table Format Logical

Vtu Format Logical  
Alternative way of giving the output format. Has the nice property that several formats may be given at the same time.

Filename Prefix String  
The prefix of the filename used for saving. Depending on the chosen format an appropriate suffix is attached to the prefix.

Filename Particle Numbering Logical

If possible in the format, use particle indexes for the numbering of files.

Filename Timestep Numbering Logical

If possible in the format, use timestep indexes for the numbering of the files. This is the default in vtu format.

Particle Info Logical

Optionally print out on the screen information on the number of particles and time steps taken.

Statistical Info Logical

Optionally print out on the screen some statistical information on the coordinate positions and velocities. May be useful for debugging purposes, for example.

Scalar Field i String

The scalar fields of the particles to be saved in vtu format. Currently options include distance and dt.

Vector Field i String

The vector fields of the particles to be saved in vtu format. Currently options include velocity and force.

Particle Save Fraction Real

If there is a huge number of particles it may be sufficient to use only a subset of them for visualization. This keyword gives the fraction.

Boundary Condition bc id

Wall Particle Collision Logical

This activates the collision model between particles and generic boundaries.

Particle Accumulation Logical

An optional flag that activates the possible destruction of the particles at the boundary in case conditions for accumulation are met.

Particle Accumulation Max Speed Real

If this critical speed is given, then accumulate only those particles with smaller velocity.

Particle Accumulation Max Shear Real

If this critical shear rate is given, then accumulate only those particles with a smaller shear rate.

Particle Trace Logical

If this flag is set active then use the accumulated particles to compute a trace to a finite element field.

Moving Wall Logical

The movement of the wall may be accounted for in the wall-particle collision model.

## Model 30

# Semi-Lagrangian advection using particle tracking

**Module name:** ParticleAdvect

**Module subroutines:** ParticleAdvect

**Module authors:** Peter Råback, Juha Ruokolainen

**Module status:** Alpha

**Document authors:** Peter Råback

**Document created:** 16.6.2010

**Document edited:** 16.6.2010

### 30.1 Introduction

This solver utilizes the particle tracker features of Elmer to advect scalar fields diffusion-free on the mesh. For each node of the field one particle is sent backwards in time and the field value is restored from the location where the particle is found.

For more details on the particle tracking look at the other modules utilizing the same features in a more generic way.

### 30.2 Theory

In particle advection we assume that the fields are transported diffusion-free carried by a velocity field  $\vec{v}$ . The particles are initialized at the nodes of the mesh. Thereafter each particle is followed  $-\delta t$  in time i.e. the following integral is evaluated

$$\vec{r} = \vec{r}_0 + \int_0^{-\delta t} \vec{v} dt. \quad (30.1)$$

Currently the integral may be evaluated using first order explicit scheme or a second order Runge-Kutta scheme. In the first order scheme a quadratic correction term is available making the scheme effectively comparable with the Runge-Kutta scheme. There the following approximation is used

$$\langle \vec{v} \rangle = \vec{v}_0 + \frac{1}{2}(\nabla \vec{v}_0) \cdot \vec{v}_0 dt. \quad (30.2)$$

When the particles have been transported the field may be evaluated from

$$f(\vec{r}_0, t) = f(\vec{r}, t - \delta t) \quad (30.3)$$

The treatment of boundaries results to some additional complication. It is assumed that if the particles vanishes in the upstream boundary then the boundary values of  $f$  are used.

### 30.3 Keywords

Solver solver id

Equation String [ParticleAdvectord]

The name of the equation.

Procedure File "ParticleAdvectord" "ParticleAdvectord"

The name of the procedure.

Coordinate Initialization Method String

This is enforced to nodal ordered.

Particle Node Fraction Real

This is enforced to one in order to have one particle for each node.

Initialization Mask Variable String

If this is given then the particles are initialized only in nodes where the variable has a positive value.

Velocity Initialization Method String

This is enforced to nodal velocity which means that the first velocity is taken from the nodal point.

Velocity Variable Name String

Name of the velocity field in vector form. Default is flow solution.

Time Order Integer

This is defaulted to zero which means that the velocity field is used directly for the particle velocity.

Timestep Size Real

There are several keywords related to the timestepping strategy. All of them are available also here. The negative sign is added internally. Here just the most typical ones are given. This keyword gives the internal timestep size.

Simulation Timestep Sizes Logical

Alternatively, one may use the timesteps as defined by the Timestep Sizes of the

Max Timestep Intervals Integer

Maximum number of internal timesteps.

Particle Accurate At Face Logical

When hitting the well this keyword enforces the more accurate integration method which returns the correct point of exit. This is then used in the advection as the point of evaluation.

Runge Kutta Logical

Use the 2nd order Runge-Kutta method for integration.

Variable i String

Names of the variables to be advected (i=1,2,3,...). Any proper field variable of Elmer may be advected. The field may exist in advance, if not it will be created There is also a group of internal variables with fixed name: particle status, particle number, particle distance, particle coordinate, particle coordinate\_abs, particle velocity, and particle velocity\_abs. These are related to the particle tracking machinery.

Result Variable i String

The default name of the advected variable is obtained by adding the prefix Adv to the field name. Alternatively, the user may give the name of the result variable by this keyword.

Operator i String

Possible operator that may be applied to the variable. The choices are derivative (with respect to time), difference, and cumulative. By default no additional operator is applied.



Norm Variable Index Integer

The solver may compute the change in one specific field value in order to provide information for consistency check, or convergence monitoring. This keyword sets the index related to the Variable i list. Default is zero i.e. no norm is computed.

Particle Info Logical

Show the particle information at the end of the solver execution.

Boundary Condition bc id

Particle Wall T

this will mark the wall which the particle cannot go through and by default stops at.

# Model 31

## Data to field solver

**Module name:** DataToFieldSolver  
**Module subroutines:** DataToFieldSolver  
**Module authors:** Peter Růžek  
**Module status:** Alpha  
**Document authors:** Peter Růžek  
**Document created:** 4.8.2011  
**Document edited:** 7.3.2013

### 31.1 Introduction

This subroutine may be used fit data to a continuous field. In principle just a simple identity equation with some diffusion for regularization is solved. The origin of the data could be from a particle trace of a Monte-Carlo simulation, measurement data read from an external file etc.

### 31.2 Theory

Galerkin method minimizes the L2 norm of the solution and is therefore a good choice also for problems where a regular field must be fitted into data. Imagine a case where we have an initial field  $\hat{f}$  and want to a field  $f$  on it. Then we need to solve an equation  $f = \hat{f}$  with the Galerkin method. Now if the initial data is noisy the fitting should include some regularization. The natural way to introduce regularization in this context is to add artificial diffusion such that we are really solving for

$$-\nabla \cdot D \nabla f + f = \hat{f} \quad (31.1)$$

which is a linear diffusion-reaction equation. The weak formulation for this is

$$\int D \nabla f \cdot \nabla \psi \, d\Omega - \int D \frac{\partial f}{\partial n} \, d\Gamma \int f \, d\Omega = \int \hat{f} \, d\Omega \quad (31.2)$$

Now the data could be given already in the integral form i.e. as

$$\hat{F} = \int \hat{f} \, d\Omega. \quad (31.3)$$

Also the user may know the weight  $w$  that was accumulated when the data was generated.

The data may not always be accurate or even given. Therefore using the given data in all fields might not be a good idea. We may introduce a masking field, say  $p \in [0, 1]$ , that picks the values that are considered as accurate. On the other hand diffusion, might not be needed for those points.

Adding these generalizations we obtain the following form

$$\int (1-p) D \nabla f \cdot \nabla \psi \, d\Omega - \int D(1-p) \frac{\partial f}{\partial n} \psi \, d\Gamma + \int p w f \psi \, d\Omega = \int p \hat{f} \psi \, d\Omega + p \hat{F}. \quad (31.4)$$

This formulation enables the use of various techniques for data fitting.

### 31.3 Keywords

Below are the dedicated keywords for the solver. In addition generic keywords such as many of those related to Linear System solution methods may be used.

Solver `solver id`

Equation `String [DataToFieldSolver]`

The name of the equation.

Procedure `File "DataToFieldSolver" "DataToFieldSolver"`

The name of the procedure.

Variable `String [FieldName]`

The name of the resulting field.

Target Variable `String`

Name of the scalar field to be used as input data. This is either  $\hat{f}$  or  $\hat{F}$

Diffusion Coefficient `Real`

The value of the diffusion constant used in the regularization.

Normalize by Nodal Weight `Logical`

Normalize the particle properties with nodal weight i.e. the standard mass matrix. This would be a good choice if the right-hand-side is a result of an integral i.e.  $\hat{F}$ .

Normalize by Given Weight `Logical`

Normalize the particle properties i.e. divide the trace with the corresponding weight. Basically this corresponds to the integral over  $w$ . Here an integral data set is assumed such that it is consistent with the given weight.

Weight Variable `String`

If there is a weight associated to the data the name of it should be given with this function.

Set Constant Weight Sum `Logical`

If the weights are provided by the user and this flag is set `True` then the given weights are normalized so that their sum is always the same as the sum of nodal weights. The idea is that the solution will be independent on the given level of the weight, and only depend on the relative sizes.

Mask Variable `T`

The data points may selectively chosen to be considered. If a mask variable is given it may have both lower and upper boundaries. Only if the mask variable is between these bounds will the data be considered. Effectively  $p = 1$  in the interval, and  $p = 0$  outside the interval.

Max Mask Value `Real`

Maximum value for the mask interval. Default is `+HUGE`.

Min Mask Value `Real`

Minimum value for the mask interval. Default is `-HUGE`, except if the maximum interval is not given either. Then the default is 0.

Mask Diffusion `Logical`

If the mask is true, should diffusion be neglected. Default is `False`.

Boundary Condition `bc id`

FieldName Real

The user may set Dirichlet conditions for the field to be fitted if they are known.

FieldName Continue Logical

Enforce boundary conditions with constant slope. The default boundary condition is otherwise the natural boundary condition with zero gradient.

# Model 32

## Level-Set Method

**Module name:** LevelSet

**Module subroutines:** LevelSetSolver, LevelSetDistance, LevelSetIntegrate, LevelSetCurvature, LevelSetTimestep

**Module authors:** Peter Råback, Juha Ruokolainen

**Document authors:** Peter Råback

**Document created:** 5.4.2006

**Document edited:** 28.4.2006

### 32.1 Introduction

There are a number of problems involving free surfaces in continuum mechanics. There are two main strategies to solve them using the finite element method: Lagrangian and Eulerian approach. In the Lagrangian approach the free surface is solved exactly so that it is also an interface between the individual elements. This requires that the computational mesh is distorted in a way that this is possible. However, often the changes in geometry may be too drastic or even the whole topology may change and the Lagrangian approach is no longer feasible. The Eulerian approach describes the interface in a fixed mesh using some additional variable to describe the position of the interface. One possible Eulerian technique is the level-set method (LSM).

In the level-set method the free surface is given as a zero level-set of a higher dimensional variable. E.g. for 2D surfaces the level-set function is defined in 3D space. The level-set function is usually defined to be a signed distance so that inside the domain it obtains a positive value and outside a negative value. The changes in the value of the level-set function mean also that the interface changes the position.

This module includes several different subroutines that may be used when applying the level-set method. Currently there is no reinitialization strategy for 3D problems. Also some other procedures are not fully optimized for the best performance. Therefore the current implementation is best applied to quite simple 2D problems.

### 32.2 Theory

The interface is defined by a marker function  $\phi$  so that at the interface  $\phi = 0$ , inside the fluid of interest  $\phi > 0$  and elsewhere  $\phi < 0$ . The interface is update by solving the equation

$$\frac{\partial \phi}{\partial t} + \vec{u} \cdot \nabla \phi = a \quad (32.1)$$

where  $\vec{u}$  is the convection field and  $a$  is the normal flux on the interface. It is quite challenging to solve the differential equation above without diffusion effects playing a significant role. It is advisable to use 2nd order time-discretization schemes and short timesteps. More precisely, the Courant number  $C = |\vec{u}|dt/h$  should be below unity.

It is desirable that the absolute value of function equals the shortest distance to the zero level-set. However, as the level-set function is advected this property may be gradually lost. Therefore a process called reinitialization may be evoked. In 2D the reinitialization may be easily done by geometric procedure. First the zero level-set is formed by going through all the elements and finding the line segments that make the zero level-set. Then the minimum distance of all the nodes is computed by a brute-force search. Assuming there are  $N$  nodes and  $M$  line segments the search algorithm is  $N \times M$  which is quite acceptable complexity for small cases but may become computationally costly in large cases.

The line segments may be assumed to go with the flow and thereby they form an on-the-fly Lagrangian mesh. Therefore it is also possible to advect the line segments when the velocity field is given since for any node  $\vec{r} = \vec{r} + \vec{u} dt$ . After the advection the shortest distance is computed. In the case of no advection the sign of the distance is inherited from the original level-set function. However, when the level-set is also convected the sign must be deduced from the geometric information as well. In the current implementation each line segment is given a flag telling on which side of the element the fluid of interest is located. This directional information is then used in giving the correct sign for the distance.

The volume of the fluid of interest in the level-set method may be computed over an integral that obtains a value one inside the fluid and value zero outside the fluid. The Heaviside function  $H(\phi)$  has this desired property. However, as the interface does not follow the element division the numerical integration would result into spurious fluctuations depending on the position of the interface within the elements. To obtain a smooth behavior the Heaviside function must be regularized.

$$H_\alpha(x) = \begin{cases} 0, & x < -\alpha \\ f(\alpha/x) & |x| \leq \alpha \\ 1, & x > \alpha, \end{cases} \quad (32.2)$$

where the followin has been implemented

$$f(t) = \frac{1}{2} \left( 1 + \sin \left( t \frac{\pi}{2} \right) \right) \quad (32.3)$$

while one could also use

$$f(t) = \frac{3}{4} \left( t - t^3/3 \right) + \frac{1}{2}. \quad (32.4)$$

Here  $\alpha$  is the interface bandwidth which equals typically the size of a few elements. Now the volume (area in 2D) is obtained by the integral

$$V = \int_{\Omega} H_\alpha(\phi) d\Omega. \quad (32.5)$$

After the same regularization the area (length in 2D) may be obtained from the integral

$$A = \int_{\Omega} \delta_\alpha(\phi) |\nabla \phi| d\Omega \quad (32.6)$$

where the delta function is

$$\delta_\alpha(x) = \begin{cases} 0, & |x| > \alpha \\ \frac{1}{2\alpha} \cos \left( \frac{x}{\alpha} \pi \right), & |x| \leq \alpha. \end{cases} \quad (32.7)$$

The information obtained by the above integrals may be used to improve the volume conservation of the level-set advection. If the initial volume  $V_0$  is known the level-set function may be given a small correction by

$$d\phi = \frac{V_0 - V}{A}. \quad (32.8)$$

This correction has no physical basis but it may be argued that a consistently small update of the level-set function has a minor effect in overall results. It is more important that the volume is conserved since the history information of the shape of a bubble is gradually lost while the errors in volume are never forgotten. However, if the fluid of interest is divided into several parts this kind of overall correction does not have any justification since it could ruin the volume balance between the different domains.

The problems in accuracy may be partially resolved by using an optimal timestepping strategy. This may be achieved by looking at the velocity field around the active boundary. The normal velocity may be obtained by  $u_n = \vec{u} \cdot \nabla \tilde{\phi}$ . Registering the maximum velocity at band the timestep may be limited so that the Courant number is bound. If  $ds$  is the maximum allowed change in the position of the zero level-set the corresponding time-step is  $dt = ds / \max |u_n|$ .

In the Eulerian approach to the free surface problems the surface tension force must be smeared out to a volume force within a narrow band from the interface. The transformation is achieved by using a regularized delta function,

$$\int_{\Gamma} \sigma \kappa d\Gamma = \int_{\Omega} \sigma \kappa \delta(\phi) \nabla \phi d\Omega, \quad (32.9)$$

where  $\sigma$  is the surface tension coefficient and  $\kappa$  the curvature of the interface given by

$$\kappa = \nabla \cdot \frac{\nabla \phi}{|\nabla \phi|}. \quad (32.10)$$

In the finite element approach the force cannot be estimated directly since it involves three derivatives of the level-set function. Therefore we must solve an additional equation for the curvature  $\kappa$ ,

$$\kappa - c_{\kappa} \nabla^2 \kappa = \nabla \cdot \nabla \tilde{\phi}. \quad (32.11)$$

Here  $c_{\kappa}$  is an ad'hoc diffusion coefficient that may be used to smooth the resulting curvature field. Otherwise the sharp corners may result to very large peak values of the curvature. The weak formulation of the above equation introduces surface fluxes which are evaluated from the normal derivatives of the level-set function. Once the level-set function and the corresponding curvature have been computed the surface tension may be applied as a volume force in the flow equations.

## 32.3 Keywords

### LevelSetSolver

This subroutine uses the finite element method to solve the equation (32.1). The implementation is valid in 2D, 3D and axisymmetric problems.

Solver solver id

Equation String "Level Set Solver"

Procedure File "LevelSet" "LevelSetSolver"

The subroutine for advecting the level-set function.

Variable String "Surface"

The name of the level-set function. This may be chosen freely as long as it is used consistently elsewhere.

Stabilize Logical

Either stabilization or bubbles are used to solve the convection problem. This flag enforces the stabilization on.

Material mat id

LevelSet Velocity i Real

The velocity field that advects the level-set function. In 2D  $i=1, 2$  and in 3D  $i=1, 2, 3$ . This may be a constant field or also something computed with the Navier-Stokes solver.

Body Force bodyforce id

LevelSet Flux Real

The flux (i.e. the normal velocity) of the level-set function.

## LevelSetDistance

This solver uses the geometric information to compute the signed distance and, if desired, to advect the zero level-set at the same time. This solver does not solve an equation and hence it does not need to have a variable of its own. The solver is limited to 2D and axisymmetric cases.

Solver `solver id`

Equation `String "Level Set Distance"`

Procedure `File "LevelSet" "LevelSetDistance"`

The subroutine for renormalizing (and advecting) the level-set function.

LevelSet Variable `String "Surface"`

This keyword should refer to the name of the level-set variable that is used to advect the field. The default is `Surface`.

Exported Variable 1 `String "Surface"`

In case the level-set variable does not exist it must be introduced. This may be the case if this subroutine is also used for advecting the level-set function.

LevelSet Convect `Logical`

Whether to also convect the level-set function. Default is `False`.

Extract Interval `Integer`

When this function is used to extract the zero level-set function the user may choose the interval how often this is done. The default is one. Just extracting the level-set may be useful if one just wants to save the zero level-set without activating reinitialization.

Reinitialize Interval `Integer`

When this function is used to reinitialize the level-set function the user may choose the interval how often this is done. The default is one but often this results to excessive smoothening of the level-set field. If reinitialization is asked the zero level-set will also be automatically extracted.

Reinitialize Passive `Logical`

If this keyword is set `True` the reinitialization is not applied to the level-set field. The field is only used to extract the zero level-set and compute the corresponding signed distance but this information is not used to change the original field.

Narrow Band `Real`

In case that also the convecting is done by this solver there is the possibility to introduce a narrow band which gives the distance at within the level-set function is recomputed. Default is  $\infty$ . Typically this should be larger than the level-set bandwidth  $\alpha$  used to evaluate surface integrals.

Filename `File`

The zero level-set may also be saved. It consists of a number of line segments that are defined elementwise. The results from the file may be used for visualization, for example, in MatLab. If no filename is given the zero level-set is not saved.

File Append `Logical`

If the above is given this flag enforces the results to be appended on the same file rather than writing over the old results.

Material `mat id`

LevelSet Velocity 1 `Real`

LevelSet Velocity 2 `Real`

If also convection is accounted in this solver the convection field is given by the above expressions. Currently it is not possible to give the desired surface flux as it is not uniquely defined for the line segments having different normals even at the same point.



## LevelSetIntegrate

This subroutine computes the integrals (32.5) and (32.6). In addition of computing volume and surface integrals this subroutine may also be used to set the absolute level of the level-set function so that volume is conserved using equation (32.8). The implementation is valid in 2D, 3D and axisymmetric problems.

Solver solver id

Equation String Level Set Integrate

Procedure File "LevelSet" "LevelSetIntegrate"

The subroutine for computing the integrals.

LevelSet Variable String "Surface"

This keyword gives the name of the level-set function used for computing the integrals. The default is Surface.

LevelSet Bandwidth Real

When computing the values over the domain the interface is treated with smooth functions. How smooth the functions are depends on the value of this keyword. Typically the bandwidth should be such that the interface is extended over a few elements.

Conserve Volume Logical

The volume in the level-set formulation is not conserved by construction. To that end the level of the level-set function may be tuned so that conservation is enforced. The default is False.

Conserve Volume Relaxation Real

If conservation is enforced it may be done only partially as there are inaccuracies in the evaluation of the volume integrals. The default is one.

Initial Volume Real

If conservation is enforced the target volume is given by this keyword. Otherwise the volume from the first timestep is used as the target value.

## LevelSetCurvature

This solver computes the value of the curvature given the level-set function using equation (32.11).

Solver solver id

Equation String Level Set Curvature

Procedure File "LevelSet" "LevelSetCurvature"

The subroutine for computing the curvature.

Variable String "Curvature"

The name of the curvature variable.

LevelSet Variable String "Surface"

This keyword gives the name of the level-set function used for computing the integrals. The default is Surface.

Curvature Diffusion Real

Artificial diffusion may be used to control the singularities of the curvature field around sharp corners. The default is zero.

Curvature Coefficient Real

A constant that is used to multiply the curvature field before the solver is exited. This may be used for example to change the sign of the curvature if the material of interest is on the outside and not on the inside.

LevelSet Bandwidth Real

The delta function for the volume force may be applied to the curvature field also within this solver directly. This has the disadvantage that the evaluation is done at nodal points rather than

at the integration points. However, if the flow solver used may not be modified this may be the best alternative. If this keyword does not exist, no delta function is used to filter the curvature field.

Boundary Condition `bc id`

Levelset Curvature BC `Logical`

The weak formulation of the curvature computation results to boundary integrals that should be set at all surfaces where the curvature is computed.

## LevelSetTimestep

The solution of the level-set function is accurate only if the timestep is limited so that the local Courant number along the zero level-set is in the order of one or smaller. A tailored function for setting the timestep is given in this module. This solver assumes that the level-set variable is named `Surface` and that this variable is related to some solver. The velocity needed for setting the timestep should be given by the keywords `LevelSet Velocity i`, where  $i=1, 2, 3$ .

Simulation

The function call and the needed parameters reside in the `Simulation` block of the command file.

Timestep Function

`Real Procedure "LevelSet" "LevelSetTimestep"`

LevelSet Courant Number `Real`

This keyword gives the desired Courant number of for the level-set solvers. The default for the desired Courant number is one.

LevelSet Timestep Directional `Logical`

If the timestep limit is active this option may be used to account only the normal direction of the interface velocity rather than the absolute direction. Default is `False`.

## Other solvers

Basically the user may give user defined material parameters where the values are computed as a function of the levelset function. Unfortunately this approach generally uses nodal points for the smearing whereas it is optimal to use the Gaussian integration points for doing this. There is one exception to this model that has been implemented for the `MaterialModels` module, namely the viscosity may be computed at Gaussian integration points.

Material `mat id`

Viscosity Model `String levelset`

This uses the levelset methodology to smear out the viscosity between inside and outside values.

Viscosity `Real`

The value of the viscosity outside the domain (negative levelset function values).

Viscosity Difference `Real`

The difference between the inside and outside viscosity values.

Levelset bandwidth `Real`

The bandwidth at which the viscosity is smeared out between the extreme values.

## Model 33

# Density Functional Theory

**Module name:** DFTSolver

**Module subroutines:** Poisson, WaveFunctionSolver, ChargeDensitySolver, xc

**Module authors:** Olli Mali, trad (xc)

**Document authors:** Olli Mali

**Document created:** 10.12.2006

**Document edited:** 18.12.2006

### 33.1 Introduction

This is an instructional text for using Elmer solvers I created for DFT calculations during the year 2006 while preparing my Master's Thesis [7]. These Solvers are rather experimental and I would not recommend their use for highly complicated problems. Nevertheless they provide nice backbone for creating own DFT-solvers with finite element method.

### 33.2 Theory

In DFT, Kohn-Sham equations [1, 2] play central role. They are set of highly nonlinear equations which define uniquely the exact ground state charge density. From charge density the total energy of the system in ground state can be calculated, which is unfortunately not implemented in present code.

The Kohn-Sham equations have a form

$$\begin{aligned} \left( -\frac{1}{2}\Delta + V_{EXT}(\mathbf{r}) + V_C[\rho(\mathbf{r})] + V_{XC}[\rho(\mathbf{r})] \right) \psi_k(\mathbf{r}) &= \varepsilon_k \psi_k(\mathbf{r}) \\ \rho(\mathbf{r}) &= \sum_{k=1}^N |\psi_k(\mathbf{r})|^2 \end{aligned} \quad (33.1)$$

where KS-orbitals  $\psi_k(\mathbf{r})$  are normalized,  $\int \psi_k(\mathbf{r})^2 d\mathbf{r} = 1$ , for each  $k = 1, 2, \dots, N$ .  $V_{EXT}$  is the external potential caused by the nuclei,  $V_C$  is the non-interacting Coulomb potential and  $V_{XC}$  is the exchange correlation potential that includes all the complicated many body effects, at least approximates. Nice explanation from the widely used Local Density Approximation can be found from [3]. Nonlinearity occurs in eigenvalue problem, where the operator depends on the solution of the eigen problem.

#### Self-Consistent iteration

The equations (33.1) are solved with self-consistent iteration (fixed point iteration). In this iteration Coulomb and external potentials are solved from Poisson equation. The iteration steps are as follows:

1. Begin with previous or initial guess for charge density  $\rho^j$

2. Solve new electric potential from Poisson equation,

$$-\Delta V^{j+1}(\mathbf{r}) = \frac{1}{4\pi} \rho^j(\mathbf{r}) - \sum_{i=1}^M Z_i \delta(\mathbf{r} - \mathbf{r}_i) \quad , \quad (33.2)$$

where  $\delta$  refers to Dirac's delta distribution (point load).

3. Solve eigenvalue problem,

$$\left( -\frac{1}{2}\Delta + V^{j+1}(\mathbf{r}) + V_{xc}^{j+1}(\mathbf{r}) \right) \psi_k(\mathbf{r}) = \varepsilon_k \psi_k(\mathbf{r}) \quad , \quad (33.3)$$

where  $V_{xc}^{j+1}$  is calculated via some function  $W$  from point values of charge density  $\rho^j$ .  $V_{xc}^{j+1}(\mathbf{r}) = W(\rho^j(\mathbf{r}))$ .

4. Sum new charge density,

$$\rho^{j+1}(\mathbf{r}) = \sum_{k=1}^N w_k \psi_k(\mathbf{r})^2 \quad , \quad (33.4)$$

where the weight coefficients  $w_k$  depend on the numbers of electrons in orbitals. Extensive overview of calculation of molecular orbitals can be found from [4, 5].

The point load at the nuclei location requires, that *exactly at each nuclei there has to be a node* in the mesh. For the functionality of the solvers no other requirements exists for the mesh or domain.

Unfortunately convergence of this iteration procedure is not guaranteed. For simple atoms ( $Z = 1, 2, 3, 4$ ) code converges within any tolerance limits but for more complicated molecules or atoms usually not. Sensible tolerances were found to be between  $10^{-6}$  or  $10^{-4}$ .

## Boundary Conditions

In theory the zero level of the potential can be set arbitrarily and often in practice one uses condition  $V(\mathbf{r}) \rightarrow 0$ , when  $|\mathbf{r}| \rightarrow \infty$ . Of course in real calculations the domain  $\Omega$  is finite and we set,  $V(\mathbf{r}) = 0$  if  $\mathbf{r} \in \partial\Omega$ . One also assumes  $\Omega$  to be large enough, so that charge density vanishes on the boundary,  $\rho(\mathbf{r}) = 0$  if  $\mathbf{r} \in \partial\Omega$ , so we set  $\psi_k(\mathbf{r}) = 0$  if  $\mathbf{r} \in \partial\Omega$ .

In Kohn-Sham -equations in order to obtain positive definite coefficient matrix on the left hand side of eigenvalue problem (33.1), one sets  $V(\mathbf{r}) \rightarrow C$ , when  $|\mathbf{r}| \rightarrow \infty$ . The constant  $C$  has to be large enough, so the eigenvalues are shifted positive. But too large value slows the convergence of the eigenvalue solver.

## 33.3 Keywords

From the structure of the self-consistent iteration it was natural to divide the solution procedure for three solvers, Poisson solver, eigensolver and charge density summation. For each solver some keywords to control the solution procedure were added.

### Poisson Solver

Poisson Solver demands knowledge about the locations of the nuclei and their atomic numbers. There has to be nodes in the mesh at the nuclei locations, or else error will occur. Following example demonstrates how nuclei of the water molecule with two atoms of atomic numbers  $Z = 1$  (Hydrogen) and single with  $Z = 8$  (Oxygen) are set to the coordinates (0.0, 0.0, 0.0) (Oxygen) and (-1.43, 1.11, 0.0) and (1.43, 1.11, 0.0) (Hydrogens). The rows beginning with ! are comments.

```
!
! NOFnuclei is the number of nuclei in the structure.
!
```

```

NOFnuclei = Integer 3

!
! NucleiTable is an array of the form
! NucleiTable( NOFnuclei, 4 ) where each row
! includes the information of one nucleus.
! The columns are from left to right :
!
! atomic number, x-coordinate, y-coordinate and z-coordinate.
!

NucleiTable(3,4) = Real 8.0  0.0  0.0  0.0 \
                      1.0 -1.43 1.11 0.0 \
                      1.0  1.43 1.11 0.0

```

The self-consistent iteration requires heavy (under) relaxation to avoid divergence. Relaxation means linear mixing of present solution with previous one(s). It is possible to use *Guaranteed Reduction Pulay - method* [6, 7] where the mixing constants are calculated every time as a solution of a minimization problem, it's sensible to begin GR Pulay after some steps of linear mixing.

In following example the exponential relaxation scheme is changed to GR Pulay after 5 steps or if the mixing parameter exceeds value 0.5 . Use of constant mixing parameter instead of increasing one can be easily done by commenting out the first four uncommented lines and removing the comment sign ! from following two lines.

```

!
! Select the relaxation method used, possibilities are
! constant mixing parameter a(k) = A or varying parameter
! with scheme a(k) = C + 1- A * Exp( B * k )
!

Relaxation Method = String "Exponential mixing"
Relaxation Parameter A = Real 1.0
Relaxation Parameter B = Real 0.05
Relaxation Parameter C = Real 0.005

! Relaxation Method = String "Constant mixing"
! Relaxation Parameter A = Real 0.01

Start GRPulay after iterations = Integer 5
Start GRPulay if relaxation factor is more than = Real 0.5

```

### Eigenproblem Solver

Eigenproblem solver demands knowledge about the type of exchange correlation approximation used. Namely the expression of  $W$  in third self-consistent iteration step. In module `xc.f90` there are several different formulae for LDA approximations. Some of them include spin directions and are to be used with different solver composition where KS-orbitals for up- and down-spins are calculated separately.

```

!
! Choose the type of the XC Potential, possible choices are:

```

```
! "None"
! "Perdew-Zunger"
! "Von Barth-Hedin"
! "Gunnarsson-Lundqvist"
! "Perdew-Wang"
!
```

```
XC Potential type = String "Perdew-Zunger"
```

## Charge Density Solver

Charge density solver demands knowledge about the number of KS-orbitals to be summed and the weights of each orbital. These are the  $N$  and  $w_k$ 's in fourth self-consistent iteration step. In following example one sets  $N = 5$  and  $w_k = 2$ , for all  $k = 1, \dots, 5$ .

```
! Define the number of eigenmodes included on the
! calculation of charge density. Set weights for the
! eigen states. By default they are all 1.
```

```
Number of Eigenmodes Included = Integer 5
Weights of Eigen States(5,1) = Real 2.0 2.0 2.0 2.0 2.0
```

Weights of the Eigen States table has to be size  $(N, 1)$ . Naturally  $N$  has to be equal or less for the number of eigenstates to be solved in eigenvalue solver.

## Bibliography

- [1] P. Hohenberg, W Kohn *Inhomogeneous Electron Gas* Physical Review, Volume 136, Number 3B, 9 November 1964
- [2] W. Kohn, L. J. Sham, *Self-Consistent Equations Including Exchange and Correlation Effects* Physical Review, Volume 140, Number 4A, 15 November 1965
- [3] M. P. Das, *Density Functional Theory: Many-Body Effects Without Tears* Proceedings of the Miniworkshop on "Methods of Electronic Structure Calculations", ICTP, Trieste, Italy 10 August - 4 September 1992
- [4] Peter Atkins, Ronald Frieman, *Molecular Quantum Mechanics* Oxford University Press Inc., Fourth edition 2005
- [5] Andrew R. Leach, *Molecular Modelling*, Pearson Education Limited, Second edition 2001
- [6] D. R. Bowler, M. J. Gillan, *An efficient and robust technique for achieving self consistency in electronic structure calculations* Chemical Physics Letters 325 sivut 473-476 (2000)
- [7] O. Mali, *Kohn-Sham -yhtälöiden ratkaiseminen elementtimenetelmällä*, Diplomityö, 19. syyskuuta 2006

## Model 34

# System Reduction for Displacement Solvers

**Module name:** RigidBodyReduction

**Module subroutines:** RigidBody

**Module authors:** Antti Pursula

**Document authors:** Antti Pursula

**Document edited:** August 27th 2003

### 34.1 Introduction

This module is used to reduce and simplify the computation of a displacement solver when the problem includes rigid blocks. In such a case, it is often difficult for iterative solvers to find a solution for the full system, and direct solvers become obsolete when the system is large enough. The convergence and also the speed of the solution can be substantially improved when the degrees of freedom corresponding to the nodes belonging in the rigid blocks are reduced onto the 6 DOFs (3 in 2D) of the corresponding rigid body. In the module, the reduction is achieved via a projection matrix.

Additionally, the routine automatically eliminates the degrees of freedom corresponding to the Dirichlet boundary conditions. It is also possible to request the elastic regions to be extended into the rigid blocks. There is also possibility to reorder the reduced matrix elements to decrease its bandwidth.

### 34.2 Theory

The module starts with normally constructed matrix equation for the unknown displacements  $x$ ,  $Ax = b$ . Let us assume that the nodes are ordered in such a way that the first  $n$  elements of the vectors correspond to the elastic parts of the structure and the remaining  $m$  elements correspond to the rigid parts of the structure. The goal is to reduce the  $(n + m) \times (n + m)$  matrix  $A$  to a  $(n + \alpha k) \times (n + \alpha k)$  matrix  $B$ , where  $k$  is 3 for 2D and 6 for 3D problems and  $\alpha$  is the number of rigid blocks present. Reductions are made also for the vectors so that finally the matrix equation reads  $Bu = f$ .

The relation between the unknowns is

$$x = Pu, \quad (34.1)$$

where the projection matrix  $P$  ties the nodes in the rigid bodies to the same displacements in coordinate directions and the same rotations about the coordinate axis. The rotations are defined with a coordinate system whose origin is at the center of each rigid body. For the right hand sides we can write

$$f = Qb, \quad (34.2)$$

where the matrix  $Q$  sums the forces and torques present at the nodes in rigid bodies for a resultant force and torque of the center point of the corresponding rigid body. In both mappings, the rotations are linearized so the module is valid only for cases where the rotations are small.

Using these definitions, we have

$$Ax = APu = b \quad (34.3)$$

and

$$Bu = f = Qb. \quad (34.4)$$

Combining the equations gives  $Bu = QAPu$  and thus

$$B = QAP. \quad (34.5)$$

With a suitable order of the rotations one can write

$$Q = P^T \equiv C, \quad (34.6)$$

and

$$B = CAC^T. \quad (34.7)$$

The matrix  $C$  has a identity matrix block of size  $n \times n$  which keeps the elastic nodes intact, and a projection block of size  $\alpha k \times m$ .

The reduced order solution  $u$  is transformed back to the original nodes by the same mapping

$$x = C^T u. \quad (34.8)$$

### 34.3 Applicable cases and limitations

The module works for

- Linear steady-state problems
- Linear transient problems
- Eigen analysis
- Quadratic eigenproblems

There are following limitations:

- Rigid blocks should not have common nodes (there should be elastic nodes in between rigid blocks)
- If a Dirichlet bc is given on a node of a rigid block then the entire rigid block is assumed to be fixed in all directions

### 34.4 Keywords

Body `body id`

Rigid Body `Logical`  
Value `True` defines the rigid body.

Solver `solver id`

The module does not need a separate solver but a call in the stress analysis, or the elasticity solver in the linear mode.

Equation `String Stress Analysis`

Variable `String Displacement`



Variable DOFs Integer

It is important to give the DOFs right, either 2 or 3 depending on the dimension.

Before Linsolve File "RigidBodyReduction" "RigidBody"

The model order reduction is performed after the matrix has been assembled but before the matrix equation has been solved. The matrix equation is modified to a smaller equation and the new equation is solved within the subroutine.

Eigen Analysis Logical

It is possible to use the model order reduction with modal analysis, as well as with static and transient cases.

Eigen System Values Integer

The number of eigen values to be computed.

Eigen System Damped Logical

Eigen System Use Identity Logical [True]

The reduction is possible also with quadratic (damped) eigenproblems.

Optimize Matrix Structure Logical

If true, the matrix structure is optimized. This feature is recommended since the reduced matrix has often very scattered structure. The optimization is performed with the Cuthill-McKee algorithm.

Reverse Ordering Logical

This flag can be used to reverse the matrix ordering if the matrix structure is optimized, resulting in reverse Cuthill-McKee ordering.

Extend Elastic Region Logical

If true, the elastic regions of the geometry are extended into the rigid block. This feature allows taking into account the bending in the joints between elastic and rigid parts.

Extend Elastic Layers Integer

Defines the number of element layers that the elastic regions are extended.

Output Node Types Logical

Writes in the ElmerPost output file a variable describing the status of each node in the geometry. The variable has value 0 for elastic nodes, -1 for rigid blocks that are fixed due to a Dirichlet boundary condition, and a positive integer for separate rigid blocks. The variable may be used to check that the reduction is performed on the right blocks, and to check how many layers the elastic regions should be extended, for example.

Additional Info Logical

If true, additional information is written about the performed tasks during the simulation.

## 34.5 Examples

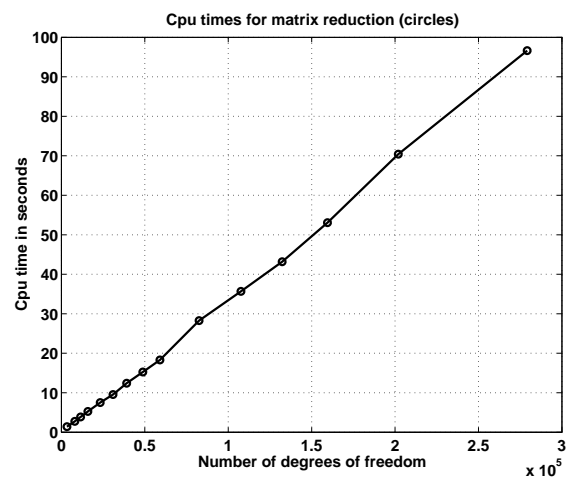


Figure 34.1: The cpu time required for the matrix reduction operations depends linearly on the degrees of freedom in the system.

# Model 35

## Artificial Compressibility for FSI

**Module name:** ArtificialCompressibility  
**Module subroutines:** CompressibilityScale  
**Module authors:** Peter Råback  
**Document authors:** Peter Råback  
**Document created:** 16.2.2002  
**Document edited:** 8.2.2006

### 35.1 Introduction

When fluid-structure interaction (FSI) problems are solved with a loosely coupled iteration strategy there is a risk of applying unphysical boundary conditions that lead to severe convergence problems. The reason for this is that initially the fluid domain is unaware of the constraint of the structural domain, and vice versa. If the iteration converges this discrepancy will be settled, but sometimes the initial phase is so ill posed that convergence is practically impossible to obtain [4, 3].

The problem may be approached by applying the method of artificial compressibility to the fluid-structure interaction. Previously artificial compressibility has mainly been used as a trick to eliminate the pressure from the Navier-Stokes equations or to improve the convergence of the solution procedure [2, 6, 1]. Here the compressibility is defined so that it makes the fluid imitate the elastic response of the structure.

The method is best suited for cases where there is a direct correspondence between the pressure and the volume. Inertial forces and traction forces should be of lesser importance. The method might, for example, boost up the modeling of human arteries.

### 35.2 Theory

#### 35.2.1 Fluid-structure interaction

The theoretical model with some results is thoroughly presented in

We look at the time-dependent fluid-structure interaction of elastic structures and incompressible fluid. The equations of momentum in the structural domain is

$$\rho \frac{\partial^2 \vec{u}}{\partial t^2} = \nabla \cdot \tau + \vec{f} \text{ in } \Omega_s, \quad (35.1)$$

where  $\rho$  is the density,  $\vec{u}$  is the displacement,  $\vec{f}$  the applied body force and  $\tau = \tau(\vec{u})$  the stress tensor that for elastic materials may be locally linearized with  $\vec{u}$ . For the fluid domain the equation is

$$\rho \left( \frac{\partial \vec{v}}{\partial t} + \vec{v} \cdot \nabla \vec{v} \right) = \nabla \cdot \sigma + \vec{f} \text{ in } \Omega_f, \quad (35.2)$$

where  $\vec{v}$  the fluid velocity and  $\sigma$  the stress tensor. For Newtonian incompressible fluids the stress is

$$\sigma = 2\mu\varepsilon(\vec{v}) - pI, \quad (35.3)$$

where  $\mu$  is the viscosity,  $\varepsilon(\vec{v})$  the strain rate tensor and  $p$  the pressure. In addition the fluid has to follow the equation of continuity that for incompressible fluid simplifies to

$$\nabla \cdot \vec{v} = 0 \text{ in } \Omega_f. \quad (35.4)$$

For later use we, however, recall the general form of the continuity equation,

$$\frac{\partial \rho}{\partial t} + \nabla \cdot (\rho \vec{v}) = 0 \text{ in } \Omega_f. \quad (35.5)$$

The fluid-structure interface,  $\Gamma_{fs}$ , must meet two different boundary conditions. At the interface the fluid and structure velocity should be the same,

$$\vec{v}(\vec{r}, t) = \vec{u}(\vec{r}, t), \quad \vec{r} \in \Gamma_{fs}. \quad (35.6)$$

On the other hand, the surface force acting on the structure,  $\vec{g}_s$ , should be opposite to the force acting on the fluid,  $\vec{g}_f$ , thus

$$\vec{g}_s(\vec{r}, t) = -\vec{g}_f(\vec{r}, t), \quad \vec{r} \in \Gamma_{fs}. \quad (35.7)$$

A widely used iteration scheme in FSI is the following: First, assume a constant geometry and solve the Navier-Stokes equation for the fluid domain with fixed boundary conditions for the velocity. Then calculate the surface forces acting on the structure. Using these forces solve the structural problem. Using the resulting displacement velocities as fixed boundary conditions resolve the fluid domain. Continue the procedure until the solution has converged.

The above described iteration usually works quite well. However, in some cases the boundary conditions (35.6) and (35.7) lead to problems. The elasticity solver is not aware of the divergence free constraint of the velocity field. Therefore the suggested displacement velocities used as boundary conditions may well be such that there is no solution for the continuity equation. A proper coupling method makes the solution possible even if the velocity boundary conditions aren't exactly correct. Further, if the Navier-Stokes equation is solved without taking into account the elasticity of the walls, the forces in equation (35.7) will be exaggerated. The pathological case is one where all the boundaries have fixed velocities. Then even an infinitely small net flux leads to infinite pressure values. A proper coupling method should therefore also give realistic pressure values even with inaccurate boundary conditions. The method of artificial compressibility meets both these requirements.

### 35.2.2 Artificial compressibility

When a surface load is applied to an elastic container it results to a change in the volume. In many cases of practical interest the change in volume is mainly due to a pressure variation from the equilibrium pressure that leads to zero displacements. If the structural domain is described by linear equations the change in volume  $dV$  has a direct dependence on the change in the pressure,  $dP$ , or

$$\frac{dV}{V} = c dP. \quad (35.8)$$

This assumption limits the use of the model in highly nonlinear cases.

The change in the volume should be the same as the net volume flux into the domain. As this cannot be guaranteed during the iteration, some other way to enable the material conservation must be used. A natural choice is to let the density of the fluid vary so that it has the same pressure response as the elastic walls,

$$\frac{d\rho}{\rho} = c dP, \quad (35.9)$$

where  $c$  is the artificial compressibility. This is interpreted locally and inserted to the continuity equation (35.5) while neglecting the space derivative of the density, thus

$$c \frac{dp}{dt} + \nabla \cdot \vec{v} = 0, \quad (35.10)$$

where  $dp$  is the local pressure change. Here the time derivative of pressure must be understood as an iteration trick. A more precise expression is

$$\frac{c}{\Delta t} (p^{(m)} - p^{(m-1)}) + \nabla \cdot \vec{v}^{(m)} = 0, \quad (35.11)$$

where  $m$  is the current iteration step related to fluid-structure coupling. When the iteration converges  $p^{(m)} \rightarrow p^{(m-1)}$  and therefore the modified equation is consistent with the original one. The weak form of the equation for finite element method (FEM) may easily be written,

$$\int_{\Omega_f} (\nabla \cdot \vec{v}^{(m)}) \varphi_p d\Omega + \frac{1}{\Delta t} \int_{\Omega_f} c (p^{(m)} - p^{(m-1)}) \varphi_p d\Omega = 0, \quad (35.12)$$

where  $\varphi_p$  is the test function.

The artificial compressibility may be calculated analytically in simple geometries. For example, for a thin cylinder with thickness  $h$  and radius  $R$  the compressibility is  $c = 2R/Eh$  [5], where  $E$  is the Young's modulus, and correspondingly for a sphere  $c = 3R/Eh$ .

In most practical cases the elastic response of the structure cannot be calculated analytically. Then the compressibility may also be computed from equation (35.8) by applying a pressure change  $dP$  to the system,

$$c = \frac{1}{V} \frac{dV}{dP}. \quad (35.13)$$

The change in volume may be calculated by comparing it to initial volume, thus

$$c = \frac{V - V_0}{V_0} \frac{1}{dP}. \quad (35.14)$$

For small deformations  $ds = \vec{u} \cdot \vec{n}$ , where  $\vec{n}$  is the surface normal. Therefore we may use an alternative form convenient for numerical computations,

$$c = \frac{\int_{\Gamma_{fs}} (\vec{u} \cdot \vec{n}) dA}{\int_{\Omega_f} dV} \frac{\int_{\Gamma_{fs}} dA}{\int_{\Gamma_{fs}} dp dA}. \quad (35.15)$$

This way  $c$  has a constant value over the domain.

### 35.2.3 Scaling artificial compressibility

If the artificial compressibility distribution is a priori defined we may use the above equations to scale the compressibility appropriately. For example, the compressibility could be given only within a limited distance from the elastic wall. and the functional behavior of  $c(\vec{r})$  would be user defined. Computing compressibility becomes then just a matter of scaling,

$$c(\vec{r}) = c_0(\vec{r}) \underbrace{\frac{\int_{\Gamma_{fs}} (\vec{u} \cdot \vec{n}) dA}{\int_{\Omega_f} c_0(\vec{r}) dV} \frac{\int_{\Gamma_{fs}} dA}{\int_{\Gamma_{fs}} dp dA}}_{\text{scaling factor}}. \quad (35.16)$$

A suitable test load for computing compressibility is the current pressure load on the structure. However, for the first step the compressibility must be predefined. It is safer to over-estimate it since that leads to too small a pressure increase. Too large a pressure increase might ruin the solution of the elasticity solver and by that also the computational mesh used by the flow solver would be corrupted. Therefore some sort of exaggeration factor exceeding unity might be used to ensure convergence.

### 35.2.4 Elementwise artificial compressibility

If the displacement field is extended smoothly throughout the whole geometry it may be possible to define the artificial compressibility separately for each element or node. This is particularly useful for geometries where the elastic response changes significantly. The equation is now similar to (35.14),

$$c = \frac{V^e - V_0^e}{V_0^e} \frac{1}{dP}, \quad (35.17)$$

where the superscript  $e$  refers to the volume of an element. This may also be solved using finite element strategies to get nodal values for  $c$ .

## 35.3 Keywords

### Keywords of FlowSolve

Material `mat id`

In the material section the compressibility model and the initial artificial compressibility field is given.

Compressibility Model `String [Artificial Compressible]`

Set the material model of the fluid.

Artificial Compressibility `Real`

The initial value of artificial compressibility. This may also be a distributed function that is then scaled by the solver.

### Keywords of solver CompressibilityScale

If the artificial compressibility is tuned so that it best imitates the elastic response, an additional solver must be used to rescale the above mentioned compressibility. The solver computes the total compressibility and the force acting on the surface. The compressibility is integrated over all volumes that are solved with the Navier-Stokes equation.

Solver `solver id`

Equation `String CompressibilityScale`

The name of the solver.

Procedure `File "ArtificialCompressibility"`

`"CompressibilityScale"`

The subroutine in the dynamically linked file.

Steady State Convergence Tolerance `Real`

How much the relative value of the compressibility may change between iterations,  $\text{abs}(c_i - c_{i-1})/c_i < \varepsilon$ .

Nonlinear System Relaxation Factor `Real`

Relaxation scheme  $c'_i = \lambda c_i + (1 - \lambda)c_{i-1}$  for the compressibility. By default is  $\lambda = 1$ .

Boundary Condition `bc id`

Force BC `Logical`

The elastic response is calculated over the surface(s) which has this definition as True.

### Keywords of solver CompressibilitySolver

When the compressibility is solved elementwise using this solver there has to usually be a isobaric steady-state test phase where the compressibility is defined. For this solver all the normal Linear System keywords also apply.

Solver solver id

Equation String CompressibilitySolver

Procedure File "ArtificialCompressibility"  
"CompressibilitySolver"

Variable String ac

The name of the artificial compressibility field variable.

Displacement Variable Name String "Mesh Update"

The name of the displacement field variable that is used to compute the the volume change.

Displaced Shape Logical True

Flag that defines whether the current shape is the displaced or original shape.

Reference Pressure Real

The value of pressure used for the test loading.

The computed field should then be given as the value in the material section.

Material mat id

Artificial Compressibility Equals ac

The initial value of artificial compressibility given by the solver.

### 35.3.1 Examples

The examples show a 2D square and a 3D cube being gradually filled. The fluid comes in from one wall and the opposing elastic wall makes room for the fluid so that the continuity equation is satisfied. Here the value of artificial compressibility is scaled every timestep to account for the nonlinear elasticity.

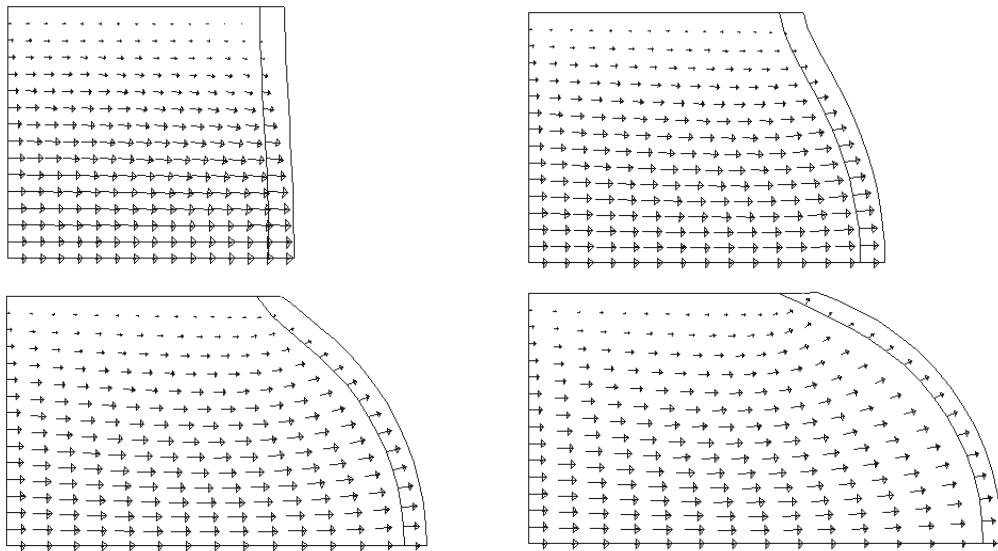


Figure 35.1: Snapshots of an elastic square being gradually filled by incompressible fluid.

## Bibliography

- [1] F. D. Carter and A. J. Baker. Accuracy and stability of a finite element pseudo-compressibility cfd algorithm for incompressible thermal flows. *Num. Heat Transfer, Part B*, 20:1–23, 1991.

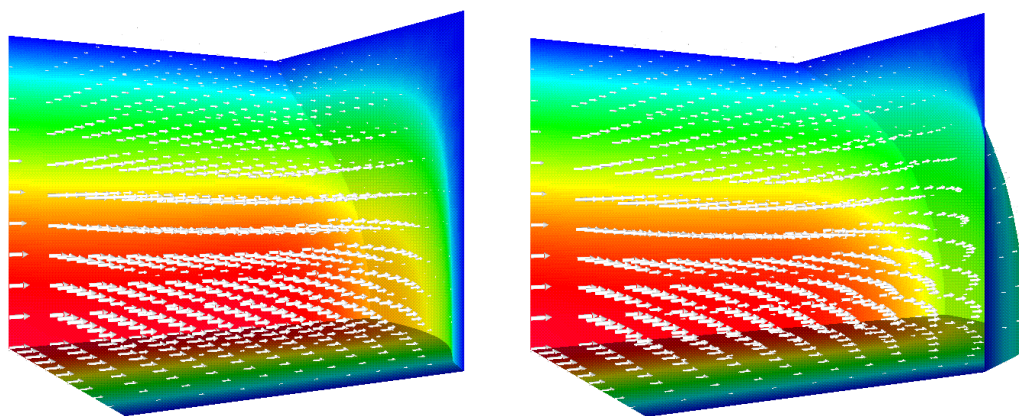


Figure 35.2: Snapshots of an elastic cube being gradually filled by incompressible fluid.

- [2] A. J. Chorin. A numerical method for solving incompressible viscous flow problems. *J. Comput. Phys.*, 135:118–125, 1997.
- [3] L. Formaggia, J. F. Gerbeau, F. Nobile, and A. Quarteroni. Numerical treatment of defective boundary conditions for the navier-stokes equations. *EPFL-DMA Analyse et Analyse Numerique*, 20, 2000.
- [4] E. Järvinen, M. Lyly, J. Ruokolainen, and P. Råback. Three dimensional fluid-structure interaction modeling of blood flow in elastic arteries. In *Eccomas Computational Fluid Dynamics Conference*, September 2001.
- [5] Kris Rienslagh, Jan Vierendeels, and Erik Dick. An efficient coupling procedure for flexible wall fluid-structure interaction. In *Eccomas Congress on Comp. Meth. in Appl. Sci. and Eng*, September 2000.
- [6] S. E. Rogers, D. Kwak, and U. Kaul. On the accuracy of the pseudocompressibility method in solving the incompressible navier-stokes equations. *Appl. Math. Modelling*, 11:35–44, 1987.



## Model 36

# Rotational form of the incompressible Navier–Stokes equations

**Module name:** Stokes

**Module subroutines:** StokesSolver

**Module authors:** Mika Malinen

**Document authors:** Mika Malinen

**Document edited:** June 26th 2009

### 36.1 Introduction

The basic incompressible flow solver of Elmer uses the standard formulation of the Navier–Stokes equations. This section describes an alternative solver based on the rotational form of the Navier–Stokes system. In addition, some iterative methods that utilize splitting strategies in the solution of the associated discrete problems are represented.

### 36.2 Field equations

Using the vector identity

$$(\vec{u} \cdot \nabla) \vec{u} = (\nabla \times \vec{u}) \times \vec{u} + \frac{1}{2} \nabla (\vec{u} \cdot \vec{u}), \quad (36.1)$$

the Navier–Stokes system for incompressible Newtonian fluid may be written as

$$\rho \left( \frac{\partial \vec{u}}{\partial t} + (\nabla \times \vec{u}) \times \vec{u} \right) - 2\mu \nabla \cdot \bar{\bar{\epsilon}}(\vec{u}) + \nabla P = \vec{b}, \quad (36.2)$$
$$\nabla \cdot \vec{u} = 0,$$

where  $\bar{\bar{\epsilon}}$  is the stretching tensor (2.4) and

$$P = p + \frac{1}{2} \rho \vec{u} \cdot \vec{u} \quad (36.3)$$

is the total (Bernoulli) pressure. The stress  $\bar{\bar{\sigma}}$ , which may be of interest especially near boundaries, can now be expressed as

$$\bar{\bar{\sigma}} = (-P + \frac{1}{2} \rho \vec{u} \cdot \vec{u}) \bar{\bar{I}} + 2\mu \bar{\bar{\epsilon}}(\vec{u}). \quad (36.4)$$

The system (36.2) provides an alternative starting point for finding discrete solutions. Thus, instead of approximating the conventional primitive variables  $(\vec{u}, p)$ , we here look for discrete solutions of  $(\vec{u}, P)$ . It should be noted that if the convection term is not taken into account the system (36.2) reduces to the (generalized) Stokes equations. The pressure variable then reduces to the standard pressure, i.e.  $P = p$ .

### 36.3 Boundary conditions

Either the normal velocity  $\vec{u} \cdot \vec{n}$ , with  $\vec{n}$  the outward unit normal vector, or the normal surface force  $\bar{\sigma} \vec{n} \cdot \vec{n}$  can be prescribed on the boundary. The tangential boundary conditions can be handled systemically in a similar manner. Thus, if  $\vec{t}$  is a tangent vector to the boundary, one may prescribe either the tangential velocity  $\vec{u} \cdot \vec{t}$  or the tangential surface force  $\bar{\sigma} \vec{n} \cdot \vec{t}$ .

A rather common way to define an outflow boundary condition for the Navier–Stokes equations is to impose the normal surface force condition

$$\bar{\sigma} \vec{n} \cdot \vec{n} = 0, \quad (36.5)$$

which ensures the uniqueness of the pressure solution. This condition arises when the homogeneous natural boundary condition (do-nothing boundary condition) is imposed in the standard formulation of the Navier–Stokes equations. It should be noted, however, that the homogeneous natural boundary condition associated with the variational formulation of (36.2) can be written as

$$-P\vec{n} + 2\mu\bar{\varepsilon}\vec{n} = \bar{\sigma}\vec{n} - \frac{1}{2}\rho(\vec{u} \cdot \vec{u})\vec{n} = \vec{0}.$$

Thus, a distinction must here be made between the surface force boundary condition and the natural boundary condition. In the case of the rotational form, imposing the homogeneous natural boundary condition in the normal direction yields

$$\bar{\sigma}\vec{n} \cdot \vec{n} = \frac{1}{2}\rho\vec{u} \cdot \vec{u},$$

which, except for the special case of irrotational steady flow of a non-viscous fluid, may be an artificial boundary condition. Nevertheless, the tangential natural boundary condition associated with the rotational form is equivalent to the condition of vanishing tangential surface force, i.e.  $\bar{\sigma}\vec{n} \cdot \vec{t} = 0$ .

### 36.4 Linearization

The linearization of the equation of motion in (36.2) can be done by utilizing the Newton iteration. This iteration strategy is based on approximating the rotational convection term as

$$(\nabla \times \vec{u}) \times \vec{u} \approx (\nabla \times \vec{u}) \times \vec{a} + (\nabla \times \vec{a}) \times \vec{u} - (\nabla \times \vec{a}) \times \vec{a}$$

where  $\vec{a}$  is the previous velocity iterate. In this connection, the nonlinear boundary condition corresponding to the outflow condition (36.5) is linearized as

$$-P + \frac{1}{2}\rho(2\vec{a} \cdot \vec{u} - \vec{a} \cdot \vec{a}) + 2\mu\bar{\varepsilon}(\vec{u})\vec{n} \cdot \vec{n} = 0.$$

An alternative linearization strategy is to apply Picard's method. Here this method corresponds to linearizing the convection term and the outflow boundary condition as

$$(\nabla \times \vec{u}) \times \vec{u} \approx (\nabla \times \vec{u}) \times \vec{a}$$

and

$$-P + \frac{1}{2}\rho\vec{a} \cdot \vec{u} + 2\mu\bar{\varepsilon}(\vec{u})\vec{n} \cdot \vec{n} = 0.$$

The convergence of the Newton method can be considerably faster than that of Picard's method. Our experience is that this can be the case, especially, when the steady solutions are sought for moderately large Reynolds numbers. However, a difficulty with the Newton method is that the iteration may not be convergent for arbitrary initial guesses. This trouble can often be avoided by performing some Picard updates before switching to Newton's method. In the case of time-accurate simulations this is usually unnecessary since suitably accurate initial guesses are often available from the previous time levels.

### 36.5 Discretization aspects

The solver is tailored to the case of the lowest-order continuous pressure approximation, but it does not provide any in-built technique to stabilize discrete solutions based on inherently unstable equal-order approximations of  $(\vec{u}, P)$ . The solver offers two strategies which can be used to obtain stable methods. First, one can use elements where the velocity approximation is augmented by using elementwise bubble functions. Second, one can utilize hierarchic versions of the second-order elements to rise the polynomial order of the velocity approximation. Both the strategies can be put into effect by utilizing the shape functions for  $p$ -elements. Some stable approximation methods are summarized as follows.

- *A hierarchic version of  $P_2$ - $P_1$  approximation for triangular and tetrahedral elements.* If the basic mesh consists of linear elements (element type 303 or 504), giving the element type definition `Element = "p:2"` in the Equation section switches to the  $P_2$ - $P_1$  approximation where the velocity approximation is enhanced by using hierarchic basis functions associated with the mid-edge nodes.
- *A hierarchic version of  $Q_2$ - $Q_1$  approximation for rectangular and brick elements.* Analogously to the previous case, if the basic mesh consists of bilinear or trilinear elements (element type 404 or 808), giving the element type definition `Element = "p:2"` in the Equation section switches to the  $Q_2$ - $Q_1$  approximation where the velocity approximation is enhanced by using hierarchic basis functions.
- *A hierarchic version of bubble-stabilized methods.* The velocity approximation may also be enhanced relative to the pressure by using elementwise bubble functions. The richness of velocity approximation depends on how many bubble basis functions are constructed. For example, the set of basis functions for the linear triangular and tetrahedral elements can be augmented with one interior bubble function by giving the element type definition `Element = "p:1 b:1"` in the Equation section. Analogous rectangular and brick elements may also be constructed, but our experience is that more than one bubble function may be necessary to obtain stability, making this strategy less attractive. The  $Q_2$ - $Q_1$  and  $P_2$ - $P_1$  approximation methods may generally require less computational work, especially for three-dimensional problems where the number of interior bubble functions can be large (notice that in the case of the time-dependent equations the interior degrees of freedom are not eliminated by using the method of static condensation).

It is noted that other instabilities may arise when the flow is convection-dominated. A potentially useful aspect of using the rotational formulation is that, as compared with the standard convection form, instabilities relating to dominating convection may be more benign.

### 36.6 Utilizing splitting strategies by preconditioning

Discrete Navier–Stokes problems lead usually to large linear systems which are customarily solved with iterative algorithms, in combination with preconditioning. The general preconditioning strategy used in Elmer is based on the computation of incomplete factorizations. The performance of these preconditioners is case-dependent and may not always be satisfactory.

More efficient solution algorithms for a particular problem can often be developed by exploiting the block structure of the linear system. In the following such a solution strategy will be described. Since the application of the preconditioner considered is based on solving certain simpler problems, the door is opened to utilizing other efficient methods, such as multigrid methods for the discrete Poisson problems, in connection with the solution of this more complicated problem.

The linearization and discretization of (36.2) leads to solving linear systems of the form

$$\begin{bmatrix} A & B^T \\ B & 0 \end{bmatrix} \begin{bmatrix} U \\ \Pi \end{bmatrix} = \begin{bmatrix} F \\ 0 \end{bmatrix}, \quad (36.6)$$

where  $A$  is the coefficient matrix for the velocity unknowns and  $B$  is the divergence matrix. The solution strategy we consider is based on applying a preconditioned Krylov subspace method to (36.6). Given a

previous iterate  $(U_k, \Pi_k)$ , the preconditioning is performed via solving approximately systems of the form

$$\begin{bmatrix} A & 0 & 0 \\ B & M & 0 \\ B & H & S \end{bmatrix} \begin{bmatrix} U_{k+1} - U_k \\ \psi_{k+1} \\ \Pi_{k+1} - \Pi_k \end{bmatrix} = \begin{bmatrix} F - AU_k - B^T \Pi_k \\ -BU_k \\ -BU_k \end{bmatrix}. \quad (36.7)$$

Here  $M$  is the pressure mass matrix, while  $H$  and  $S$  are approximations of (scaled) Laplacian operators. In practice the approximate solution of this block triangular system is generated by applying linear solvers to systems with the coefficient matrices  $A$ ,  $M$  and  $S$ . A crucial aspect of the methodology is that these subsidiary problems can be considerably easier to solve than the original fully coupled system. They may also be solved inexactly without impairing the performance of the preconditioner. Moreover, to our experience the performance of the preconditioner is insensitive to discretization parameters and depends only mildly on the Reynolds number, especially in the case of the evolutionary equations. The method is also suitable for finding the steady solutions via using large time step sizes.

The outer iterative method applied to the primary system (36.6) is based on GCR, while the user can specify linear solvers which are used to solve the subsidiary problems related to the preconditioning. It should be noted that boundary conditions associated with the preconditioning operators are built-in, so the user need not specify these constraints.

## 36.7 Restrictions

Currently, only homogeneous surface force conditions can be imposed on the boundary. If  $Q_2$ - $Q_1$  or  $P_2$ - $P_1$  approximation is used, the boundary conditions are set by employing the linear interpolation of boundary data. As a result, optimal accuracy may not be realised. If the preconditioning is done via solving (36.7), the time discretization must be done using BDF(1) and viscosity should be constant.

If decoupled solution strategies are employed, parallel computations are possible only with the version that does not involve performing the outer Krylov iteration update.

## 36.8 Keywords

Material `material-id`

Density `Real`

This keyword is used to define the density  $\rho$ .

Viscosity `Real`

This keyword is used to define the viscosity  $\mu$ .

Solver `solver-id`

Equation `String`

This keyword declares the name of the equation.

Procedure `File "Stokes" "StokesSolver"`

The name of the file and procedure.

Variable `String`

This keyword is used to declare the name of the solution.

Variable DOFs `Integer`

The value of this keyword defines the number of unknown scalar fields and must hence equal to  $d + 1$  where  $d$  is the spatial dimensionality of the computational domain. The unknown scalar fields are always numbered in such a way that the highest running number is associated with the pressure solution.

Convective `Logical`

If the value `"False"` is given, the convection term will be neglected so that the generalized Stokes equations are solved.

Nonlinear Iteration Method `String`

This keyword defines the nonlinear iteration method. The default is the Newton method, and Picard's method can be chosen by giving the value "Picard".

Nonlinear System Convergence Tolerance `Real`

This keyword defines the stopping criterion for the nonlinear iteration. The nonlinear iteration is terminated when the maximum number of nonlinear iterations is reached or when

$$\left\| \begin{bmatrix} F - A(U_k)U_k - B^T \Pi_k \\ -BU_k \end{bmatrix} \right\| < TOL \left\| \begin{bmatrix} F \\ 0 \end{bmatrix} \right\|,$$

where  $TOL$  is the value of this keyword.

Nonlinear System Max Iterations `Integer`

This keyword defines the maximum number of nonlinear iterations.

Nonlinear System Newton After Iterations `Integer`

If  $n$  is the value of this keyword,  $n$  Picard updates are performed before switching to Newton's method.

Nonlinear System Newton After Tolerance `Real`

If the norm of the nonlinear residual is smaller than the value of this keyword, then the nonlinear iteration method is switched to Newton's method.

Nonlinear System Relaxation Factor `Real`

If this keyword is used, then the new nonlinear iterate is taken to be

$$(1 - \lambda)(U_k, \Pi_k) + \lambda(U_{k-1}, \Pi_{k-1}),$$

where  $\lambda$  is the value of this keyword.

Block Preconditioning `Logical`

If the block preconditioning via (36.7) is used, the value of this keyword must be "True".

Linear System Convergence Tolerance `Real`

When the block preconditioning is used, the value of this keyword defines the stopping criterion for the outer GCR method applied to (36.6).

Linear System Max Iterations `Integer`

When the block preconditioning is used, this keyword is used to define the maximum number of the outer GCR iterations applied to (36.6). It should be noted that the GCR iteration requires that all previous iterates are saved. Especially in the case of time-accurate simulations the convergence of the preconditioned GCR method is expected to be rapid so that saving all the iterates is not expected to be expensive. If the block preconditioning is used, the solver allocates computer memory based on the value of this keyword, so giving an exaggerated value should be avoided.

Body Force `bf-id`

Body Force  $i$  `Real`

This keyword is used to define the  $i$ 's component of the body force vector  $\vec{b}$ .

Boundary Condition `bc-id`

Outflow boundary `Logical`

If the value "True" is given, then the normal outflow boundary condition (36.5) will be used. Note that this does not define the tangential boundary conditions which have to be specified separately.

If the preconditioning is done via solving (36.7), three additional solver sections need to be written to define linear solvers for subsidiary problems with the coefficient matrices  $A$ ,  $M$  and  $S$ . In this connection special equation names (given as values of `Equation` keyword) have to be used. These solver sections should be written as follows.

```

Solver 1
  Equation = "Velocity Preconditioning"
  Procedure = "VelocityPrecond" "VelocityPrecond"
  Exec Solver = "before simulation"
  Variable Output = False
  Variable DOFs = $ d
  Variable = "VelocityCorrection"
  ...
End

Solver 2
  Equation = "Divergence Projection"
  Procedure = "DivProjection" "DivProjection"
  Exec Solver = "before simulation"
  Variable Output = False
  Variable DOFs = 1
  Variable = "DivField"
  ...
End

Solver 3
  Equation = "Pressure Preconditioning"
  Procedure = "PressurePrecond" "PressurePrecond"
  Exec Solver = "before simulation"
  Variable Output = False
  Variable DOFs = 1
  Variable = "PressureCorrection"
  ...
End

```

The first solver section defines a linear solver for the preconditioning system with the velocity matrix  $A$ , while the second solver section defines a solver for the system involving the pressure mass matrix  $M$ . Finally, the third section is related to the system with the coefficient matrix  $S$  arising from the discretization of the Laplacian operator. Each of these sections should also contain the standard keyword commands that actually define the linear solver. Some examples of such definitions can be found in the tests subdirectory of the fem module.

## Model 37

# Nonphysical Mesh Adaptation Solver

**Module name:** NonphysicalMeshSolve

**Module subroutines:** NonphysicalMeshSolver

**Module authors:** Juha Ruokolainen, Peter Råback

**Document authors:** Juha Ruokolainen, Peter Råback

**Document edited:** 6th Sep 2010

### 37.1 Introduction

This solver is a variation of the `MeshSolver` for cases where the true mesh velocity is not of concern and more liberties can be used in the mesh adaptation. Also it may be used as the mesh adaptation solver in conjunction with `MeshSolver`. For example, in shape optimization of fluid-structure interaction problems two mesh adaptation solvers may be needed simultaneously.

### 37.2 Theory

For the equation to be solved look at the theory section of the `MeshSolver`. In addition to that, also weak ways of giving boundary conditions is implemented, namely

$$\tau \cdot \vec{n} = kd + f + c(d - d_0) \quad (37.1)$$

where  $k$  is a spring coefficient,  $f$  is a given force, and  $d_0$  is the target configuration. When  $c$  goes to infinity this condition approaches the Dirichlet conditions.

### 37.3 Keywords

`Solver` `solver id`

Note that all the keywords related to linear solver (starting with `Linear System`) may be used in this solver as well. They are defined elsewhere.

`Procedure` `File` "NonphysicalMeshSolve" "NonphysicalMeshSolver"

Name of the solver subroutine.

`Variable` `String` [-dofs 3 Mesh Deform]

The name of the displacement field. It should be different from `Mesh Update` in order to avoid conflicts in its interpretation. Here we use the name `Mesh Deform`. The dimension should be the same as that of the mesh.

`Cumulative Displacements` `Logical`

If the same solver is called multiple times then this flag controls whether the displacements are added each time to the initial or previous mesh shape. The default is `False`.

Moving Mesh Logical

This keyword relates to a mesh that is being moved by an outside solver such as the MeshSolver.  
The default is True.

Target Field String

The name of the field  $d_0$  that is used as a target when setting the boundary conditions in a weak manner.

Nodal Penalty Factor Real

A coefficient that is used to set the displacements to that given by the target field in a soft manner.  
This is constant for each node which results to problems in mesh consistency.

Material mat id

The material section is used to give the material parameter values. The following material parameters may be set in Navier equations.

Poisson Ratio Real

For isotropic materials Poisson ratio must be given with this keyword.

Youngs Modulus Real

The elastic modulus must be given with this keyword.

Boundary Condition bc id

The boundary condition section holds the parameter values for various boundary condition types. Dirichlet boundary conditions may be set for all the primary field variables. The one related to Navier equations are

Mesh Deform i Real

Dirichlet boundary condition for each displacement component  $i = 1, 2, 3$ .

Mesh Coefficient i Real

The spring coefficient related to the given coordinate direction,  $i = 1, 2, 3$ .

Mesh Force i Real

The right-hand-side of the mesh deformation equation,  $i = 1, 2, 3$ .

Mesh Normal Force Real

The right-hand-side of the mesh deformation equation in the normal direction.

Mesh Penalty Factor Real

When using the soft way of setting boundary conditions this value gives the weight function  $c$ .



## Model 38

# Rigid Mesh Transformation

**Module name:** RigidMeshMapper

**Module subroutines:** RigidMeshMapper

**Module authors:** Peter Råback

**Document authors:** Peter Råback

**Document edited:** 24.9.2009

### 38.1 Introduction

Sometimes there is a need to transform meshes without the need of generation a new mesh. The most simple case is that of rigid mesh movement where some bodies move with prescribed rotations, translations or scalings. Typically this could be a preprocessing step in a parametric study in some problem. Then this solver may be used to perform the mesh transformation.

In addition to applying rigid transformations to bodies this solver includes also a relaxation parameter which may be used to define which fraction of the mesh is taken from the suggested coordinates, and which part from the original coordinates.

It should be noted that the usage of this solver is rather limited. It cannot handle cases where bodies move in respect to one-another if there is a mesh between the bodies. Then the `MeshUpdate` solver should be used instead.

### 38.2 Theory

Given original coordinate  $\vec{x}_0$  the solver applied first a rotation, then a translation, and finally a scaling operator such that the suggested new coordinates yield

$$\vec{x}_1 = \mathcal{S}(\mathcal{R}(\vec{x}_0 - \vec{o}) + \vec{t}) + \vec{o}, \quad (38.1)$$

where  $\vec{t}$  is the vector of translation,  $\vec{o}$  is the origin,  $\mathcal{S}$  the scaling matrix, and  $\mathcal{R}$  is the rotation matrix. Rotation may currently be performed only around one main axis.

Often it is desirable the rigid transformations are performed only for some objects and while some stay fixed. It between the transformation degree should vary smoothly. To this aim the solver may be used to compute a degree of transformation field from the Laplace's equation

$$-\nabla \cdot (1 + c|\nabla\Phi|)\nabla\Phi = 0 \quad (38.2)$$

where  $c$  is an optional coefficient which may be used to increase the mesh rigidity around singularities. As boundary conditions for fixed objects  $\Phi = 0$  and for moving objects  $\Phi = 1$ .

When the rigid mesh mapping is applied together with the relaxation the end result is

$$d\vec{x} = \Phi (\vec{x}_1 - \vec{x}_0). \quad (38.3)$$

### 38.3 Keywords

Solver `solver id`

Equation `String [RigidMeshMapper]`

The name of the equation.

Procedure `File "RigidMeshMapper" "RigidMeshMapper"`

The name of the procedure.

Variable `String`

Optionally the solver may be used to compute a relaxation field that is on the interval  $[0, 1]$ . The final displacement are then obtained as a product of the field and the suggested rigid body motion. The name is arbitrary since it is not referenced elsewhere.

Use Original Coordinates `Logical`

This keyword applied only to cases where the solver is called repeatedly. With this keyword being true the mesh transformation is always applied to the original coordinates. Otherwise the mesh transformation is performed recursively.

Body Force `bf id`

The mesh transformations are defined in this section.

Mesh Translate `Real [ $t_x t_y t_z$ ]`

The translational vector. May also be given individually for each component,  $i = 1, 2, 3$ .

Mesh Rotate `Real [ $\alpha_x \alpha_y \alpha_z$ ]`

The rotation around main coordinate directions. May also be given individually for each component,  $i = 1, 2, 3$ .

Mesh Scale `Real [ $s_x s_y s_z$ ]`

The scaling around of main directions. May also be given individually for each component,  $i = 1, 2, 3$ .

Mesh Origin `Real [ $o_x o_y o_z$ ]`

The origin used in rotation and scaling.

Mesh Displace `i Real`

An alternative for giving the mesh deformation in rigid body motion. Give separately for each component,  $i = 1, 2, 3$ . This is a local field that may vary between the nodes while the rigid body motion may only depend on global variables such as time.

Mesh Relax `Real`

The relaxation factor determining which amount of the coordinate transformation is taken into account. This is a local field which may depend on coordinate values whereas the other above keywords must be constant for each body force.

Boundary Condition `bc id`

The boundary conditions that define the moving and fixed walls.

Moving Boundary `Logical`

Gets relaxation field multiplied by one.

Fixed Boundary `Logical`

Gets relaxation field multiplied by zero.

## Model 39

# Linear Constraints

**Module name:** included in solver (SolverUtils)

**Module subroutines:** SolveWithLinearRestriction

**Module authors:** Mika Juntunen

**Document authors:** Mika Juntunen

**Document edited:** August 5th 2003

### 39.1 Introduction

This subroutine allows user to solve problems with linear constraints. Here constraints are forced with Lagrange multipliers. This method, however, does not always lead to a well-posed problem. Conditions that ensure a (unique) solution are excluded here, but the conditions are found in many books (check for example [1]).

### 39.2 Theory

The problem at hand is

$$\min_x x^T A x - x^T f \quad (39.1)$$

Let's assume that we can solve this. Now we also want that the solution solves the system  $Bx = g$ . This gives constraints to our solution. The rank of  $B$  should be less or equal to the rank of  $A$ . Loosely speaking, the number of rows in  $B$  should be less or equal to the number of rows in  $A$ . The method of Lagrange multipliers fixes these two equations together and gives a new functional to minimize.

$$\min_x x^T A x - x^T f + \lambda^T (Bx - g) \quad (39.2)$$

If  $A$  is symmetric, then simple variational approach leads to solving  $x$  out of system

$$\begin{pmatrix} A & B^T \\ B & 0 \end{pmatrix} \begin{pmatrix} x \\ \lambda \end{pmatrix} = \begin{pmatrix} f \\ g \end{pmatrix} \quad (39.3)$$

Symmetry of  $A$  is not always needed, but then more powerful methods have to be used to get to the above system.

### 39.3 Limitations

- **General usage of the subroutine**

This subroutine can not be used by just adding keywords to solver input file. You must somehow create the constraint matrix and then call for SolveWithLinearRestriction in your own subroutine or function. The reader is encouraged to check for details in ElmerTutorials.

- **EMatrix-field**

The EMatrix-field of the solved system matrix is used passing constraint matrix to SolveWithLinearRestriction. This will be a problem if some other function or subroutine tries to use the EMatrix-field. EMatrix-field of the constraint-matrix is internally used by SolveWithLinearRestriction and should therefor be left alone.

- **Exported Multipliers**

The length of the vector that holds the multipliers is limited to be a multiply of the number of nodes in mesh. This means that the vector usually has extra entries. These entries are set to zero. This leads to problems in extracting the correct values from the result file. Also post processing with ElmerPost is at least tricky.

- Parallel solving is not yet implemented.

## 39.4 Keywords

Solver `solver-id`

Export Lagrange Multiplier `Logical`

If the multiplier has some physical meaning, you can save it to result file and to post file. This feature has certain drawbacks, check subsection Limitations. Default is `False`.

Lagrange Multiplier Name `String`

The name you want to call the exported multipliers. This keyword has no meaning if the previous keyword is set to `False`. Default name is `LagrangeMultiplier`.

## Bibliography

- [1] V. Girault and P.A. Raviart. *Finite element methods for Navier-Stokes equations*. Springer-Verlag, New York, Berlin, Heidelberg, 1986.

## Model 40

# Outlet Boundary Condition for Arterial Flow Simulations

**Module name:** ArteryOutlet

**Module subroutines:** OutletCompute, OutletInit, OutletPres, OutletdX, OutletdY

**Module authors:** Esko Järvinen, Mikko Lyly, Peter Råback

**Document authors:** Esko Järvinen

**Document created:** April 28th 2006

**Document edited:** April 28th 2006

### 40.1 Introduction

Arterial elasticity is a fundamental determinant of blood flow dynamics in arteries, such as the aorta and its daughter vessel, that face the largest displacements and which takes care of the cushioning of the stroke volume. Simulation of such a phenomenon requires simultaneous solving of the equations governing both the fluid flow and wall elasticity. To be able to perform accurate fluid-structure interaction (FSI) simulations, only a segment of the circulatory system can be studied at a time. For these artificially truncated segments, which are naturally unbounded domains and in interaction with the rest of the circulation domain, one should construct in the numerical models boundary conditions which do not exhibit any unphysical behaviour, which operates transparently, and are also capable to transport a sufficient amount of information over the boundary.

A natural boundary condition at the outlet of a numerical FSI flow model of an artery is not a proper choice because it does not exhibit enough correct physiological behavior of the flow, and from the point of view of numerical approximation, it causes non-physiological reflections of the wave at the boundary. If measured data of both the pressure (or velocity) and the wall displacement at the outlet boundary are not available, the only way to get the outlet boundary of a higher order, 2D or 3D model sufficiently specified is to combine the model with some lower order model, such as a 1D or lumped model.

In order to get the outlet of the arterial FSI model to behave transparently in such cases when only forward travelling waves are considered, a simple characteristic equation of the of the one dimensional FSI model can be combined with the higher order model.

### 40.2 Theory

The conservation equations for a flow in an elastic artery in one dimension may be expressed as

$$\begin{cases} \frac{\partial A}{\partial t} + \frac{\partial Q}{\partial x} = 0 \\ \frac{\partial Q}{\partial t} + \frac{\partial}{\partial x} \left( \frac{Q^2}{A} \right) + \frac{A}{\rho} \frac{\partial p}{\partial x} = 0, \end{cases} \quad (40.1)$$

where  $Q$  is the volume flow,  $A$  the cross section area of the artery,  $p$  is the pressure and  $x$  is the axial coordinate [3]. In order to get the system (40.1) close, an equation relating the area  $A$  to the pressure  $p = p(A)$  is derived applying the theory of thin shell structures. Assuming a cylindrical shell, and neglecting the rotation on the shell cut plane, and the movements of the structure in the axial and circumferential directions, as well as applying the Kirchhoff-Love assumption, the energy balance equations is reduced to

$$\frac{E h^3}{12(1-\nu^2)} d_R^{(4)} + \frac{E h}{(1-\nu^2)} \frac{1}{R_m^2} d_R = p, \quad (40.2)$$

where  $R_m$  is the radius to the midplane of the wall,  $E$ ,  $\nu$  and  $d_R$  are the Youngs modulus, the Poisson ratio and the radial displacement of wall, respectively. Assuming that the first term on the left side in the equation (40.2) is much smaller than the second term, we can give the pressure-area relation in the form

$$p = p_{ext} + \beta(\sqrt{A} - \sqrt{A_0}), \quad \beta = \frac{\sqrt{\pi} h E}{(1-\nu^2) A_0}. \quad (40.3)$$

The pressure is scaled to be equal to external pressure  $p_{ext}$  with corresponding reference artery cross sections area  $A_0$ .

The equations (40.1) and (40.3) form a closed system for the simulations of flow in an elastic tubes. The equations may be written in conservative form which is strictly hyperbolic with two distinct real eigenvalues  $\lambda_{1,2} = \bar{u} \pm c$ , where  $\bar{u} = Q/A$  is the average axial velocity,  $c = \sqrt{(A/\rho_f)(\partial p/\partial A)} = \sqrt{\beta\sqrt{A}/(2\rho_f)}$  is the speed of sound, and  $\rho_f$  is the density of blood. The system can be further decomposed into a set of the equations for the characteristic variables  $W_i$ , which are the components of the vector  $W = T^{-1}U$  ( $\frac{\partial W}{\partial t} = T^{-1}$ ),  $U = [A, Q]^T$  [2]. These equations are

$$\frac{\partial W_i}{\partial t} + \lambda_i \frac{\partial W_i}{\partial x} = 0, \quad (40.4)$$

and the characteristic variables are

$$W_{1,2} = \frac{Q}{A} \pm 2\sqrt{\frac{2}{\rho_f} + \beta\sqrt{A}}.$$

When considering a pulse propagation in a straight, infinitely long homogeneous conduit, without any bifurcations or other objects which might cause reflections of the pulse, i.e. any backward travelling waves does not exists, the computations can be done using only the first of equations in (40.4), i.e.

$$\frac{\partial W_1(U)}{\partial t} + \lambda_1(U) \frac{\partial W_1(U)}{\partial x} = 0.$$

This equation is solved in this Elmer outlet boundary condition for arterial flow simulations solver. The connection of the one dimensional model to the test models at the their outlets is done applying the following coupling [1]

$$\begin{cases} dR^- = dR^+ \\ \sigma^- = p^+ \\ W_1 = g_1(A^-, Q^-, p^-), \end{cases}$$

where  $dR$  and  $\sigma$  are radial displacement of the artery wall and fluid traction, respectively. The superscript '−' denotes the values in the higher order models, and superscript '+' to the values in the 1D model.

### 40.3 Keywords

#### Keywords of FlowSolve

Initial Condition `ic id`

For making the initial guess for the characteristic variable  $W_1$

```
Wnodal Variable Coordinate
      Real Procedure "ArteryOutlet" "OutletInit"
```

Material mat id  
Material properties for the one dimensional section.

```
Density Real
      Density of blood
Artery Wall Youngs Modulus Real
      Young's modulus of the artery
Artery Radius Real
      Radius of the artery to the midplane of the artery wall
Artery Wall Thickness Real
      Wall thickness of the artery
Artery Poisson Ratio Real
      Poisson ration of the artery
```

Solver solver id  
Keywords for the one dimensional solver. Note that all the keywords related to linear solver (starting with Linear System) may be used in this solver as well. They are defined elsewhere.

```
Equation String [Artery Outlet Solver]

Variable [Wnodal]
      The variable which is solved
Variable DOFs [1]

Procedure File "ArteryOutlet" "OutletCompute"
      The name of the file and the subroutine
```

Equation eq id  
The equation section is used to define a set of equations for a body or set of bodies

```
Artery Outlet Solver Logical [True]
      If set True, the solver is used. The name of the solver must match with the name in the Solver
      section
```

Boundary Condition boundary id  
The pressure of the given coordinate direction i at the artery outlet of the higher order model is set to correspond the value given by the 1D model.

```
Pressure i Variable Time
      Real Procedure "ArteryOutlet" "OutletPres"
```

The diameter of the artery in the appropriate direction at the outlet of the higher order model is set to correspond the value given by the outlet boundary condition solver. The subroutines OutletdX and OutletdY are located in the module ArteryOutlet

```
Displacement i Variable Time
      Real Procedure "./ArteryOutlet" "OutletdX"
```

This is the inlet boundary of the one dimensional section which is coupled with both, the fluid and the solid outlet boundary of the higher order model

```
Fluid Coupling With Boundary Integer
Structure Coupling With Boundary Integer
```

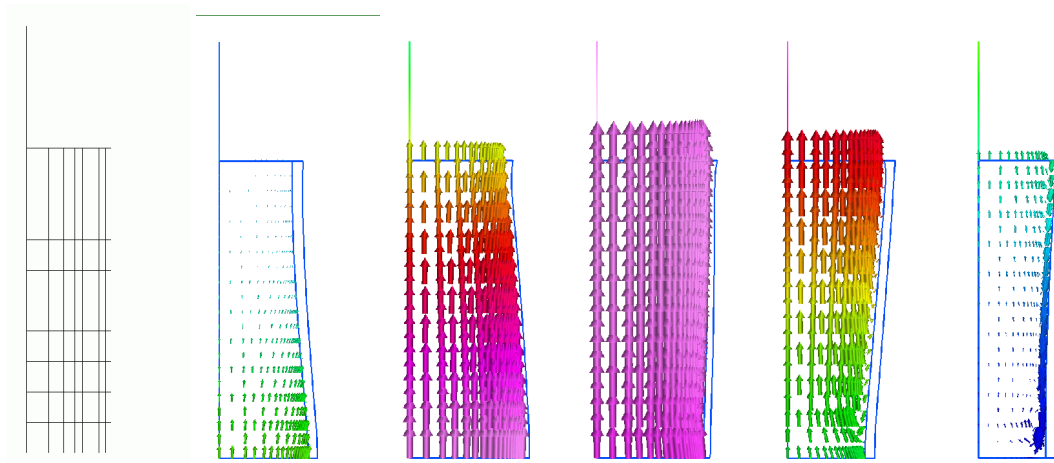


Figure 40.1: An example of the model results: pressure pulse propagation in a 2D axisymmetric model combined with an 1D model.

## Bibliography

- [1] L. Formaggia, J.F. Gerbeau, F. Nobile, and A. Quarteroni. Numerical treatment of defective boundary conditions for the navier-stokes equations. *SIAM J. Numer. Anal.*, 40:376–401, 2002.
- [2] E. Godlewski and P.-A. Raviart. *Numerical Approximation of Hyperbolic Systems of Conservation Laws*. Springer, 1996.
- [3] T. J. R. Hughes and J. Lubliner. On the one-dimensional theory of blood flow in the large vessels. *Mathematical Biosciences*, 19:161–170, 1973.



# Model 41

## Streamline Computation

**Module name:** StreamSolver

**Module subroutines:** StreamSolver

**Module authors:** Mika Juntunen, Peter Råback

**Document authors:** Mika Juntunen, Peter Råback

**Document created:** 30.7.2003

**Document edited:** 1.7.2011

### 41.1 Introduction

Streamline is a line in flow whose tangent is parallel to velocity field  $\vec{u}$  of the flow in every point  $\vec{x}$ . It should be noted that the path of material is generally not the same as streamlines. There is also third set of closely related lines, namely streak lines. On certain streak line lie all those flow elements that at some earlier instant passed through certain point in domain. Of course, the streak lines are generally different than streamlines but when the flow is steady all three set of lines coincide.

Streamlines are mainly used in providing a picture of the flow field. Drawing streamlines so that neighbouring streamlines differ by the same amount, gives a picture where direction and magnitude change of flow are clearly prescribed.

### 41.2 Theory

We are restricted here to the incompressible, steady flow in 2D geometry. The geometry may be 3D, but it must effectively be 2D as in axis symmetric geometry.

In 2D cartesian geometry stream function  $\psi$  is defined

$$u = \frac{\partial \psi}{\partial y}, \quad v = -\frac{\partial \psi}{\partial x}. \quad (41.1)$$

Here the geometry is  $(x, y)$  and the corresponding flow is  $\vec{u} = (u, v)$ . Let  $\Omega$  be the domain of the flow and  $\vec{v}$  a test function for the flow. Definition (41.1) leads to finite element approximation

$$\int_{\Omega} \nabla \psi \cdot \vec{v} \, d\Omega = \int_{\Omega} \vec{u}^{\perp} \cdot \vec{v} \, d\Omega \quad (41.2)$$

In axis symmetric geometry the mass conservation calculated in a different way. This leads to following definition for stream function.

$$u = \frac{1}{r} \frac{\partial \psi}{\partial r}, \quad v = -\frac{1}{r} \frac{\partial \psi}{\partial z} \quad (41.3)$$

where the cylindrical coordinates are  $(z, r, \phi)$ , velocity components are  $(u, v, w)$  and axis of symmetry is  $z$  i.e.  $r = 0$ . This function is sometimes called the *Stokes stream function* and it is not as informative as the

stream function in cartesian case. Of course the finite element approximation is a bit different.

$$\int_{\Omega} \nabla \psi \cdot \vec{v} \, d\Omega = \int_{\Omega} \vec{u}^{\perp} \cdot \vec{v} \, d\Omega \quad (41.4)$$

Here the  $\phi$  component of the flow is excluded.

From definitions (41.1) and (41.3) it is apparent that stream function is constant along the streamlines. So drawing the contours of stream function gives the streamlines.

Sometimes setting the Dirichlet node does results to local distortion of the streamline function. To circumvent this there is an alternative way to fix the level of the streamline. There a implicit penalty  $c\psi$  is added to the equation which effectively defines a finite level for the streamfunction. Small values of  $c$  are to be favored in order not to distort the streamline field. Using this penalty method the magnitude of the streamline may be quite large but after scaling the values should be rather independent on the value of  $c$ .

### 41.3 Limitations

Some limitations of the current implementation:

- The flow field is asumed to be incompressible.
- There is no dependency on time. Solver can be used in transient cases, but it only produces the streamlines of the current flow field as if it was steady.
- Only 2D cartesian and axis symetric coordinate systems are implemented.
- Solver gets the velocity field from user defined variable. In cartesian case it assumes that first degree of freedom is the  $x$ -component and the second is the  $y$ -component of the velocity. In axis symmetric case it assumes that the first degree of freedom is the  $r$ -component and the second is the  $z$ -component of the velocity field.
- User can define the node whose value is first set to zero. This *shouldn't* have affect on results if the normal stream function is used in cartesian coordinates and Stokes stream function in axis symmetric coordinates. However, if used stream function is forced to something else, the position of the first node usually has a large effect on results. This is because the mass conservation is calculated differently.

### 41.4 Keywords

Simulation

Coordinate System String

The coordinate system should be set to be one of the following options: Cartesian 2D or Axisymmetric.

Solver solver-id

All the keywords beginning Linear System can be used. They are explained elsewhere.

Equation String

The name you want to give to the solver, for example StreamSolver.

Procedure File "StreamSolver" "StreamSolver"

The name of the file and subroutine.

Variable String

The name you want to call the solution, for example StreamFunction.

Variable DOFs Integer 1

The degree of freedom of the variable. Stream function is scalar so this must be set to 1.

Stream Function Velocity Variable `String`

The name of the velocity field variable. FlowSolvers solution is called `Flow Solution` and this is also the default value.

Stream Function First Node `Integer`

Number of the node that is set to zero. If given, non-positive values are set to 1 and too large values are set to largest possible i.e. 'the last node'. If not given, then other means are assumed to be used for setting the level.

Stream Function Penalty `Real`

When the level of the streamline is defined by a penalty formulation then this keyword is used to define the penalty factor  $c$ . Default is zero.

Stream Function Shifting `Logical`

Shift the smallest value to zero. Default is `True`.

Stream Function Scaling `Logical`

Scale largest absolut value to 1. Default is `False`.

Stokes Stream Function `Logical`

This keyword forces the stream function type regardless of the coordinate system. If the coordinate system is axis symmetric, then the default is `True`, else the default is `False`.

## 41.5 Example

This example computes the streamlines from a 2D incompressible flow field assuming the default name for flow field

Solver 4

```
Exec Solver = after all
Equation = "streamlines"
Procedure = "StreamSolver" "StreamSolver"
Variable = String Stream

Linear System Solver = "Iterative"
Linear System Iterative Method = "cg"
Linear System Preconditioning = ILU0
Linear System Residual Output = 10
Linear System Max Iterations = Integer 500
Linear System Convergence Tolerance = 1.0e-10
Linear System Abort Not Converged = False
```

End

## Model 42

# Flux Computation

**Module name:** FluxSolver

**Module subroutines:** FluxSolver

**Module authors:** Juha Ruokolainen, Peter Råback

**Document authors:** Peter Råback

**Document edited:** 21.6.2007

### 42.1 Introduction

This module is used to calculate the fluxes resulting usually from poisson kind of equations. These include, for example, the heat equation, the electrostatic equation, and the pressure equation for Darcy's flow. There are also flux computation subroutines that are built in the solvers but this provides a generic approach that should be easy to combine with most solvers.

### 42.2 Theory

Given a potential  $\phi$  it is often interesting to know its gradient or the resulting flux. The gradient may be computed from  $\nabla\phi$ . The flux resulting from a potential field is assumed to be proportional to the gradient. The proportionality coefficient  $c$  may be conductivity, permeability, diffusivity etc. depending on the application field. It may be a scalar or a tensor of second kind. The flux may now be expressed as

$$\vec{q} = -c\nabla\phi. \quad (42.1)$$

For heat equation the potential would this be temperature and the conductivity would be the heat conductivity. The magnitude of a flux (or gradient) may be defined as

$$|q| = |\vec{q} \cdot \vec{q}| = |c\nabla\phi \cdot c\nabla\phi| \quad (42.2)$$

The computation of magnitude may be done before or after the numerical discretization giving result to slightly different results.

### 42.3 Implementation issues

The flux may be computed in many ways. Often for visualization purposes it suffices to take some nodal average of the element-wise computed fluxes. The most consistent method for flux computation is, however, using the finite element method to solve the equation (45.1). The Galerkin method creates a diagonally dominated matrix equation that may be computed easily with iterative methods even with poor preconditioners.

The flux computation may be done component-wise so that for each component  $q_i$ , where  $i = 1 \dots \text{dim}$ , is solved separately. This saves a significant amount of memory even though it slightly complicates the

implementation. In the solver it is also possible to choose just one component as could be sometimes desirable.

The main limitation of the current version is that it does not take into account any boundary conditions. Therefore if there is a internal boundary over which the flux is not continuous the calculated value does not make sense.

## 42.4 Keywords

Solver `solver id`

Equation `String Flux Solver`

Procedure `File "FluxSolver" "FluxSolver"`

Discontinuous Galerkin `Logical`

For discontinuous fields the standard Galerkin approximation enforces continuity which may be unphysical. As a remedy for this the user can enforce Discontinuous Galerkin (DG) formulation. Then the result may be discontinuous, and may even be visualized as such if the postprocessing format supports it.

Average Within Materials `Logical`

This keyword enforces continuity within the same material in the DG discretization using the penalty terms of the DG formulation.

Calculate Flux `Logical`

This flag controls the computation of fluxes. By default is `False` but its turned `True` if no other flag is not.

Calculate Flux Abs `Logical`

In conjunction with flux computation this flag may be used to compute the absolute value of the flux vector. It requires that the previous flag is active.

Calculate Flux Magnitude `Logical`

This flag computed the magnitude of the vector field. Basically it is the same in continuous level as the previous but this requires less memory and solver the matrix equation only once. The downside is that even negative values may be introduced.

Calculate Grad `Logical`

This flag turns on gradient computation. The default is `False`.

Calculate Grad Abs `Logical`

In conjunction with gradient computation this flag may be used to compute the absolute value of the flux vector. It requires that the previous flag is active.

Calculate Grad Magnitude `Logical`

This flag computed the magnitude of the vector field. Basically it is the same in continuous level as the previous but this requires less memory and solver the matrix equation only once. The downside is that even negative values may be introduced.

Enforce Positive Magnitude `Logical`

If this is active then the negative values of the computed magnitude fields are a posteriori set to zero.

Target Variable `String "Temperature"`

This gives the name of the potential variable used to compute the gradient. By default the variable is `Temperature`.

Flux Coefficient `String "Heat Conductivity"`

This gives the name of the potential variable used to compute the gradient. By default the coefficient is `Heat Conductivity`.

The solver is easily solved even without preconditioning. For example, the following linear system control may be applied.

```
Linear System Solver    "Iterative"  
Linear System Iterative Method  "BiCGStab"  
Linear System Preconditioning  None  
Linear System Max Iterations  500  
Linear System Convergence Tolerance  1.0e-10
```

## 42.5 Example

This example computes the diffusive heat flux in the whole domain using after the whole solution has been performed.

```
Solver 3  
  Exec Solver = after all  
  Equation = "flux compute"  
  Procedure = "FluxSolver" "FluxSolver"  
  Calculate Flux = Logical True  
  Flux Variable = String Temperature  
  Flux Coefficient = String "Heat Conductivity"  
  
  Linear System Solver = "Iterative"  
  Linear System Iterative Method = "cg"  
  Linear System Preconditioning = ILU0  
  Linear System Residual Output = 10  
  Linear System Max Iterations = Integer 500  
  Linear System Convergence Tolerance = 1.0e-10  
End
```

## Model 43

# Vorticity Computation

**Module name:** VorticitySolver  
**Module subroutines:** VorticitySolver  
**Module authors:** Peter Råback  
**Document authors:** Peter Råback  
**Document edited:** 14.2.2008

### 43.1 Introduction

This module is used to calculate the vorticity of vector fields. Vorticity may be of interest mainly in the post-processing of flow fields or electromagnetic fields. The default name for the vorticity is `Curl varname`.

### 43.2 Theory

The vorticity  $\vec{w}$  of a vector field  $\vec{v}$  is obtained simply from the curl of the field,

$$\vec{w} = \nabla \times \vec{v}. \quad (43.1)$$

Component-wise the equations for the vorticity read

$$w_x = \frac{\partial v_z}{\partial y} - \frac{\partial v_y}{\partial z} \quad (43.2)$$

$$w_y = \frac{\partial v_x}{\partial z} - \frac{\partial v_z}{\partial x} \quad (43.3)$$

$$w_z = \frac{\partial v_y}{\partial x} - \frac{\partial v_x}{\partial y}. \quad (43.4)$$

Thus, all three components exist only in 3D while in 2D and axisymmetric cases only the  $z$ -component is present

The most consistent method for computing the vorticity in conjunction with the finite elements is to solve the equations (43.4) using the Galerkin method. The resulting matrix is diagonally dominated and may be computed easily with iterative methods even with poor preconditioners. In 3D the vorticity computation may be done component-wise so that each component  $w_i$ , where  $i = 1, 2, 3$ , is solved separately. This saves some memory and may also save in the overall time consumption. If only one component is desired in the 3D computations then the  $z$ -component is computed.

### 43.3 Keywords

Solver `solver id`

```
Equation String Vorticity Solver
```

```
Procedure File "VorticitySolver" "VorticitySolver"
```

```
Target Variable String "Velocity"
```

This gives the name of the vector variable used to compute the vorticity. By default the variable is Velocity.

```
Constant Bulk Matrix Logical
```

This keyword may be used to activate the saving of the stiffness matrix if the same solver is called repeatedly. The stiffness matrix depends only on geometric information and is hence the same if the geometry is unaltered.

The solver is easily solved even without preconditioning. For example, the following linear system control may be applied.

```
Linear System Solver "Iterative"
```

```
Linear System Iterative Method "cg"
```

```
Linear System Preconditioning None
```

```
Linear System Max Iterations 500
```

```
Linear System Convergence Tolerance 1.0e-10
```

## 43.4 Example

This example computes the vorticity field after each timestep. Some resources are saved by reusing the same bulk matrix.

```
Solver 5
```

```
Exec Solver = after timestep
```

```
Equation = "vorticity"
```

```
Procedure = "VorticitySolver" "VorticitySolver"
```

```
Constant Bulk Matrix = True
```

```
Linear System Solver = "Iterative"
```

```
Linear System Iterative Method = "cg"
```

```
Linear System Preconditioning = ILU0
```

```
Linear System Residual Output = 10
```

```
Linear System Max Iterations = Integer 500
```

```
Linear System Convergence Tolerance = 1.0e-10
```

```
Linear System Abort Not Converged = False
```

```
End
```



# Model 44

## Divergence Computation

**Module name:** DivergenceSolver  
**Module subroutines:** DivergenceSolver  
**Module authors:** Peter Råback  
**Document authors:** Peter Råback  
**Document edited:** 20.4.2010

### 44.1 Introduction

This module is used to calculate the divergence of vector fields. Divergence may be of interest mainly in the postprocessing to check how well incompressibility constraints are honored.

### 44.2 Theory

The divergence  $d$  of a vector field  $\vec{v}$  is obtained simply from

$$d = \nabla \cdot \vec{v}. \quad (44.1)$$

The most consistent method for computing the divergence in conjunction with the finite elements is to solve the equation (44.1) using the Galerkin method. The resulting matrix is diagonally dominated and may be computed easily with iterative methods even with poor preconditioners.

### 44.3 Keywords

`Solver` `solver id`

`Equation` `String` `Divergence Solver`

`Procedure` `File` `"DivergenceSolver"` `"DivergenceSolver"`

`Target Variable` `String` `"Velocity"`

This gives the name of the vector variable used to compute the divergence. By default the variable is `Velocity`.

`Constant Bulk Matrix` `Logical`

This keyword may be used to activate the saving of the stiffness matrix if the same solver is called repeatedly. The stiffness matrix depends only on geometric information and is hence the same if the geometry is unaltered.

The following keywords are not usually needed as they are set by the initialization procedure of the solver.

Variable String

By default the variable is obtained from the divergence variable by adding a prefix `Div` to the field name. Naturally the name of the resulting field may also be given as desired.

The solver is easily solved even without preconditioning. For example, the following linear system control may be applied.

```
Linear System Solver "Iterative"
```

```
Linear System Iterative Method "cg"
```

```
Linear System Preconditioning None
```

```
Linear System Max Iterations 500
```

```
Linear System Convergence Tolerance 1.0e-10
```

## Model 45

# Scalar Potential Resulting to a Given Flux

**Module name:** ScalarPotentialSolver  
**Module subroutines:** ScalarPotentialSolver  
**Module authors:** Peter Råback  
**Document authors:** Peter Råback  
**Document edited:** 15.2.2008

### 45.1 Introduction

This module is an auxiliary solver that may be used to compute the scalar potential that results to a given flux. The flux is assumed to be an vector field resulting from some computation. This solver is the dual of the `FluxSolver`. Computing first the flux of a given potential and thereafter resolving for the potential that creates the flux should give approximately the original potential.

### 45.2 Theory

The flux resulting from a potential field is assumed to be proportional to the gradient of the field,  $\phi$ . The proportionality factor is here called conductivity,  $c$ . The flux may therefore be expressed as

$$q = -c\nabla\phi. \quad (45.1)$$

For heat equation the potential would this be temperature and the conductivity would be the heat conductivity.

This solver solves the equation in the reverse form, i.e. given the flux solver for the potential. In the weak formulation this is solved so that the test function is the gradient of the shape function. This results to the standard discretization of the Poisson equation.

The potential is not defined uniquely unless the level is fixed at least at one point. Therefore the user should set a Dirichlet condition at least at one node.

### 45.3 Keywords

```
Solver    solver id
          Equation  String ScalarPotentialSolver
          Procedure  File "ScalarPotentialSolver" "ScalarPotentialSolver"
          Variable  String "Scalar Potential"
                The desired name of the resulting scalar field.
```

Flux Variable `String`

This gives the name of the flux variable used to compute the source term. Note that this must be the name of a vector field such as `Velocity`.

Flux Coefficient `String`

This gives the name of the coefficient used in the computation of the flux. For example, in thermal analysis it would be `Heat Conductivity`. If a non-existing material parameter is given the coefficient will be assumed to be one, i.e.  $c = 1$ .

The equation is a Poisson type of equation and defaults for it are set to be `cg+ILU0`. If these do not suffice, other linear system options should be defined.

Boundary Condition `bc id`

Scalar Potential `Real`

The defined field variable must be set to be zero at least at one point.

Target Nodes `Integer`

The user may also define a target node on-the-fly at which the condition is set.

# Model 46

## Fluidic Force

**Module name:** FluidicForce

**Module subroutines:** ForceCompute

**Module authors:** Juha Ruokolainen, Antti Pursula

**Document authors:** Antti Pursula

**Document edited:** Feb 28th 2005

### 46.1 Introduction

This module is used to calculate the force that a fluid flow induces on a surface. The fluidic force can be divided into two main components: force due to pressure and viscous drag force. The fluid can be compressible or incompressible and also non-Newtonian with the same limitations than there are in the Elmer Navier-Stokes Equation solver. The force calculation is based on a flow solution (velocity components and pressure) which has to present when calling the procedure. Also the torque with respect to a given point can be requested.

### 46.2 Theory

The force due to fluid is calculated as a product of the stress tensor and normal vector integrated over the surface

$$\vec{F} = \int_S \bar{\bar{\sigma}} \cdot \vec{n} dS. \quad (46.1)$$

The stress tensor is

$$\bar{\bar{\sigma}} = 2\mu\bar{\bar{\varepsilon}} - \frac{2}{3}\mu(\nabla \cdot \vec{u})\bar{\bar{I}} - p\bar{\bar{I}}, \quad (46.2)$$

where  $\mu$  is the viscosity,  $\vec{u}$  is the velocity,  $p$  is the pressure,  $\bar{\bar{I}}$  the unit tensor and  $\bar{\bar{\varepsilon}}$  the linearized strain rate tensor, i.e.

$$\varepsilon_{ij} = \frac{1}{2} \left( \frac{\partial u_i}{\partial x_j} + \frac{\partial u_j}{\partial x_i} \right). \quad (46.3)$$

The torque about a point  $\vec{a}$  is given by

$$\vec{\tau} = (\vec{r} - \vec{a}) \times \vec{F}(\vec{r}), \quad (46.4)$$

where  $\vec{r}$  is the position vector.

### 46.3 Additional output

There is also a feature for saving the tangential component of the surface force i.e. the shear stress element-wise on the boundaries. The shear stress output is written on disk in a file which contains three columns: 1) the value of the shear stress, 2 and 3) the corresponding  $x$  and  $y$  coordinates. The shear stress is saved on all boundaries where fluidic force computation is requested. This feature is implemented only for 1D-boundaries of 2D-geometries.

### 46.4 Keywords

`Solver solver id`

`Equation String Fluidic Force`

`Procedure File "FluidicForce" "ForceCompute"`

`Calculate Viscous Force Logical [True]`

Setting this flag to false disables the viscous drag force, and only the surface integral of pressure is calculated.

`Sum Forces Logical [False]`

By default the solver calculates the fluidic force by boundaries. Setting this flag to True applies summing of each individual boundary force in to a resultant force which is the only force vector in output.

`Shear Stress Output Logical [False]`

Setting this flag to True activates writing shear stress values on disk.

`Shear Stress Output File String [shearstress.dat]`

Defines the name of the shear stress file.

`Velocity Field Name String`

The name of the velocity field variable. This keyword may be necessary if some other flow solver than the built-in Navier-Stokes solver of Elmer is used. Normally this keyword should be omitted.

`Material mat id`

`Viscosity Real`

`Boundary Condition bc id`

`Calculate Fluidic Force Logical [True]`

The fluidic force is calculated for the surfaces where this flag is set to true.

`Moment About(dim) Real`

Coordinates for the point on which the torque is returned.

## Model 47

# Electrostatic force

**Module name:** ElectricForce

**Module subroutines:** StatElecForce

**Module authors:** Antti Pursula

**Document authors:** Antti Pursula

**Document edited:** February 7th 2003

### 47.1 Introduction

This solver calculates the electrostatic force acting on a surface. The calculation is based on an electrostatic potential which can be solved by the electrostatic solver (see Model 12 of this Manual).

### 47.2 Theory

The force is calculated by integrating the electrostatic Maxwell stress tensor [1] over the specified surface. Using the stress tensor  $\bar{\bar{T}}$  the total force on the surface  $S$  can be expressed as

$$\vec{F} = \int_S \bar{\bar{T}} \cdot d\vec{S}. \quad (47.1)$$

The components of the Maxwell stress tensor for linear medium are

$$T_{ij} = -D_i E_j + \frac{1}{2} \delta_{ij} \vec{D} \cdot \vec{E}, \quad (47.2)$$

where electric field  $\vec{E}$  and electric displacement field  $\vec{D}$  are obtained from the electric potential  $\Phi$

$$\vec{E} = -\nabla \Phi, \quad (47.3)$$

and

$$\vec{D} = -\varepsilon_0 \varepsilon_r \nabla \Phi, \quad (47.4)$$

where  $\varepsilon_0$  is the permittivity of vacuum and  $\varepsilon_r$  is the relative permittivity of the material, which can be a tensor.

### 47.3 Keywords

Constants

Permittivity Of Vacuum Real [8.8542e-12]

Solver solver id

Equation String Electric Force

The name of the equation. Not necessary.

Procedure File "ElectricForce" "StatElecForce"

Exec Solver String After Timestep

Often it is not necessary to calculate force until solution is converged.

Material mat id

Relative Permittivity Real

Boundary Condition bc id

Calculate Electric Force Logical True

This keyword marks the boundaries where force is calculated.

## Bibliography

[1] J. Vanderlinde. *Classical electromagnetic theory*. John Wiley & Sons, 1993.



# Model 48

## Saving scalar values to file

**Module name:** SaveData

**Module subroutines:** SaveScalars

**Subroutine authors:** Peter Riðback

**Document authors:** Peter Riðback

**Document created:** Oct 3rd 2002

**Document updated:** January 8th 2008

### 48.1 Introduction

This subroutine may be used to compute derived quantities and saving scalar values to external file. The results are easily then utilized by MatLab, Excel or any other program that can read ASCII data. In addition to the number values also an additional file with the suffix `_name` is saved. It tells what variables are at each column.

### 48.2 Theory

The equations and algorithms needed for the computation of scalar values are relatively simple. Here some of them are introduced.

When saving statistical information there are two possibilities. We may use normal number statistics where each node is given an equal weight. Then, for example the mean becomes,

$$\langle f \rangle = \frac{\sum_{i=1}^n f_i}{n}. \quad (48.1)$$

The other possibility is to treat the variable as a continuous function and compute the statistical values as averages over the domain. Now the mean is

$$\langle f \rangle = \frac{\int f d\Omega}{\int d\Omega}. \quad (48.2)$$

In addition to the mean we may compute the mean deviation,  $\langle |f - \langle f \rangle| \rangle$ , and the variance  $\delta f = \sqrt{\langle f^2 \rangle - \langle f \rangle^2}$ .

It is possible to compute energy type of lumped quantities by integrating over the domain. The energy of the field  $f$  resulting from a diffusion equation is

$$E_{diff} = \frac{1}{2} \int_{\Omega} \nabla f \cdot c \nabla f d\Omega, \quad (48.3)$$

where  $c$  may be a tensor or a scalar. Kinetic energy related to convection is of type

$$E_{con} = \frac{1}{2} \int_{\Omega} c \vec{v} \cdot \vec{v} d\Omega, \quad (48.4)$$

and potential type of energy

$$E_{pot} = \int_{\Omega} c f d\Omega. \quad (48.5)$$

Sometimes it may be interesting to compute the fluxes through surfaces. The values may be used in evaluating the accuracy of the results – what goes in should in steady state also come out. There are two different fluxes that may be computed. For convective field the flux is of type

$$F_{con} = \int_{\Gamma} c \vec{v} \cdot \vec{n} d\Gamma, \quad (48.6)$$

where  $\vec{n}$  is the surface normal. Diffusive fluxes may be computed from

$$F_{diff} = \int_{\Gamma} c \nabla f \cdot \vec{n} d\Gamma, \quad (48.7)$$

where  $c$  may also be a tensor.

### 48.3 Implementation issues

There are many solvers that internally compute lumped quantities. By convention these are added to the list structure of the `Simulation` section in the following style

```
CALL ListAddConstReal( Model % Simulation, 'res: capacitance', Capacitance)
```

By default the solver looks through quantities starting with prefix `res:` and saves them to an external file. Also the user may create new quantities to be saved in similar manner.

### 48.4 Keywords

`Solver` `solver id`

`Procedure` `File` `"SaveData"` `"SaveScalars"`

`Filename` `String`

Name of the file where results are to be saved. Of no filename is given then the results will only be echoed on output.

`Output Directory` `String`

Name of the directory where results are to be saved, relative to the case directory. By default the results are saved in the case directory.

`Scalars Prefix` `String`

Save constants starting with this prefix. The default is `res:`.

`Variable i` `String`

The names of the variables to be saved. There can be up to 99 variables. In addition to field variables there are some special variables. The scalar variables. e.g. `Time`, are saved as is. There are also variables `CPU Time` and `CPU Memory` that may be used to save execution details.

`Target Variable i` `String`

This is an optional keyword that for each entry computed by the subroutine may give an alternative name that is placed as a proper variable in the model. This variable may then be used similarly to `time` in functional expressions. Note that if the operator creates several output values the numbering of this is not the same as that of `Variables`. So check the output file for correct entries when in doubt.

Mask Name *i* String

If the operator is such that it can use masks for the boundary then this keyword may be used to override the default mask name `Save Scalars`.

Save Points(*n*) Integer

Save the specified degrees of freedom in the *n* nodes specified.

Save Coordinates(*n*,DIM) Real

Save the degrees of freedom in the nodes nearest to the given *n* coordinates.

Exact Coordinates Logical

When this keyword is true the coordinates will be looked in an exact manner. Then the degrees of freedom are linear combinations of the node values of the element that the point belongs to.

Moving Mesh Logical

If this parameter is `True` the saved points will be defined every time the subroutine is visited. The default is `False`.

File Append Logical

If the results from consecutive rounds should be appended to the file this flag should be set to `True`. The default is `False`.

Show Norm Index Integer

The user may choose to output one value of the results as the norm of the solver in a similar output syntax as `ComputeChange` shows its norms. This is of course not a real norm but may be used in monitoring desired convergence measures in ElmerGUI, for example. By default no norm is shown.

Cost Function Index T

The user may also choose to save a desired value in the list structure with the name `Cost Function`. This may be utilized by the `FindOptimum` solver in optimization problems.

Parallel Append B

By default the output is written independently for each partition in parallel runs. Often it is, however, desirable to reduce the information into just one file. Then the data may be written just to one file. This is achieved by using the following operators in `MPI_ALLREDUCE`: `MPI_MAX`, `MPI_MIN`, `MPI_SUM`. These are not sufficient for all operators. By default the value of the 1st partition is written.

Save Eigenvalues Logical

Save the eigenvalues found in any of the variables.

Save Eigenfrequencies Logical

Save the frequencies computed from the eigenvalues found in any of the variables.

Operator *i* String

There are different operators that may be performed on all the given variables. These include operators working on the set of numbers, `max`, `min`, `max abs`, `min abs`, `mean`, `variance` and `deviation`. There are also a few operators that use statistics over the volume, `int mean` and `int variance`. The volume used by a given variable is obtained by operator `volume`. If a name for the coefficient, is given for the operator, the integral is taken over the coefficient. One can for example obtain the weight from a integral over `Density`.

There are also a number of similar operators that only operate on the boundary. These are invoked by `boundary sum`, `boundary dofs`, `boundary mean`, `boundary max`, `boundary min`, `boundary max abs`, `boundary min abs`, `area`, `boundary int`, and `boundary int mean`.

Three different energy type of quantities may be computed by domain integral operators `diffusive energy`, `convective energy`, `potential energy`. Finally, also boundary integrals are possible using operators `diffusive flux`, `convective flux`, `boundary int`, `boundary int mean` and `area`. These require that in the boundary conditions the active boundaries are defined. Also here there may be an optional coefficient.

Some operators do not work on the solution itself but use other info related to that. Operator `dofs` simply returns the length of the variable under study. Operator `norm` returns the last computed norm of the field variable, and operators `nonlinear change` and `steady state change` return the last computed convergence measures at the nonlinear and steady state levels. Operator `nonlin iter` returns the number of nonlinear iterations, while operators `nonlin converged` and `coupled converged` which tell whether or not the simulation has converged. Note that these operators most operate on the primary variable for which the matrix equation is solved for.

Operator `bounding box` returns the minimum and maximum coordinate value of each coordinate i.e. six values in 3D mesh.

Finally for parallel runs the operator `partitions` may be usefull in creating parallel scaling results in automated manner.

There is no upper bound to the number of operators or variables. If the variable is a vector the statistics is performed on its length.

Coefficient `i String`

Even though only limited number of operators are given almost any energy or flux kind of quantity may be computed since the coefficient  $c$  may be defined by the user. The idea is that the same data that is already used as a material parameter can be simple referred to by its name. The coefficient may be, `Heat Conductivity`, `Permittivity`, `Density`, for example. Usually the coefficient is the same that was used in computing the field variable under integration. For the `diffusive energy` and `diffusive flux` the coefficient may even be a matrix. This parameter is optional and the default is one.

Parallel Operator `i String`

Sometimes the default parallel reduction method is not the desired one. Therefore the user may define the parallel reduction method by this keyword. The alternatives are `min`, `max` and `sum`.

Polyline Coordinates `(n,DIM) Real`

This keyword may be used to create line segments that are defined by points  $x_1$ ,  $y_1$ ,  $x_2$ , and  $y_2$ . For each line different kinds of fluxes trough the elements may be computed. This makes it possible, for example, to check the mass flux even though no boundary has a priori been defined.

Boundary Condition `bc id`

Save Scalars `Logical`

The flag activates the computation of boundary-related information. The results are treated independently for each boundary. The keyword replaces the previously used `Flux Integrate`. Also if `Mask Name` is given this arbitrary string may be used instead.

## 48.5 Examples

In the following examples it is assumed that the `SaveScalars` solver gets the first free index.

### Range of solution

The following example shows how to deduce after each converged timestep the minimum and maximum values of temperature to an external file.

```
Solver 2
  Exec Solver = After Timestep
  Equation = SaveScalars
  Procedure = "SaveData" "SaveScalars"
  Filename = "temprange.dat"

  Variable 1 = Temperature
  Operator 1 = min
```

```
Operator 2 = max
Operator 3 = int mean
End
```

### Force resulting from flow solution

The following example shows how to compute the force resulting from the Navier-Stokes equation on the boundary 3. It is assumed that for the flow solver is set `Calculate Loads = True` and that the name of the solution vector is `Flow Solution`. Then the force acting on the boundary is obtained by summing up the nodal forces on the boundary.

```
Solver 2
  Exec Solver = After Timestep
  Equation = SaveScalars
  Procedure = "SaveData" "SaveScalars"
  Filename = "forces.dat"

  Variable 1 = Flow Solution Loads 1
  Operator 1 = boundary sum
  Variable 2 = Flow Solution Loads 2
  Operator 2 = boundary sum
End

Boundary Condition 3
  Name = no_slip
  ...
  Save Scalars = Logical True
End
```

### Benchmark information

The following example shows how benchmark information from the computation of some potential equation is gathered to one file. Different runs will append the results to the same file and in parallel runs the degrees of freedom, number of partitions and consumed cpu time will be automatically gathered.

```
Solver 3
  Exec Solver = After all
  Equation = SaveScalars
  Procedure = "SaveData" "SaveScalars"
  Filename = timing.dat
  File Append = Logical True
  Variable 1 = Potential
  Operator 1 = dofs
  Operator 2 = partitions
  Operator 3 = cpu time
  Parallel Reduce = Logical True
End
```

# Model 49

## Saving lines to file

**Module name:** SaveData

**Module subroutines:** SaveLine

**Subroutine authors:** Peter Råback, Ville Savolainen

**Document authors:** Peter Råback

**Document created:** 3.10.2002

**Document updated:** 4.4.2011

### 49.1 Introduction

The subroutine saves lines that pass through higher dimensional computational meshes. The data is saved in simple matrix format thereby allowing the easy postprocessing of data by MatLab, Excel or any other program that can read ASCII data. In addition to the number values also an additional file with the suffix `.name` is saved. It tells what variables are at each column.

### 49.2 Theory

One mildly theoretical problem in saving data comes from the fact that the data should be saved in lines that were not a priori defined. If there are relatively few points the dummy algorithm where each element is checked for including the node may be used. For the lines, however, this algorithm might become quite expensive as there may be many points that constitute the line and faster choices are needed.

Therefore we only look for intersections of element faces and the lines. Each element face is divided into triangles. The triangle has points  $\vec{e}_1$ ,  $\vec{e}_2$  and  $\vec{e}_3$ . The line is drawn between points  $\vec{r}_1$  and  $\vec{r}_2$ . Therefore the line goes through the point only if

$$\vec{r}_1 + a(\vec{r}_2 - \vec{r}_1) = \vec{e}_1 + b(\vec{e}_2 - \vec{e}_1) + c(\vec{e}_3 - \vec{e}_1) \quad (49.1)$$

has a solution for which  $0 \leq a, b, c \leq 1$ . This results to a matrix equation

$$\begin{pmatrix} r_{2x} - r_{1x} & e_{1x} - e_{2x} & e_{1x} - e_{3x} \\ r_{2y} - r_{1y} & e_{1y} - e_{2y} & e_{1y} - e_{3y} \\ r_{2z} - r_{1z} & e_{1z} - e_{2z} & e_{1z} - e_{3z} \end{pmatrix} \begin{pmatrix} a \\ b \\ c \end{pmatrix} = \begin{pmatrix} e_{1x} - r_{1x} \\ e_{1y} - r_{1y} \\ e_{1z} - r_{1z} \end{pmatrix} \quad (49.2)$$

which may be easily solved with standard methods linear algebra. Because the face element is a triangle there is an additional condition that  $b + c \leq 1$ .

### 49.3 Keywords

Solver `solver id`

```

Procedure File "SaveData" "SaveLine"
Filename String
    Name of the file where results are to be saved, the default is sides.dat.
Output Directory String
    Name of the directory where results are to be saved, relative to the case directory. By default the
    results are saved in the case directory.
File Append Logical
    If the results from consecutive rounds should be appended to the file this flag should be set to
    True. The default is False.
Save Axis Logical
    Save all the principal axis. Also keywords Save Axis i exist, where i=1,2,3 defines the axis.
Polyline Coordinates(n,DIM) Real
    Save the line consisting of line segments defined by two points ( $n = 2$ ). There can be more than
    one set of points ( $n = 2, 4, 6, \dots$ ) but as a line segment is defined by two points there must be
    an even number of points.
Save Isocurves Logical
    Saves isocurves defined on 2D meshes.
Isosurface Variable i String
    The variable which isocurve to save,  $i = 1, 2, \dots$ . This must be a scalar variable.
Isosurface Value i Real
    A constant value that defines the value of the isosurface variable at the isocurve to be saved. Note
    that for the same variable there may be several values, each with a different keyword.
Variable i String
    By default SaveLine saves all the active variables. However, it is possible to save only a spec-
    ified list of variables given by this keyword where  $i=1,2,3,\dots$ . This may be particularly useful
    if one wants to save a table of linear dependence, for example Temperature along  $x$ -direction, to
    be used as a boundary condition in consecutive Elmer runs with a different mesh.
Save Flux Logical
    Saves a flux resulting from a gradient of a field by the model  $h = -\kappa \partial T / \partial n$ . This may only be
    applied to existing boundaries, not lines defined by points.
Flux Variable String
    The name of the field variable (default  $T$  is Temperature).
Flux Coefficient String
    The diffusion constant (by default  $\kappa$  is Heat Conductivity)
Save Mask String
    a By default SaveLine saves only the values that are on boundary marked with Save Line flag.
    If the user wants several instances of the SaveLine subroutine, for saving different boundaries to
    different files, the mask name may be defined by this keyword. The correspondingly one should
    use the same flag in the Boundary Condition and Body section.
Boundary Condition bc id
    Save Line Logical
        The flag activates the saving of the boundary condition as a line. The subroutine tries to save
        the finite-element lines as a chain of points to enable nice preprocessing with MatLab or similar
        tools. The flux may only be saved on lines defined by boundary conditions.

```

## 49.4 Examples

In the following examples it is assumed that the 1st solver is the primary solver and the SaveLine solver gets index two.

The following example shows how to save a line that extends from point (0,0,0) to point (1,2,3) in 3D mesh after the whole simulation has ended.

```
Solver 2
  Exec Solver = After Simulation
  Equation = SaveLine
  Procedure = "SaveData" "SaveLine"
  Filename = "line.dat"
  Polyline coordinates(2,3) = 0.0 0.0 0.0 1.0 2.0 3.0
End
```



## Model 50

# Saving material parameters and boundary conditions

**Module name:** SaveData

**Module subroutines:** SaveMaterials, SaveBoundaryValues

**Module authors:** Thomas Zwinger

**Document authors:** Thomas Zwinger, Peter Råback

**Document created:** 3.10.2002

**Document updated:** 4.4.2011

### 50.1 Introduction

These subroutines creates fields from material parameter entries or boundary conditions that normally cannot accessed as a field, as they are expressions that is evaluated when needed. The `SaveMaterials` may be used to create additional field variables from the material parameters. A similar procedure `SaveBoundaryValues` stores parameters defined on boundaries as variables for the whole mesh. This can be of help if a boundary condition that is not directly accessible from the variables (like a normal component of a vector field) should be evaluated in the post-processing step.

### 50.2 Keywords

#### Keywords of subroutine `SaveMaterials`

Solver `solver id`

```
Procedure File "SaveData" "SaveMaterials"
```

```
Parameter i String
```

The user may choose a number of parameters ( $i=1, \dots, 99$ ) which will be save as variables. This may be particularly handy if one wants to visualize how the parameters depend on the position over the domain. Values in bodies with the assigned material list not containing the keyword of the parameter are set to zero by default.

#### Keywords of subroutine `SaveBoundaryValues`

Solver `solver id`

```
Procedure File "SaveData" "SaveBoundaryValues"
```

Variable String -nooutput dummyvar  
a dummy variable for the solver that does not show up

Variable DOFs Integer 1

Parameter i String

The user may choose a number of parameters ( $i=1,\dots,99$ ) which will be save as variables. These parameters will then be stored as variables with the values assigned as they were found on the specific boundary. Bulk values and values on boundaries with the parameter not being defined are set to zero by default.

Body Force Parameters Integer

The user may also save parameters given in body force section by giving the number of these parameters by this keyword. Note that the body force parameters must be first in the list followed by the material parameters. The default is zero.

# Model 51

## Result output in different formats

**Module name:** ResultOutputSolve

**Module subroutines:** ResultOutputSolver

**Module authors:** Erik Edelmann, Mikko Lyly, Peter Råback

**Document authors:** Peter Råback

**Document created:** 11.12.2006

**Document edited:** 3.8.2007

### 51.1 Introduction

This subroutine is intended for saving data in other than the native format of Elmer – ElmerPost. The reason for using another postprocessing tool might be that some feature is missing in ElmerPost, or that the user is more acquainted with some other visualization software. Currently supported formats include GiD, Gmsh, VTK legacy, XML coded VTK file bearing the suffix VTU and Open DX.

### 51.2 Keywords

Solver `solver id`

Equation `String "ResultOutput"`

The name of the equation. This is actually not much needed since there are no degrees of freedom associated with this solver.

Procedure `File "ResultOutputSolve" "ResultOutputSolver"`

The name of the file and subroutine.

Output File Name `File`

Specifies the name of the output file.

Output Format `String`

This keyword the output format of choice. The choices are `gid`, `gsmh`, `vtk`, `vtu`, and `dx`.

Gid Format `Logical`

Gmsh Format `Logical`

Vtk Format `Logical`

Vtu Format `Logical`

Dx Format `Logical`

The user may also use the above logical keywords to set which of the formats is saved. This has more flexibility in that there may be several formats that are saved simultaneously where the Output Format keyword may only be used to activate one solution type.

Binary Output Logical

For Vtu format (no other format) the data may also be written in binary format which is significantly more compact than the ascii format. Default is True.

Ascii Output Logical

As the default format for Vtu is binary this keyword is more natural for enforcing ascii format. The default is False.

Single Precision Logical

The floating numbers in Vtu format may be saved either in single (32 bits) or double (64 bits) precision. The single precision saves some disk space. Default is False.

Eigen Analysis Logical

For GiD and Gmsh output format activates the eigenmode writing, and in Vtu format makes the numbering of the files follow the eigenmodes. Vtu format will still save the eigenmodes without this keyword but this will be done in the same file just altering the name of the field.

Number Of EigenModes Integer

Maximum number of modes, when supported. Default is that all eigenmodes are saved.

Active EigenModes Integer

List of active eigenmodes to be saved. Supported only in the Vtu format. By default modes are saved in order (1,2,...).

The following keywords related only to the GiD, Vtu and Gsmh formats. In the other formats all available degrees of freedom are saved. Also in Vtu format all dofs are saved if none of the list is given.

Scalar Field i String

The scalar fields to be saved, for example Pressure. Note that the fields must be numbered continuously starting from one.

Vector Field i String

The vector fields to be saved, for example Velocity

Tensor Field i String

The tensor fields to be saved. The rank of tensor fields should be 3 in 2D and 6 in 3D.

Sometimes when the variables need to be explicitly listed it may be difficult to know what the actual available variables are. For this purpose there is the following keyword.

Show Variables Logical

Show all the different variables on output as a list. Default is False.

### 51.3 Example

This example saves the results of a computation in binary unstructured VTK XML format following the Output Intervals definition in the Simulation section. The variables to be saved are hand-selected.

Solver 3

Exec Solver = after saving

Equation = "result output"

Procedure = "ResultOutputSolve" "ResultOutputSolver"

Output File Name = "case"

Vtu Format = Logical True

Binary Output = Logical True ! binary format is the default

Single Precision = Logical True ! double precision is the default

! In the Vtu format all fields are saved if the user does not list them explicitly.

```
Scalar Field 1 = String Temperature
Scalar Field 2 = String Pressure
Vector Field 1 = String Velocity
End
```

## Model 52

# Parallel I/O using HDF5 library

**Module name:** XdmfWriter  
**Module subroutines:** XdmfWriter  
**Module authors:** Mikko Lyly  
**Document authors:** Mikko Lyly  
**Document created:** 11.02.2011  
**Document edited:** 20.02.2011

### 52.1 Introduction

This subroutine is intended for saving parallel results in Xdmf/HDF5 format. The advantages of the Xdmf/HDF5-format over the native parallel ep-format are the following:

- All results are stored in only two files (results.xmf and results.h5)
- The results are stored in a binary format with reduced storage requirements
- The results can be visualized on the fly during the solution

The result files written by XdmfWriter can be opened and visualized e.g. with Paraview.

At the moment, the module is available for the parallel version of Elmer only. Because of this, it has been isolated from the main build system. The source code for XdmfWriter can be found from the source tree in `misc/xdmf` and it should be compiled by the user as follows:

```
elmerf90 -I$HDF5/include -L$HDF5/lib -o XdmfWriter XdmfWriter.f90 -lhdf5_fortran -lhdf5
```

The environment variable `$HDF5` defines the installation directory for the HDF5-library.

### 52.2 Keywords

`Solver`   `solver id`

`Equation`   `String "Xdmf"`  
The name of the equation.

`Procedure`   `File "XdmfWriter" "XdmfWriter"`  
The name of the file and subroutine.

`Base File Name`   `String`  
Specifies the base file name of the output files. The default is `results`.

`Single Precision`   `Logical`  
This keyword specifies the output precision (4 byte single precision floating point numbers vs. 8 byte double precision floating point numbers). The default is `false`.

The following keywords define the scalar and vector fields to be saved:

```
Scalar Field i String
    The scalar fields to be saved, for example Pressure.
```

```
Vector Field i String
    The vector fields to be saved, for example Velocity.
```

The number *i* must be in the range 1...1000.

## 52.3 Example

The following SIF-block saves results in Xdmf/HDF5-format for the Navier-Stokes equations:

```
Solver 1
  Equation = String "Xdmf"
  Procedure = File "XdmfWriter" "XdmfWriter"
  Base File Name = String "MyResults"
  Single Precision = Logical True
  Scalar Field 1 = String "Pressure"
  Vector Field 1 = String "Velocity"
End
```

# Model 53

## Saving data on uniform cartesian grid

**Module name:** SaveGridData  
**Module subroutines:** SaveGridData  
**Module authors:** Peter Råback  
**Document authors:** Peter Råback  
**Document created:** 2.2.2011  
**Document edited:** 20.7.2011

### 53.1 Introduction

This subroutine is intended for saving data in a uniform grid. One possible use of the feature is to combine a boundary representation and a glyph representation (velocity vectors) in the same visualization. This routine would then save the data for the glyphs. The routine may also be used so that the resolution in two other directions is set to a high value which will then effectively create uniform line plots.

The algorithm goes through all the elements and checks whether the element could include some of the uniform grid nodes. If so then these are tested for. The algorithm should scale linearly with mesh size. Optionally one may check for duplicates to eliminate the same nodes being repeatedly saved. Currently no particular order is guaranteed for the nodes.

The routine works currently only in VTU, VTI and ascii table formats, but other format may be possible in the future.

### 53.2 Keywords

Solver `solver id`

Equation `String "SaveGridData"`

The name of the equation. This is actually not much needed since there are no degrees of freedom associated with this solver.

Procedure `File "SaveGridData" "SaveGridData"`

The name of the file and subroutine.

Filename Prefix `File`

Specifies the name of the output file. A appropriate suffix is added to the given name.

Output Format `String`

This keyword the output format of choice. The choices are `vtu`, `vti` and `table`.

Vtu Format `Logical`

Vti Format `Logical`



**Table Format** Logical

The user may also use the above logical keywords to set which of the formats is saved. This has more flexibility in that there may be several formats that are saved simultaneously where the **Output Format** keyword may only be used to activate one solution type.

**Fileindex Offset** Integer

By default the files are numbered starting from one. However, for some restarted simulations the offset may be defined to be something else. The default is zero.

**Check for Duplicates** Logical

This flag activates the checking of duplicates. This is usually advisable but may for peculiar geometries require a large logical table and is therefore not defaulted to be true.

**Grid dx** Real

The grid size in direction  $x$  (i.e. **Coordinate 1**). Similarly we have **Grid dy** and **Grid dz**, if applicable. If the density in directions  $y$  or  $z$  is not defined, it is assumed to be the same as for  $x$ .

**Grid nx** Integer

The number of cells in direction  $x$ . This is only required if the previous keyword is not given. Then the resolution is defined by the size of the bounding box. Similarly we have **Grid ny** and **Grid nz**,

**Grid Origin i** Real

The mesh is by default located so that there is a node at  $(0, 0, 0)$ . If the origin should not coincide here then this keyword may be used to transform the origin ( $i = 1, 2, 3$ ).

**Min Coordinate i** Real

The bounding box may be limited by this keyword ( $i = 1, 2, 3$ ). If not given the minimum values of the mesh are used.

**Max Coordinate i** Real

The bounding box may be limited by this keyword ( $i = 1, 2, 3$ ). If not given the maximum values of the mesh are used.

**Scalar Field i** String

The scalar fields to be saved, for example **Pressure**. Note that the fields must be numbered continuously starting from one. If no fields are given then an attempt is made to save all the relevant fields.

**Vector Field i** String

The vector fields to be saved, for example **Velocity**

**Mask Name** String [MyMask]

The user may provide a mask that is used to determine the active elements. If the elements are lower dimensional then it is assumed that the last coordinate is eliminated from the gridded data. So if the full mesh is 3D and a mask is given for a boundary only then the data is saved on  $x$ - $y$  plane.

**Boundary Condition** bc id**MyMask** Logical True

The mask define in the solver section may be set True in the BC or Body Force section.

### 53.3 Example

The following example saves the results in the VTK XML image data format at the end of simulation. A mesh parameter  $h = 0.1$  is used for every direction and the lower left corner is taken as the base of the finite uniform mesh.

```
Solver 5
```

```
  Exec Solver = after all
```

```
Equation = SaveGrid
Procedure = "SaveGridData" "SaveGridData"

Grid dx = Real 0.1
Grid Origin At Corner = Logical True
Check For Duplicates = Logical True
Binary Output = Logical True
Single Precision = Logical True
Filename Prefix = String glyphs
Vti Format = Logical True
End
```

# Model 54

## Isosurface extraction for reduced output

**Module name:** Isosurface

**Module subroutines:** IsosurfaceSolver

**Module authors:** Juha Ruokolainen, Peter Råback

**Document authors:** Peter Råback

**Document created:** 15.2.2011

**Document edited:** 15.2.2011

### 54.1 Introduction

This subroutine extract isosurfaces from 3D meshes or isolines from 2D meshes. The intended use of the routine is in heavy simulations where the standard output could result to an I/O bottle-neck. If the desired isosurface is known in advance then this can be used to reduce the amount of data to be written. The solver does not itself write the data. It is expected that there is some external strategy for writing the data. It could, for example, be the `ResultOutputSolver` for VTK XML output.

### 54.2 Keywords

`Solver` `solver id`

`Equation` `String` `"Isosurface"`

The name of the equation. This is actually not much needed since there are no degrees of freedom associated with this solver.

`Procedure` `File` `"Isosurface"` `"IsosurfaceSolver"`

The name of the file and subroutine.

`Output Directory` `File`

Specifies the name of the output directory. Output file name will be determined in the normal manner.

`Isosurface Variable` `String`

The name of the variable for which the isosurface is determined. This must be a scalar variable.

`Isosurface Values` `Real`

The isosurface values used to extract the surfaces. If this is a vector then a number of isosurfaces will be defined.

`Isosurface Values` `Real`

The isosurface value used to extract the surfaces. For constant values this is the scalar variant of the previous keyword. However, this may also have a functional dependency on some scalar variable, such as time, for example.

```
Variable i String
```

Name of the variable to be outputted on the isosurface (or isoline),  $i=1, 2, 3, \dots$

### 54.3 Example

This solver extracts the 1D isolines from 2D temperature field and stores them to a mesh called `isosurf` at the three given isosurface values. If the original mesh would be 3D then the resulting isosurface mesh would be 2D. Note that if saving of results is desired then this solver should be performed prior to the saving of results.

```
Solver 8
  Exec Solver = after all
  Equation = "isoline"
  Procedure = "Isosurface" "IsosurfaceSolver"
  IsoSurface Variable = Temperature
  IsoSurface Values(3) = 0.25 0.5 0.75

  Output Directory = isoline

  Variable 1 = Temperature
  Variable 2 = stream
  Variable 3 = vorticity
End
```

## Model 55

# Reload Existing Simulation Results

**Module name:** ReloadData

**Module subroutines:** ReloadSolution

**Module authors:** Antti Pursula

**Document authors:** Antti Pursula

**Document created:** August 9th 2007

### 55.1 Introduction

This subroutine is intended for repeated loading of existing results during simulation. An example of a typical application is to use previously computed fluid flow as a convection field for the transfer of a passive scalar variable. The module is implemented as a dummy solver which is defined in the command file just as the 'normal' solvers.

This module offers extended features compared to the `Restart File` option in the `Simulation` section. The module reads a new solution step from the solution file on each timestep, whereas the restart file option reads only the initial state for a simulation.

The module reads in all the available variables from the solution file. The solution file should be in the mesh directory. If the simulation takes more than a single steady state iteration per time step it is advisable to use `Exec Solver = Before Timestep` for this module.

### 55.2 Keywords

`Solver` `solver id`

`Equation` `String` "Reload Data"

The name of the equation. This is actually not much needed since there are no degrees of freedom associated with this solver.

`Procedure` `File` "ReloadData" "ReloadSolution"

The name of the file and subroutine.

`Reload Solution File` `String` "flow-data.dat"

The name of the old solution data file, eg. flow-data.dat

`Reload Starting Position` `Integer`

The index of the timestep where to start reading. If the keyword is not given the reading is started from the first step in the file, or from the beginning of the reload range, if specified.

`Reload Range Minimum` `Integer`

`Reload Range Maximum` `Integer`

The beginning and the end of the reading range. The timesteps on the range are read in cyclically if the current simulation has more timesteps than what there are on the range.

Reload Reading Intervals Integer

Defines the interval for reading in old results, defaults to 1. An integer  $i$  larger than 1 defines that results are read in only on every  $i$ th timestep. However, consecutive steps are read in regardless of the value of  $i$ .

Continuous Reading Logical True

When set to `True` the reload solution file is kept open also between the timesteps. However, when reading is not started at the first solution step, or when the old solution is read in cyclically, it is advisable to switch this feature off. Defining `False` will slow down reading especially from large ASCII files.

# Model 56

## Runtime Control of the Input Data

**Module name:** ReloadInput

**Module subroutines:** ReloadInput

**Module authors:** Juha Ruokolainen

**Document authors:** Peter Råback

**Document created:** February 5th 2003

### 56.1 Introduction

This subroutine is intended for cases where the user wants to have run-time control over the solution. The control is obtained by reloading the command file (.sif-file) during the solution. This is done with an additional solver that is called similarly as any other solver during the solution process.

The most likely usage of the solver is in cases where the user realizes during the solution process that some parameters were not optimally chosen. For example, the convergence criteria may have been set too tight for optimal performance. Then the user may set looser criteria by editing the command file during the computation. Once the new value is read the solver will apply the new criteria thereafter.

### 56.2 Limitations

The solver should not be used for things that need allocation. For example, the number of solvers or boundaries may not change. Also the computational mesh must remain the same.

### 56.3 Keywords

Solver    solver id

Equation    String "Reload"

The name of the equation. This is actually not much needed since there are no degrees of freedom associated with this solver.

Procedure    File "ReloadInput" "ReloadInput"

The name of the file and subroutine.

## Model 57

# Reading NetCDF data into FE mesh

**Module name:** GridDataReader

**Module subroutines:** GridDataReader

**Module authors:** Peter Råback, Vili Forsell

**Module status:** Alpha

**Document authors:** Peter Råback

**Document created:** 7.12.2011

**Document edited:** 22.12.2011

### 57.1 Introduction

This solver provides the possibility to read in data in uniform grid into Elmer mesh. The supported format includes currently only NetCDF.

Currently following features are supported:

- Bilinear (in 2D) or trilinear (in 3D) interpolation
- Possibility to have a multiplier and offset in the target field
- Linear interpolation in time
- Multiple possibilities to define the time instant or index

The module requires the netcdf library. Because of this, it has been isolated from the main build system. The source code for XdmfWriter can be found from the source tree in `misc/netcdf2` and it should be compiled by the user as follows:

```
elmerf90 -I$HDF5/include -L$HDF5/lib -o GridDataReader.so GridDataReader.f90 -lnetcdff -lnetcdf
```

The environment variable `$NETCDF` defines the installation directory for the NetCDF-library.

### 57.2 Theory

In structured data the finding of grid cell where a certain node belongs to is trivial. Assume that the grid is defined by coordinates  $a_i$  and  $b_i$  so that any coordinate  $x_i$  is presented by

$$x_i = a_i n_i + b_i \quad (57.1)$$

where  $n_i \in [1, N_i]$  and  $i \in [1, \text{DIM}]$ . Now the finite element node with coordinate  $\hat{x}_i$  may be interpolated using the cell with indexes  $m_i = \text{ceiling}((\hat{x}_i - b_i)/a_i)$  and  $m_i + 1$  using linear interpolation with weighing factor  $q_i = m_i - (\hat{x}_i - b_i)/a_i$ .

$$\hat{f} = q_i f_{m_i} + (1 - q_i) f_{m_i+1}. \quad (57.2)$$



This generalizes into multiple dimensions using recursion. For example, in 2D the bilinear interpolation reads

$$\hat{f}(x_1, x_2) = q_1 q_2 f_{11} + (1 - q_1) q_2 f_{21} + q_1 (1 - q_2) f_{12} + (1 - q_1) (1 - q_2) f_{22}. \quad (57.3)$$

The current implementation provides bilinear and trilinear interpolation in space, and linear interpolation in time.

The algorithmic complexity of the reader and interpolation routine is linear in time. However, the current implementation assumes that each partition do their own interpolation routines which means that there may be a large number of files open in parallel runs introducing potential bottle-necks.

### 57.3 Keywords

Solver solver id

Equation String [GridDataReader]

The name of the equation.

Procedure File "GridDataReader" "GridDataReader"

The name of the procedure.

Filename File

Full aame of the target file (with the suffix).

X Name String

Name of the 1st coordinate.

Y Name String

Name of the 2nd coordinate.

Z Name String

Name of the 3rd coordinate.

Time Name String

Name of the time coordinate.

X Epsilon A

ccuracy of the 1st coordinate assumed in interpolation. Default is machine epsilon.

Y Epsilon A

ccuracy of the 2nd coordinate assumed in interpolation. Default is X Epsilon.

Z Epsilon A

ccuracy of the 3rd coordinate assumed in interpolation. Default is X Epsilon.

Time Epsilon A

ccuracy of time assumed in interpolation. Default is machine epsilon.

Time Point Real

Value of time used in this calling. If this is not found the Elmer time will be used.

Time Offset Real

Offset used to add to the Elmer time.

Time Multiplier Real

Coefficient used to multiply the Elmer time.

Is Time Index Real

If this flag is turned on then the time instance given with the previous keywords will be understood as being the index of time in the NetCDF file (starting from 1) rather than actual time.

Is Time Counter Logical

If this flag is turned on, the time index of the NetCDF file will be increased by one each time the routine is called. This makes it ideal for looping over each timestep.

Coordinate Transformation String

Optional coordinate transformation that is applied on the Elmer coordinate prior to finding its value on the grid.

Enable Scaling Logical

If this flag is turned on the bounding box of Elmer mesh will be made compatible with that of the grid.

Variable i String

Variable of the NetCDF file. There is no upper limit to the number of variables.

Target Variable i String

Optional name for the target variable. If this is not given then the Variable i value will be used for the FE variable as well. If the target variable is not present it will be created the first time it is needed. Also, if different variables that follow each other have the same target variable these will be summed up. With the multiplication and offset features this makes it possible to derive new variables as a linear combination of any fields given in the NetCDF file.

Interpolation Offset Real

A constant that will be added to the value of the interpolated field. If there are many fields with different offsets use Interpolation Offset i instead.

Interpolation Multiplier Real

A constant that will be used to multiply the interpolated field. The default value is one. If there are many fields with different offsets use Interpolation Multiplier i instead.

# Model 58

## Filtering Time-Series Data

**Module name:** FilterTimeSeries

**Module subroutines:** FilterTimeSeries

**Module authors:** Peter Råback

**Document authors:** Peter Råback

**Document created:** 13.2.2008

**Document updated:** 13.2.2008

### 58.1 Introduction

The module includes auxiliary utilities for filtering time-series data. Supported filters include various averaging possibilities and Fourier series, for example. The solver does not introduce any new physics. However, it may be useful in analyzing time-dependent data to be used in conjunction with time-harmonic models, or in studying phenomena with different timescales (turbulence).

### 58.2 Theory

#### Mean of a function

The solver is built so that an estimate for the filtered data may be obtained at all times i.e. the normalizing is done after each timestep. As an example let's consider taking a simple mean over a period of time. The starting point is the time averaged mean,

$$\langle f \rangle_T = \frac{1}{T} \int_0^T f(t) dt. \quad (58.1)$$

Its discrete counterpart assuming piecewise constant integration is

$$\langle f \rangle_n = \frac{1}{T_n} \sum_i^n f_i dt_i, \quad (58.2)$$

where  $T_n = \sum dt_i$ . Now this may be presented inductively as

$$\langle f \rangle_n = \frac{T_{n-1} \langle f \rangle_{n-1} + f_n dt_n}{T_{n-1} + dt_n} \quad (58.3)$$

$$T_n = T_{n-1} + dt_n. \quad (58.4)$$

## Weighted mean

It's also possible to take a weighted mean with a user defined function  $g(t)$  depending on time only. Then similarly,

$$\langle fg \rangle_n = \frac{T_{n-1} \langle fg \rangle_{n-1} + f_n g_n dt_n}{T_{n-1} + dt_n}. \quad (58.5)$$

## Fourier series

Using the weighted mean as starting point its possible to present the solution in terms of sine and cosine series. In order to obtain normalized Fourier series components the function  $g$  is internally replaced by sine and cosine functions defined as  $2 \sin(2\pi kwt)$  and  $2 \cos(2\pi kwt)$ , where  $k$  is the degree of the term, and  $w$  is the user defined frequency. After each full cycle the inner product then includes the Fourier coefficients and the transient solution may hence be approximated by

$$f \approx \sum_{k=1}^{m_s} s_k \sin(2\pi kwt) + \sum_{k=1}^{m_c} c_k \cos(2\pi kwt), \quad (58.6)$$

where  $m_s$  and  $m_c$  are maximum degrees defined by the user.

## Continuous average

Sometimes it may be useful that the new solution is given a relatively higher weight than the old solution. This is achieved by relaxing the weight (elapsed time) related to the old solution by

$$T_{n-1} := T_{n-1} \exp(-dt_n/\tau), \quad (58.7)$$

where  $\tau$  is the time scale when decay to fraction  $1/e$  is desired. If the decay time is short compared to the overall simulation time this provides a continuous mean that represents only the recent results. The fraction of the last timestep in solution will always be  $dt/\tau$ .

## Computing variances

It is not possible to compute the variance directly with one sweep as computing the variance from the functional values requires the knowledge of the mean. However, computing the mean of the square of the solution enables that the variance is computed a posteriori since the following holds for any field variable,

$$\sigma^2 = \langle (f - \langle f \rangle)^2 \rangle = \langle f^2 \rangle - \langle f \rangle^2. \quad (58.8)$$

## 58.3 Keywords

Solver `solver id`

Procedure `File "FilterTimeSeries" "FilterTimeSeries"`

Variable `i String`

The names of the variables to be filtered. There can in principle be up to 99 variables. Note that the keywords with the same `i` form a set which define one filtering. If the `Variable` is not redefined the previously defined variable with a lower `i` is used.

Operator `i String`

Normally the variable is treated as its plain value. There are however different options for using the field value in a modified manner. These include `length` (L2 norm), `abs`, and `square`.

Start Time `i Real`

The start time for performing the integration. Note that for Fourier series this is used to reset the zero time i.e.  $t := t - t_0$ .

Stop Time *i* Real

The stop time for performing the integration.

Start Timestep *i* Integer

Sometimes its unpractical to compute the start time. For example, the start of the simulation could include a starting strategy with a number of timesteps. Then the number of timesteps that starts the averaging may be given by this keyword. Note that this keyword also activates timestep-insensitive averaging.

Stop Timestep *i* Integer

The timestep number that ends the averaging.

Start Cycle *i* Real

Alternative way to give the start time for sine and cosine series. The start time is the inverse of this.

Stop Cycle *i* Real

Alternative way to give the stop time for sine and cosine series.

Start Real Time Real

Start after given real wall-clock-time, rather than physical simulation time.

Start Real Time Fraction Real

Relative way of given start time when the Real Time Max keyword in Simulation block is given.

Reset Interval *i* Real

The time interval at which the computation of a mean is reinitialized.

Decay Time *i* Real

The decay time  $\tau$  in computing continuous means.

Decay Timestep *i* Real

The number of timestep needed to perform averaging. If the timestep given is  $N$  then the decay of the previous timesteps is done with  $\exp(-1/N)$ . Note that this keyword also activates timestep-insensitive averaging.

Time Filter *i* Real

The function  $g(t)$  that may be used in computing the mean.

Sine Series *i* Integer

The number of terms in the sine series. Note that its possible to make a Fourier series only if the target variable is a scalar. Its also possible to have only one sine or cosine series at a time.

Cosine Series *i* Integer

The number of terms in the cosine series.

Frequency *i* Integer

If using cosine or sine series the frequency must be given.

# Model 59

## Projection to plane

**Module name:** ProjectToPlane

**Module subroutines:** ProjectToPlane, ParallelProjectToPlane

**Module authors:** Juha Ruokolainen and Peter Råback

**Document authors:** Peter Råback

**Document edited:** 18.6.2010

### 59.1 Introduction

Sometimes the solution of a complex problem calls for a dimensional reduction of some field variables. A possible scenario for using the solver is in extracting some useful information from DNS or LES type of flow simulations. This module offers the subroutines needed in such a cases.

There are currently a serial and a parallel version of the subroutine which are both located in this module. The reason for the fork is that the parallel version uses techniques that are not optimal in the serial problem. Therefore the user should herself choose the correct version. Optimally these two approaches should of course be fused.

### 59.2 Theory

In principle the dimensional reduction is performed taking on average of a 2D (or axisymmetric) nodal point  $\vec{r}_{2D}$  when it travels through the 3D mesh.

$$f_{2D}(\vec{r}_{2D}) = \frac{1}{S} \int f(\vec{r}_{3D}) dS. \quad (59.1)$$

In practice this is implemented with the following steps

1. Create a list of faces for the 3D mesh
2. Loop through each nodal point in the 2D mesh
  - (a) Loop through each face in the 3D mesh
    - i. Check if there is an intersection between the integration line and face
    - ii. If intersection found memorize the point of intersection
  - (b) Order the intersection points in the integration direction
  - (c) Take an weighted average over the ordered list,  $(f_i, r_i)$

The algorithm is accurate for linear elements. For higher order elements it is suboptimal in accuracy. Also in axisymmetric mapping the elements should be small enough so that the curvature of the line segment is not significant. Near the origin there may be few hits and then the averaging is done by just taking a small number of values around the center axis.

### 59.3 Keywords

Solver `solver id`

Equation `ProjectToPlane`

The arbitrary name of the equation.

Procedure `File "ProjectToPlane" "ProjectToPlane"`  
or

Procedure `File "ProjectToPlane" "ParallelProjectToPlane"`

Convert From Equation Name `String`

The solver needs a 3D mesh which is associated determined by the association to the solver given by this keyword.

Convert From Variable `String`

The variable to be converted.

Volume Permutation `Integer`

The algorithm is build so that integration direction is the second coordinate ( $y$ ). This is typically valid for axisymmetric cases, for example. If the integration should be performed with respect to some other direction the volume coordinates may be permuted by this keyword.

Plane Permutation `Integer`

Permutation of the plane coordinates.

Rotate Plane `Logical`

Should rotation be performed.

Max Relative Radius `Real`

For the axisymmetric projection the outer radius may be difficult since the 3D mesh typically may have faces that do not quite extend to the surface. This is a result of finite sized linear elements. To ease this problem the user may give the maximum relative radius that is used when trying to find the point of intersection.

Minimum Hits At Radius `Integer`

The number of hits needed for a accepted integration. The default is one.

Integration Points At Radius `Integer`

If no minimum number of hits is achieved then a few points around the axis is used to determine the value. The default is two.

# Model 60

## Structured projection to plane

**Module name:** StructureProjectToPlane  
**Module subroutines:** StructureProjectToPlane  
**Module authors:** Peter Råback  
**Module status:** Beta  
**Document authors:** Peter Råback  
**Document created:** 4.4.2011  
**Document edited:** 4.4.2011

### 60.1 Introduction

For structured meshes some operations may be done much more effectively than for generic meshes. One such operation is mapping some values within the mesh to the reduced dimensional surface of the mesh. In practice this could mean, for example, mapping the values at the bottom of mesh to the top of mesh to determine the difference in value. Or to map some isosurface values to the top of the mesh.

### 60.2 Theory

The algorithm used for the mapping has two sweeps. Assume that we would like to perform mapping in direction  $\vec{e}_z$ . The at the first sweep over all elements we would deduce pairwise information over nodes on which nodes are in `up` and `down` directions from each other. Then using this directional information recursively one can easily deduce which nodes are the `top` and `bottom` representatives of any node in the mesh. With this information mapping information to top or bottom nodes becomes extremely cheap.

### 60.3 Keywords

`Solver` `solver id`

`Equation` `String` [`StructuredProjectToPlane`]  
The name of the equation.

`Procedure` `File` "`StructuredProjectToPlane`" "`StructuredProjectToPlane`"  
The name of the procedure.

`Velocity Variable Name` `String`  
Name of the variable used to define the streamlines.

`Active Coordinate` `Integer`  
The direction in which the stuctured mapping is performed i.e. 1, 2 or 3.



`Project To Bottom` `Logical`

Instead of projecting to the top of the active direction, project to the bottom.

`Projection Mask Variable` `String`

By default the projection is performed assuming that the whole mesh is active. This keyword may be used to choose the variable that chooses the active set of nodes user in the projections.

`Dot Product Tolerance` `Real`

When determining the structure of the mesh in the active direction this tolerance is used to decide that an element edge is aligned with the direction of the action.

`Variable i` `String`

When applying the different projections, the variable to apply the projection to. The resultant field will obtain as the name the name of the operator followed by the initial variable name.

`Operator i` `String`

The operator to apply to the variable. The choices are `sum`, `int`, `min`, `max`, `bottom`, `layer` and `isosurface`. `sum` gives the sum over all nodes on the structured line, `min` the minimum value, and `max` the maximum value, correspondingly. `layer` gives the value at a fixed number of layers from the top. Operator `isosurface` maps the values on the given isosurface to the top.

`Layer Index i` `Integer`

The number of structured layers from the top layer. The index `i` refers to the corresponding variable and operator.

`Isosurface Variable i` `String`

The variable used to determine the isosurface position.

`Isosurface Value i` `Real`

The value for the isosurface position.

# Model 61

## Structured mesh mapper

**Module name:** StructureMeshMapper  
**Module subroutines:** StructureMeshMapper  
**Module authors:** Peter Råback  
**Module status:** Beta  
**Document authors:** Peter Råback  
**Document created:** 4.4.2011  
**Document edited:** 4.4.2011

### 61.1 Introduction

For structured meshes some operations may be done much more effectively than for generic meshes. One such operation is mapping of the mesh between given top and bottom surfaces. For example, the mesh for the computational glaciology could be deduced from a uniform initial mesh when its top and bottom surface would be known in some given fields.

### 61.2 Theory

The algorithm used for the mapping has two sweeps. Assume that we would like to perform mapping in direction  $\vec{e}_z$ . The at the first sweep over all elements we would deduce pairwise information over nodes on which nodes are in `up` and `down` directions from each other. Then using this directional information recursively one can easily deduce which nodes are the `top` and `bottom` representatives of any node in the mesh. With this information any node between the top and bottom surface may be mapped as the linear combination of the top and bottom displacements. In the end top is mapped to the given top position and bottom to the given bottom, correspondingly.

### 61.3 Keywords

`Solver` `solver id`

`Equation` `String [StructuredMeshMapper]`  
The name of the equation.

`Procedure` `File "StructuredMeshMapper" "StructuredMeshMapper"`  
The name of the procedure.

`Active Coordinate` `Integer`  
The direction in which the stuctured mapping is performed i.e. 1, 2 or 3.

Displacement Mode `Logical`

The values may be either used either directly as absolute coordinate values, or as displacement adding them to the original coordinate values. With this keyword the latter may be chosen.

Dot Product Tolerance `Real`

When determining the structure of the mesh in the active direction this tolerance is used to decide that an element edge is aligned with the direction of the action.

Top Surface Level `Real`

If the value is constant, then this keyword may be used to give the top surface position.

Top Surface Variable Name `String`

The top surface may be given by some auxiliary variable computed by some other solver, for example.

Bottom Surface Level `Real`

If the value is constant, then this keyword may be used to give the bottom surface position.

Bottom Surface Variable Name `String`

The bottom surface may be given by some auxiliary variable computed by some other solver, for example.

Boundary Condition `bc id`

Top Surface `Real`

The top surface position may also be given with a boundary condition.

Bottom Surface `Real`

The bottom surface position may also be given with a boundary condition.

## Model 62

# Internal cost function optimization

**Module name:** FindOptimum  
**Module subroutines:** FindOptimum  
**Module authors:** Peter Råback  
**Module status:** Alpha  
**Document authors:** Peter Råback  
**Document created:** 18.3.2009  
**Document edited:** 18.3.2009

### 62.1 Introduction

This solver is an auxiliary solver for optimization problems. As input it requires a cost function computed with the previous parameter values, and as output it gives the new parameters for which the cost function will be computed for. Typically the cost function depends on the solution of one or several differential equations. Based on this solution a measure of goodness for the solution is computed.

The routine is still in its development phase but is provided as a skeleton that may be further developed.

### 62.2 Theory

The optimization routines must be slightly modified from their standard form since the solver is not in a ruling position in respect to the simulation. Therefore it's difficult to plug in existing optimization packages to this solver.

Currently the solver includes some very basic optimization routines. Of these the Simplex algorithm (Nelder-Mead) and the differential GA (Genetic algorithm) are the only ones that may be used for a number of design variables.

For just one design variable there is the choice of simple scanning, bisection search and the secant method. Secant method finds roots making it better suited for problems where the target is known i.e. design problems.

### 62.3 Keywords

Simulation

Simulation Type String "scanning"

The natural mode used for optimization problems is scanning. If the problem is really time-dependent the current internal solution is not probably the optimal solution.

Timestep Intervals Integer

The maximum number of optimization rounds is in the case of scanning defined by the timestep intervals.

Solver solver id

Equation String FindOptimum

A describing name for the solver.

Variable String OptPar

The name of the variable may be freely chosen as far as it is used consistently also elsewhere.

Variable DOFs Integer n

Degrees of freedom for the pressure. Here n should be equal to the number of parameters.

Variable Global Logical True

Indicates the variable is a global one i.e. not a field variable. For global variables the number of unknowns is the same as number of dofs.

Procedure File "FindOptimum" "FindOptimum"

The name of the module and procedure. These are fixed.

Optimization Method String

Choices are currently random, scanning, genetic, bisect, secant and simplex.

Cost Function Name String

The name of the cost function that is a real stored in the Simulation list structure.

Optimal Restart Logical

Use the previous best set of parameters for the 1st round of cost function computation.

Optimal Finish Logical

Use the best set of parameters for the last round of cost function computation. This may be useful as the last step is often also saved.

Best File File [best.dat]

The file where the best set of parameters is always saved.

Guess File File [best.dat]

The file where the best set of parameters is read in case of optimal restart.

Fixed Parameter i Logical

Is the i:th parameter fixed. Applies for some optimization routines.

Min Parameter i Real

Minimum value for i:th parameter. Applies for some optimization routines.

Max Parameter i Real

Maximum value for i:th parameter. Applies for some optimization routines.

Initial Parameter i Real

Initial value for i:th parameter if not given by the Optimal restart

Internal history Logical

Save the internal values within the solver.

History File File

The name of the file where the history data is saved.

Cost Function Target Real

If the given cost function is  $C$  use  $C - C_0$  instead.

Cost Function Absolute Logical

If the given cost function is  $C$  use  $|C|$  instead.

Cost Function Maximize Logical

If the given cost function is  $C$  use  $-C$  instead.

The following keywords apply to the GA algorithm

```
Population Size Integer [5n]
Population Coefficient Real [0.7]
Population Crossover Real [0.1]
```

The following keywords apply to the simplex algorithm

```
Simplex Relative Length Scale Real [0.01]
    The relative length scale that determines the size of the 1st simplex.
Simplex Restart Interval Integer
    The restart interval after which the simulation is restarted if the convergence is poor.
Simplex Restart Convergence Ratio Real
    A critical value which is used to define a poor convergence ratio.
```

The following keywords apply to the secant method

```
Step Size Real
    The step size of the first computations.
Max Step Size M
    Maximum allowed step size.
Relaxation Factor R
    Relaxation used in the secant method.
```

This shows just a couple of examples how the design parameters could be used in the simulation. The variables may be referred in a similar manner as other global variables such as `time` or `timestep` size.

```
Body Force 1
    Heat Source = Equals OptPar 1
End

Boundary Condition 1
    Heat Flux = Equals OptPar 2
End
```

# Index

- accumulation, 128
- Active Coordinate, 120, 240, 242
- Active EigenModes, 220
- Additional Info, 169
- Advection Diffusion Equation Varname, 32
- AdvectionDiffusionSolver, 29
- AdvectionReactionSolver, 35
- ALE, 11, 22
- ALE Formulation, 130
- Angular Frequency, 60, 68, 87, 88, 93, 126
- Angular Velocity, 25
- Aphi, 95
- Applied Magnetic Field i, 26, 99
- Apply Dirichlet, 130
- Apply Limiter, 14, 115
- Arbitrary Lagrangian-Eulerian, 11, 22
- Artery Outlet Solver, 191
- Artery Poisson Ratio, 191
- Artery Radius, 191
- Artery Wall Thickness, 191
- Artery Wall Youngs Modulus, 191
- ArteryOutlet, 189
- Artificial Compressibility, 174, 175
- artificial compressibility, 171
- ArtificialCompressibility, 171
- Ascii Output, 220
- Average Within Materials, 91, 197
- Az, 90
  
- B-H Curve, 90
- Base File Name, 222
- BDF Order, 13, 31, 36
- Before Linsolve, 169
- BEM, 122, 125
- Best File, 245
- Binary Output, 220
- bisection, 244
- Block Preconditioning, 70, 181
- Body, 137, 142, 168
- Body Force, 25, 43, 48, 57, 61, 74, 77, 81, 86, 87, 90, 91, 95, 98, 111, 116, 121, 124, 131, 159, 181, 186
- Body Force i, 74, 181
- Body Force Parameters, 218
- Body Forces, 15, 32, 37
- Body ID, 131
  
- Body Id, 124, 127, 138
- Boltzmann Constant, 110
- Boltzmann distribution, 108
- Bottom Surface, 243
- Bottom Surface Level, 243
- Bottom Surface Variable Name, 243
- Boundary Condition, 17, 27, 33, 38, 44, 49, 51, 57, 61, 69, 77, 81, 86, 87, 90, 95, 99, 103, 106, 111, 116, 121, 124, 127, 131, 134, 137, 142, 150, 153, 155, 162, 174, 181, 184, 186, 191, 204, 206, 208, 212, 215, 225, 243
- boundary element method, 122, 125
- boundary integral, 211
- Boundary Layer Thickness, 28
- Boussinesq, 25
- Boussinesq approximation, 21
- Box Contact Directions, 148
- Box Particle Collision, 148
- Box Particle Contact, 148
- Box Particle Periodic, 148
- Box Periodic Directions, 148
- BSolver, 89
- Bubbles, 14, 32, 60, 120
- Bubbles in Global System, 68
- Bulk Modulus, 116
- Bulk Viscosity, 69, 74
  
- Calculate Acoustic Impedance, 70
- Calculate Capacitance Matrix, 77
- Calculate Current Density, 88
- Calculate Electric Energy, 77, 110
- Calculate Electric Field, 77, 88, 110
- Calculate Electric Flux, 77, 110
- Calculate Electric Force, 208
- Calculate Fluidic Force, 206
- Calculate Flux, 116, 197
- Calculate Flux Abs, 197
- Calculate Flux Dim, 117
- Calculate Flux Magnitude, 197
- Calculate Force, 116
- Calculate Force Dim, 117
- Calculate Grad, 197
- Calculate Grad Abs, 197
- Calculate Grad Magnitude, 197
- Calculate Heating, 116

- Calculate Joule Heating, 81, 88, 94
- Calculate Magnetic Field Strength, 88
- Calculate Magnetic Flux, 94
- Calculate Magnetic Flux Abs, 94
- Calculate Matrix Suction, 120
- Calculate Maxwell Stress, 88
- Calculate Pangle, 42
- Calculate Principal, 42
- Calculate Stesses, 48
- Calculate Strains, 42, 48
- Calculate Stresses, 42
- Calculate Surface Charge, 77
- Calculate Viscous Force, 206
- Calculate Volume Current, 81
- Capacitance Bodies, 77
- Capacitance Body, 78
- capacitance matrix, 76
- Capacitance Matrix Filename, 77
- Charge Density, 77, 111
- Charge Number, 111
- ChargeDensitySolver, 163
- Check for Duplicates, 225
- coating, 132
- Coefficient i, 212
- Compressibility Model, 33, 116, 174
- CompressibilityScale, 171
- CompressibleNS, 72
- Compressiblity Model, 17, 26
- Concentration Units, 32
- Conserve Volume, 161
- Conserve Volume Relaxation, 161
- Constant Bulk Matrix, 200, 201
- Constant Bulk System, 42
- Constant Weights, 77, 81, 110
- Constants, 12, 23, 77, 85, 89, 93, 102, 106, 110, 207
- continuity equation, 172
- Continuous Reading, 230
- Convection, 15, 25, 32, 37, 131
- Convection Velocity i, 17, 33, 38, 61, 137
- Convective, 180
- Convert From Equation Name, 239
- Convert From Variable, 239
- Coordinate Condition Variable Name, 148
- Coordinate Initialization Method, 146, 152
- Coordinate System, 12, 31, 36, 68, 73, 194
- Coordinate Transformation, 233
- Cosine Series i, 237
- Cost Function Absolute, 245
- Cost Function Index, 211
- Cost Function Maximize, 245
- Cost Function Name, 245
- Cost Function Target, 245
- Critical Shear Rate, 26
- Cumulative Displacements, 183
- Current Control, 81
- Current Density, 81, 90, 95
- current density, 79
- Current Density BC, 81
- Current Density i, 86
- Current Density Im, 91
- Current Density Im i, 87
- Current Phase Angle, 95
- Current Source, 81
- curvature, 159
- Curvature Coefficient, 161
- Curvature Diffusion, 161
- Damping, 45, 57
- Darcy's law, 22
- DataToFieldSolver, 154
- Decay Time i, 237
- Decay Timestep i, 237
- Deflection i, 57
- Delete Wall Particles, 147
- delta function, 158
- Density, 16, 25, 33, 43, 48, 57, 61, 103, 137, 142, 180, 191
- Desired Heating Power, 94
- DFTSolver, 163
- dielectric layer, 106
- Diffusion Coefficient, 155
- Dirichlet boundary condition, 12, 20, 30, 36, 93, 97
- Discontinuous Galerkin, 35, 37, 91, 197
- Displace Mesh, 42
- Displaced Shape, 175
- Displacement i, 43, 44, 191
- Displacement Mode, 243
- Displacement Variable Eigenmode, 60
- Displacement Variable Frequency, 61
- Displacement Variable Name, 60, 175
- Div Discretization, 24
- DivergenceSolver, 201
- domain integral, 211
- Dot Product Tolerance, 241, 243
- drawing, 132
- Dx Format, 219
- effective parameters, 55
- Eigen Analysis, 42, 56, 169, 220
- Eigen System Damped, 169
- Eigen System Use Identity, 169
- Eigen System Values, 42, 57, 169
- ElasticSolve, 46
- ElasticSolver, 46
- Electric Conductivity, 81, 85, 90, 95, 99
- Electric Conductivity Im, 87
- Electric Conductivity im, 91
- Electric Current Density, 86
- Electric Current Density Im, 88



- Electric Field , 102
- Electric Flux, 78
- Electric Flux BC, 111
- Electric Infinity BC, 78
- Electric Transfer Coefficient, 87
- Electric Transfer Coefficient Im, 88
- ElectricForce, 207
- Electrode Potential, 78
- Electrokinetics, 100
- electrokinetics, 23
- Element, 68, 73, 85
- Emissivity, 17, 18
- Enable Scaling, 234
- Energy Accommodation Coefficient, 70
- energy conservation, 10
- energy method, 55
- Enforce Positive Magnitude, 197
- Enthalpy, 16
- EO Mobility, 103
- Equation, 13, 15, 23, 24, 31, 32, 37, 42, 43, 48, 51, 56, 60, 61, 68, 73, 77, 80, 85, 87, 88, 90, 91, 94, 97, 98, 102, 110, 115, 116, 120, 121, 123, 126, 130, 133, 136, 141, 146, 152, 155, 159–161, 168, 174, 175, 180, 186, 191, 194, 197, 200, 201, 203, 206, 208, 219, 222, 224, 227, 229, 231, 233, 239, 240, 242, 245
- Equilibrium Density, 69, 73
- Equilibrium Temperature, 69, 73
- Eulerian, 157
- Exact Coordinates, 211
- Exec Solver, 208
- Export Lagrange Multiplier, 188
- Exported Variable 1, 37, 97, 123, 126, 130, 160
- Exported Variable 1 DOFs, 123, 126, 130
- Extend Elastic Layers, 169
- Extend Elastic Region, 169
- External Concentration, 33
- External Pressure, 27
- External Temperature, 17
- Extract Interval, 160
- FieldName, 156
- FieldName Continue, 156
- File Append, 160, 211, 215
- Fileindex Offset, 225
- Filename, 160, 210, 215, 233
- Filename Particle Numbering, 150
- Filename Prefix, 149, 224
- Filename Timestep Numbering, 150
- FilmPressure, 116
- FilmPressure Lower Limit, 116
- filtering, 235
- FilterTimeSeries, 235
- FindOptimum, 244
- Fix Displacements, 42
- Fix Input Current Density, 85
- Fixed Boundary, 186
- Fixed Parameter i, 245
- Flow Admittance, 116
- Flow BodyForce i, 25
- Flow Force BC, 27
- Flow Interface, 61
- Flow Model, 23
- FlowSolve, 19
- FlowSolver, 19
- Fluid Coupling With Boundary, 191
- fluid-structure interaction, 171
- FluidicForce, 205
- Flux, 124
- Flux 1, 127
- Flux 2, 127
- Flux Coefficient, 197, 204, 215
- Flux Variable, 204, 215
- FluxSolver, 196
- Force BC, 174
- Force i, 44
- Force i Im, 44
- Fourier series, 235
- Free Moving, 27
- Free Surface, 27
- free surface, 157
- Free Surface Bottom, 134
- Free Surface Number, 134
- Free Surface Reduced, 134
- FreeSurfaceReduced, 132
- FreeSurfaceSolver, 128
- Frequency, 42, 60, 68, 93
- Frequency i, 237
- Friction Heat, 16
- Gap Height, 107, 115
- Gebhardt factors, 12, 14
- Gebhardt Factors Fixed After Iterations, 15
- Gebhardt Factors Fixed Tolerance, 15
- Gebhardt Factors Solver Full, 15
- Gebhardt Factors Solver Iterative, 15
- Genetic algorithm, 244
- Geometric Stiffness, 42
- GiD, 219
- Gid Format, 219
- Gmsh, 219
- Gmsh Format, 219
- Gradp Discretization, 24
- Grashof convection, 20
- Gravity, 23
- Green's function, 126
- Grid dx, 225
- Grid nx, 225
- Grid Origin i, 225

- GridDataReader, 232
- Guess File, 245
- Harmonic Analysis, 42
- Harmonic Simulation, 94
- Heat Capacity, 17, 33
- Heat Conductivity, 17, 69, 74, 137
- Heat Equation, 15, 98
- Heat Expansion Coefficient, 26, 44
- Heat Flux, 17
- Heat Flux BC, 17
- Heat Source, 16
- Heat Transfer Coefficient, 17
- HeatSolve, 10
- HeatSolver, 10
- Heaviside function, 158
- Helmholtz, 61
- HelmholtzBEM, 126
- HelmholtzBEMSolver, 125
- HelmholtzSolver, 59
- History File, 245
- Hole Correction, 57
- Hole Depth, 107
- Hole Fraction, 57, 107
- Hole Size, 57, 107
- Hole Type, 107
- Hydraulic Conductivity, 120
- ILU Order for Schur Complement, 71
- ILU Order for Velocities, 71
- Im Body Force i, 69
- Im Heat Source, 69
- Im Reference Wall Velocity i, 70
- Im Specific Acoustic Impedance, 69
- Im Specific Thermal Impedance, 70
- Im Surface Traction i, 69
- Im Temperature, 69
- Im Velocity i, 69
- Impedance Target Boundary, 70
- Implicit Gebhardt Factor Fraction, 14
- induction equation, 96
- Inertial Bodyforce j, 49
- Infinity BC, 90
- inflow boundaries, 36
- Initial Condition, 16, 25, 33, 37, 43, 61, 95, 98, 131, 190
- Initial Coordinate, 146
- Initial Coordinate Search, 147
- Initial Parameter i, 245
- Initial Sphere Center, 146
- Initial Sphere Radius, 146
- Initial Velocity, 147
- Initial Velocity Amplitude, 147
- Initial Velocity Time, 147
- Initial Volume, 161
- Initialization Condition Variable, 146
- Initialization Mask Variable, 146, 152
- integral equation, 122, 125
- Integral Heat Source, 16
- Integration Points At Radius, 239
- Internal history, 245
- Internal Mesh Movement, 142
- Interpolation Multiplier, 234
- Interpolation Offset, 234
- Ion Density, 111
- Is Time Counter, 233
- Is Time Index, 233
- Isosurface, 227
- Isosurface Value i, 215, 241
- Isosurface Values, 227
- Isosurface Variable, 227
- Isosurface Variable i, 215, 241
- Joule Heat, 16, 81, 95, 98
- Joule heating, 11, 80
- KE C1, 26
- KE C2, 26
- KE Cmu, 26
- KE SigmaE, 26
- KE SigmaK, 26
- Kinetic Energy, 25
- Kinetic Energy Dissipation, 25
- Knudsen number, 113
- Lagrange Multiplier Name, 188
- Lagrange multipliers, 187
- Lagrangian, 157
- Latent Heat, 137, 142
- Latent heat, 135
- Layer Charge Density, 78
- Layer Index i, 241
- Layer Permittivity, 107
- Layer Relative Permittivity, 78
- Layer Thickness, 78, 107
- level-set method, 157
- LevelSet, 157
- LevelSet Bandwidth, 161
- Levelset bandwidth, 162
- LevelSet Convect, 160
- LevelSet Courant Number, 162
- Levelset Curvature BC, 162
- LevelSet Flux, 159
- LevelSet Timestep Directional, 162
- LevelSet Variable, 160, 161
- LevelSet Velocity 1, 160
- LevelSet Velocity 2, 160
- LevelSet Velocity i, 159
- LevelSetCurvature, 157
- LevelSetDistance, 157

- LevelSetIntegrate, 157
- LevelSetSolver, 157
- LevelSetTimestep, 157
- Limit Solution, 37
- Linear Constraints, 187
- Linear System Convergence Tolerance, 71, 181, 198, 200, 202
- Linear System Iterative Method, 85, 198, 200, 202
- Linear System Max Iterations, 71, 181, 198, 200, 202
- Linear System Preconditioning, 85, 198, 200, 202
- Linear System Refactorize, 85
- Linear System Solver, 198, 200, 202
- Liquid, 137, 142
- Lorentz Force, 25, 98
- Lorentz force, 20
- Lumped Acceleration After Iterations, 141
- Lumped Acceleration Limit, 141
- Lumped Acceleration Mode, 141
  
- Magnetic Bodyforce i, 98
- Magnetic Field i, 98, 99
- Magnetic Field Strength i, 86
- Magnetic Field Strength Im i, 88
- Magnetic Flux Density {n}, 87
- Magnetic Flux Density i, 87
- Magnetic Flux Density Im {n}, 88
- Magnetic Flux Density Im i, 88
- Magnetic Induction, 25, 98
- Magnetic Permeability, 99
- Magnetic Transfer Coefficient, 86
- Magnetic Transfer Coefficient Im, 88
- MagneticSolve, 96
- MagneticSolver, 96
- Magnetization i, 86, 90
- Magnetization i Im, 91
- Magnetization Im i, 87
- MagnetoDynamics2DHarmonic, 89
- MagnetoDynamics, 82
- MagnetoDynamics2D, 89
- MagnetoDynamicsCalcFields, 82
- magnetohydrodynamics, 96
- magnetostatics, 92
- Mask Diffusion, 155
- Mask Name, 225
- Mask Name i, 211
- Mask Variable, 155
- mass conservation, 132
- Mass Transfer Coefficient, 33
- Material, 16, 25, 33, 38, 43, 48, 51, 57, 61, 68, 73, 77, 81, 85, 87, 90, 91, 95, 99, 103, 110, 115, 120, 137, 142, 159, 160, 162, 174, 175, 180, 184, 191, 206, 208
- Material Coordinates Unit Vector 1(3), 44
- Material Coordinates Unit Vector 2(3), 44
- Material Coordinates Unit Vector 3(3), 44
  
- Matrix Topology Fixed, 14
- Max Characteristic Speed, 147
- Max Coordinate i, 225
- Max Cumulative Time, 147
- Max Initial Coordinate i, 146
- Max Inner GCR Iterations, 70
- Max Mask Value, 155
- Max Outer Iterations, 70
- Max Parameter i, 245
- Max Relative Radius, 239
- Max Step Size, 246
- Max Timestep Intervals, 147, 152
- Max Timestep Size, 147
- Maximum Displacement, 130
- Maxwell stress tensor, 207
- Maxwell's equations, 75
- Mean Free Path, 116
- Melting Point, 142
- Melting point, 135
- Mesh Coefficient i, 184
- Mesh Deform i, 184
- Mesh Displace i, 186
- Mesh Force i, 184
- Mesh Normal Force, 184
- Mesh Origin, 186
- Mesh Penalty Factor, 184
- Mesh Relax, 186
- Mesh Rotate, 186
- Mesh Scale, 186
- Mesh Translate, 186
- Mesh Update, 51
- Mesh Update i, 51, 131
- Mesh Velocity 1, 44
- Mesh Velocity 2, 44
- Mesh Velocity 3, 44
- MeshSolver, 50
- MHD Velocity i, 99
- Min Coordinate i, 225
- Min Initial Coordinate i, 146
- Min Mask Value, 155
- Min Parameter i, 245
- Min Timestep Size, 147
- Minimum Gebhardt Factor, 14
- Minimum Hits At Radius, 239
- Minimum View Factor, 14
- Model Lumping, 42
- Model Lumping Boundary, 45
- Model Lumping Filename, 42
- Moment About(dim), 206
- Momentum Accommodation Coefficient, 70
- Mortar BC, 90
- Moving Boundary, 186
- Moving Mesh, 184, 211
- Moving Wall, 150

- MyMask, 225
- Narrow Band, 160
- natural convection, 20
- Navier-Stokes, 25, 98
- Navier-Stokes equation, 19
- Nelder-Mead, 244
- Neo-Hookean Material, 48
- Neumann boundary condition, 12
- Newmark Beta, 13, 31, 36
- Newton iteration, 21
- Newtonian, 19
- Nodal Penalty Factor, 184
- Nominal Potential Difference, 78
- Nominal Shear Rate, 26
- non-Newtonian, 19
- Nonlinear Iteration Method, 181
- Nonlinear System Convergence Tolerance, 13, 24, 31, 37, 90, 94, 97, 110, 115, 120, 130, 134, 137, 181
- Nonlinear System Max Iterations, 13, 24, 32, 37, 90, 94, 98, 110, 115, 120, 137, 181
- Nonlinear System Newton After Iterations, 13, 24, 110, 141, 181
- Nonlinear System Newton After Tolerance, 13, 24, 110, 141, 181
- Nonlinear System Relaxation Factor, 13, 24, 32, 94, 98, 120, 133, 141, 174, 181
- NonphysicalMeshSolver, 183
- Norm Variable Index, 153
- Normal Force, 44, 49
- Normal Force Im, 45
- Normal Tangential Velocity, 103
- Normal Target Body, 34, 124, 127
- Normal Variable, 137
- Normal Velocity, 115
- Normal-Tangential Displacement, 44
- Normal-Tangential Velocity, 27
- Normalize by Given Weight, 155
- Normalize by Nodal Weight, 155
- Number Of EigenModes, 220
- Number of Particles, 146
- Ohm's law, 79
- Open DX, 219
- Open Side, 116
- Operator i, 152, 211, 236, 241
- Optimal Finish, 245
- Optimal Restart, 245
- Optimization, 244
- Optimization Method, 245
- Optimize Matrix Structure, 169
- ortotropic, 55
- Outflow boundary, 181
- OutletCompute, 189
- Output Directory, 210, 215, 227
- Output File Name, 219
- Output Format, 149, 219, 224
- Output Interval, 149
- Output Node Types, 169
- Parallel Append, 211
- Parallel Operator i, 212
- ParallelProjectToPlane, 238
- Parameter i, 217, 218
- Particle Accumulation, 150
- Particle Accumulation Max Shear, 150
- Particle Accumulation Max Speed, 150
- Particle Accurate At Face, 152
- Particle Bounciness, 149
- Particle Cell Fraction, 146
- Particle Cell Radius, 146
- Particle Charge, 149
- Particle Damping, 148
- Particle Decay Distance, 149
- Particle Decay Time, 149
- Particle Drag Coefficient, 149
- Particle Element Fraction, 146
- Particle Gravity, 148
- Particle Info, 150, 153
- Particle Lift, 148
- Particle Mass, 148
- Particle Node Fraction, 146, 152
- Particle Particle Collision, 148
- Particle Particle Contact, 148
- Particle Radius, 148
- Particle Release Fraction, 147
- Particle Release Number, 147
- Particle Save Fraction, 150
- Particle Spring, 149
- Particle To Field, 149
- Particle To Field Mode, 149
- Particle Trace, 150
- Particle Wall, 153
- ParticleAdvect, 151
- ParticleDynamics, 143
- Passive Steps, 142
- perforated plate, 55
- Perform Mapping, 133
- Perfusion Density, 16
- Perfusion Heat Capacity, 16
- Perfusion Rate, 16
- Perfusion Reference Temperature, 16
- Permeability, 85, 90
- Permeability of Vacuum, 85, 90, 93
- Permittivity Of Vacuum, 77, 102, 106, 110, 207
- Phase Change, 142
- Phase Change Model, 15
- Phase Change Side, 138
- Phase Change Variable, 136, 141

- Phase Velocity i, 142
- PhaseChangeSolve, 135, 139
- Physical Units, 33, 34
- Picard iteration, 21
- Plane Permutation, 239
- Plane Stress, 43
- Poisson, 163
- Poisson Boltzmann Alpha, 111
- Poisson Boltzmann Beta, 111
- Poisson Ratio, 43, 48, 51, 184
- Poisson ratio, 57
- Poisson-Boltzmann equation, 23, 108
- PoissonBEM, 123
- PoissonBEMSolver, 122
- PoissonBoltzmannSolve, 108
- Polyline Coordinates(n,DIM), 212, 215
- Population Coefficient, 246
- Population Crossover, 246
- Population Size, 246
- Porosity Model, 120
- Porous Media, 27
- porous media, 22
- Porous Resistance, 27
- Potential, 78, 81, 86, 111, 124
- Potential {e}, 86
- Potential {e} j, 86
- Potential Coefficient, 25
- Potential Difference, 77, 107
- Potential Field, 25
- Potential Force, 25
- Potential Variable, 88
- Potential Variable Name, 148
- Power Control, 81
- Pre Strain, 44
- Pre Stress, 44
- Pressure, 25, 27, 57
- Pressure 1, 127
- Pressure 2, 127
- Pressure i, 27, 61, 191
- Pressure Source i, 61
- Procedure, 31, 37, 42, 48, 51, 56, 57, 60, 68, 73, 77, 81, 85, 87, 88, 90, 91, 94, 97, 107, 110, 115, 116, 120, 121, 123, 126, 130, 133, 136, 141, 146, 152, 155, 159–161, 174, 175, 180, 183, 186, 191, 194, 197, 200, 201, 203, 206, 208, 210, 215, 217, 219, 222, 224, 227, 229, 231, 233, 236, 239, 240, 242, 245
- Project To Bottom, 241
- Projection Mask Variable, 241
- projection matrix, 167
- ProjectToPlane, 238
- Pull Rate Control, 137
- Radiation, 17
- Radiation Boundary, 18
- Radiation Boundary Open, 18
- Radiation External Temperature, 18
- Radiation Target Body, 18
- Ratio of Convergence Tolerances, 70
- Rayleigh Damping, 43
- Rayleigh Damping Alpha, 44
- Rayleigh Damping Beta, 44
- Re Body Force i, 69
- Re Heat Source, 69
- Re Reference Wall Velocity i, 70
- Re Specific Acoustic Impedance, 69
- Re Specific Thermal Impedance, 70
- Re Surface Traction i, 69
- Re Temperature, 69
- Re Velocity i, 69
- reaction rate, 35
- reduced order model, 167
- Reference Pressure, 17, 26, 33, 116, 175
- Reference Temperature, 25, 44, 110
- Reference Wall Temperature, 70
- reinitialization, 157
- Reinitialize Field, 149
- Reinitialize Interval, 160
- Reinitialize Particles, 147
- Reinitialize Passive, 160
- Relative Permeability, 85, 90, 95
- Relative Permittivity, 77, 103, 107, 110, 208
- Relaxation Factor, 130, 246
- Reload Range Maximum, 229
- Reload Range Minimum, 229
- Reload Reading Intervals, 230
- Reload Solution File, 229
- Reload Starting Position, 229
- ReloadData, 229
- ReloadInput, 231
- ReloadSolution, 229
- Reluctivity, 85, 90
- Reluctivity Im, 87
- Reset Interval i, 237
- Residual Reduction Ratio, 70
- Residual Water Content, 120
- Restart File, 229
- Result Variable i, 152
- ResultOutputSolve, 219
- Reverse Ordering, 169
- Reynolds equation, 112
- Reynolds Pressure Variable Name, 116
- ReynoldsHeatingSolver, 112
- ReynoldsSolver, 112
- Richards equation, 118
- Richards Flux, 121
- Richards Source, 121
- RichardsFlux, 118

- RichardsSolver, 118
- Rigid Body, 168
- RigidBodyReduction, 167
- RigidMeshMapper, 185
- Rotate Elasticity Tensor, 44
- Rotate Plane, 239
- run-time control, 231
- Runge Kutta, 152
- Saturated Hydraulic Conductivity, 120
- Saturated Initial Guess, 120
- Saturated Water Content, 120
- Save Axis, 215
- Save Coordinates(n,DIM), 211
- Save Eigenfrequencies, 211
- Save Eigenvalues, 211
- Save Flux, 215
- Save Isocurves, 215
- Save Line, 215
- Save Mask, 215
- Save Points(n), 211
- Save Scalars, 212
- SaveBoundaryValues, 217
- SaveData, 209, 214, 217
- SaveGridData, 224
- SaveLine, 214
- SaveMaterials, 217
- SaveScalars, 209
- Scalar Field i, 150, 220, 223, 225
- Scalar Potential, 204
- ScalarPotentialSolver, 203
- Scalars Prefix, 210
- Schur Complement Convergence Tolerance, 71
- secant method, 244
- Set Constant Weight Sum, 155
- Shear Stress Output, 206
- Shear Stress Output File, 206
- Show Norm Index, 211
- Show Variables, 220
- signed distance, 157
- Simplex Relative Length Scale, 246
- Simplex Restart Convergence Ratio, 246
- Simplex Restart Interval, 246
- Simulation, 12, 31, 36, 60, 68, 73, 93, 126, 162, 194, 244
- Simulation Timestep Sizes, 148, 152
- Simulation Type, 12, 31, 36, 68, 244
- Sine Series i, 237
- Single Precision, 220, 222
- Slip Boundary, 70
- Smart Heater Control, 16
- Smart Heater Control After Tolerance, 14
- SmitcSolver, 53
- Solid, 137, 142
- Solver, 13, 23, 31, 36, 42, 48, 51, 56, 60, 68, 70, 73, 77, 80, 85, 87, 88, 90, 91, 93, 97, 110, 115, 116, 120, 121, 123, 126, 130, 133, 136, 141, 146, 152, 155, 159–161, 168, 174, 175, 180, 183, 186, 188, 191, 194, 197, 199, 201, 203, 206, 208, 210, 214, 217, 219, 222, 224, 227, 229, 231, 233, 236, 239, 240, 242, 245
- SolveWithLinearRestriction, 187
- Sound Damping, 61
- Sound Speed, 61
- Source, 124
- Specific Heat, 69, 73
- Specific Heat Ratio, 17, 26, 33, 69, 74, 116
- Spring, 45, 57
- Stability Analysis, 42
- Stabilization Method, 130
- Stabilize, 14, 24, 32, 159
- Start Cycle i, 237
- Start Real Time, 237
- Start Real Time Fraction, 237
- Start Time i, 236
- Start Timestep i, 237
- StatCurrentSolve, 79
- StatCurrentSolver, 79
- StatElecBoundary, 104
- StatElecBoundaryCharge, 104
- StatElecBoundaryEnergy, 104
- StatElecBoundaryForce, 104
- StatElecBoundarySpring, 104
- StatElecForce, 207
- StatElecSolve, 75
- StatElecSolver, 75
- Static Magnetic Field, 94
- Statistical Info, 150
- StatMagSolver, 92
- Steady State Convergence Tolerance, 13, 24, 32, 37, 98, 174
- Stefan Boltzmann, 12
- Stefan-Boltzmann constant, 12
- Step Size, 246
- Stokes Stream Function, 195
- Stokes stream function, 193
- Stop Cycle i, 237
- Stop Time i, 237
- Stop Timestep i, 237
- Strain Load, 43
- Stream Function First Node, 195
- Stream Function Penalty, 195
- Stream Function Scaling, 195
- Stream Function Shifting, 195
- Stream Function Velocity Variable, 195
- Streamline, 193
- StreamSolver, 193



- Stress Analysis, 43
- Stress Bodyforce 1, 43
- Stress Bodyforce 1 im, 43
- Stress Bodyforce 2, 43
- Stress Bodyforce 2 im, 43
- Stress Bodyforce 3, 43
- Stress Bodyforce 3 im, 43
- Stress Bodyforce j, 49
- Stress Load, 43, 45
- StressSolve, 39
- StressSolver, 39
- Structure Coupling With Boundary, 191
- Structure Interface, 62
- StructureMeshMapper, 242
- StructureProjectToPlane, 240
- substantial surface, 128
- Sum Forces, 206
- Surface Charge, 111
- Surface Charge Density, 78
- surface tension, 159
- Surface Tension Coefficient, 27
- Surface Tension Expansion Coefficient, 27
- Surface Velocity i, 115
  
- Table Format, 149, 225
- Tangent Velocity i, 115
- Target Field, 184
- Target Nodes, 204
- Target Variable, 91, 121, 155, 197, 200, 201
- Target Variable i, 210, 234
- Temperature, 16, 17
- Temperature Lower Limit, 16
- Temperature Upper Limit, 16
- Tension, 57
- Tensor Field i, 220
- Thickness, 57
- Time Epsilon, 233
- Time Filter i, 237
- Time Multiplier, 233
- Time Name, 233
- Time Offset, 233
- Time Order, 152
- Time Point, 233
- Timestep Courant Number, 147
- Timestep Distance, 147
- Timestep Intervals, 245
- Timestep Size, 147, 152
- Timestepping Method, 13, 31, 36
- Top Surface, 243
- Top Surface Level, 243
- Top Surface Variable Name, 243
- Transient Speedup, 137
- Transmissivity, 17, 18
- Triple Point Fixed, 137, 141
  
- Unit Charge, 110
- Update Gebhardt Factors, 14
- Update Transient System, 43
- Update View Factors, 14
- Use Density, 60
- Use Linear Elements, 130
- Use Nodal Loads, 137
- Use Original Coordinates, 186
- Use Tree Gauge, 85
- User Defined Velocity, 98
- Utilize Previous Solution, 68
  
- van Genuchten Alpha, 120
- van Genuchten M, 120
- van Genuchten N, 120
- Variable, 31, 37, 51, 56, 60, 68, 73, 77, 81, 85, 87, 90, 91, 94, 97, 110, 115, 120, 123, 126, 130, 133, 136, 141, 155, 159, 161, 168, 175, 180, 183, 186, 191, 194, 202, 203, 218, 245
- Variable DOFs, 56, 60, 73, 77, 81, 97, 110, 115, 120, 123, 126, 130, 133, 136, 141, 169, 180, 191, 194, 218, 245
- Variable Dofs, 68, 94
- Variable Global, 245
- Variable i, 152, 210, 215, 228, 234, 236, 241
- Variable\_name, 37, 38
- Variable\_name Gamma, 38
- Variable\_name Lower Limit, 38
- Variable\_name Source, 37
- Variable\_name Upper Limit, 38
- variational inequality, 129
- Varname, 33, 131
- Varname Accumulation, 131
- Varname Accumulation Flux i, 131
- Varname Diffusion Source, 32
- Varname Diffusivity, 33
- Varname Flux, 33
- Varname Maximum Solubility, 33
- Varname Solubility Change Boundary, 34
- Varname Soret Diffusivity, 33
- Vector Field i, 150, 220, 223, 225
- Velocity 1, 103
- Velocity 2, 103
- Velocity 3, 103
- Velocity Assembly, 71
- Velocity Condition Variable Name, 148
- Velocity Convergence Tolerance, 71
- Velocity Field Name, 206
- Velocity Gradient Correction, 148
- Velocity i, 25, 27
- Velocity Implicitness, 130
- Velocity Initialization Method, 147, 152
- Velocity Relaxation Factor, 137
- Velocity Smoothing Factor, 137

Velocity Variable Name, 60, 148, 152, 240  
view factors, 14  
View Factors Fixed After Iterations, 15  
View Factors Fixed Tolerance, 15  
View Factors Geometry Tolerance, 15  
Viewfactor Combine Elements, 15  
Viewfactor Divide, 15  
Viscosity, 16, 25, 69, 74, 103, 115, 162, 180, 206  
Viscosity Difference, 26, 162  
Viscosity Exponent, 26  
Viscosity Model, 26, 115, 162  
Viscosity Temp Exp, 27  
Viscosity Temp Offset, 27  
Viscosity Temp Ref, 27  
Viscosity Transition, 26  
Volume Permutation, 239  
VorticitySolver, 199  
VTI, 224  
Vti Format, 224  
VTK, 219  
Vtk Format, 219  
VTU, 219, 224  
Vtu Format, 149, 219, 224  
  
Wall Law, 28  
Wall Particle Bounciness, 149  
Wall Particle Collision, 150  
Wall Particle Radius, 149  
Wall Particle Spring, 149  
Water Content, 120  
Wave Flux 1,2, 61  
Wave Impedance 1,2, 61  
WaveFunctionSolver, 163  
Weight Variable, 155  
WhitneyAVHarmonicSolver, 82  
WhitneyAVSolver, 82  
Wnodal, 191  
  
X Epsilon, 233  
X Name, 233  
XdmfWriter, 222  
  
Y Epsilon, 233  
Y Name, 233  
Yasuda Exponent, 26  
Youngs Modulus, 43, 48, 51, 184  
Youngs modulus, 57  
  
Z Epsilon, 233  
Z Name, 233  
Zeta Potential, 103